

DDJ-1000SRT

List of MIDI message



[MIDI channel assignment]
MIDI channel is defined as shown below.
0x9*: Note
0xB*: Control Change (CC)

Channel Category	MIDI Channel	Channel No. (Hex)
DECK 1 (other than PERFORMANCE PAD)	1	n=0
DECK 2 (other than PERFORMANCE PAD)	2	n=1
DECK 3 (other than PERFORMANCE PAD)	3	n=2
DECK 4 (other than PERFORMANCE PAD)	4	n=3
EFFECT (No Use)	5	m=4
BROWSER	6	m=5
DECK 1 PERFORMANCE PAD	7	m=6
DECK 2 PERFORMANCE PAD	8	p=7
DECK 3 PERFORMANCE PAD	9	p=8
DECK 4 PERFORMANCE PAD	10	p=9
	11	p=A

1 As a reference for MIDI assign, MIDI message sent from buttons and knobs of this controller are listed in decimal numbers and English scale. Please utilize this reference depending on the notation of your MIDI compatible software.

NOTE is a term used for MIDI to express that a key of a keyboard or a piano is pressed or your finger is released from it. CC is an abbreviation of "Control Change". Control Change is a kind of MIDI message used to communicate many kinds of control information such as sound quality and volume level. English scale uses alphabetical letters of C, D, E, F, G, A and B as well as # to indicate halfnote.

Group	Fig.	User Interface				MIDI assign reference 1				MIDI-IN (to computer)			MIDI-OUT (from computer)			Details (Data 2)
		UI name	+SHIFT	Trigger	Condition (mode)	MIDI Channel (Dec)	NOTE / CC	MIDI Data (Data 1)		Status (Hex)	Data 1 (Hex)	Data 2 (Hex)	Status (Hex)	Data 1 (Hex)	Data 2 (Hex)	
BROWSER	B1-L	Rotary Selector	+SHIFT	rotate		7	CC	64	-	B6	40	hh				Difference count value from previous operated Turn clockwise : 1 ~ 30 (0x01 ~ 0x1E) Turn counterclockwise : 127 ~ 98 (0x7F ~ 0x62) OFF=0x00, ON=0x7F
				press	DECK 1	7	NOTE	70	A#4	96	46	hh				
		+SHIFT	press	DECK 3	7	NOTE	93	A6	96	5D	hh					
				DECK 3	7	NOTE	72	C5	96	48	hh					
	B1-R	Rotary Selector	+SHIFT	rotate		7	CC	64	-	B6	40	hh				
				press	DECK 2	7	NOTE	71	B4	96	47	hh				
		+SHIFT	press	DECK 4	7	NOTE	109	C#8	96	6D	hh					
				DECK 4	7	NOTE	73	C#5	96	49	hh					
	B2	BACK	+SHIFT	press		7	NOTE	111	D#8	96	6F	hh				
						7	NOTE	101	F7	96	65	hh				
	B3	LOAD PREPARE	+SHIFT	press		7	NOTE	102	F#7	96	66	hh				
						7	NOTE	122	D9	96	7A	hh				
					7	NOTE	104	G#7	96	68	hh					

Group	Fig.	User Interface				MIDI assign reference 1				MIDI-IN (to computer)			MIDI-OUT (from computer)			Details (Data 2)		
		UI name	+SHIFT	Trigger	Condition (mode)	MIDI Channel (Dec)	NOTE / CC	MIDI Data (Data 1)		Status (Hex)	Data 1 (Hex)	Data 2 (Hex)	Status (Hex)	Data 1 (Hex)	Data 2 (Hex)			
								(Dec)	(English scale)									
MIXER	M16-1	LINE/PHONO SW		select		3/4	NOTE	70	A#4	9n	46	hh				Select PHONO : OFF=0x00 Select LINE : ON=0x7F		
	M17-1	INPUT SELECT		select	Switch to USB A	1/2/3/4	NOTE	85	C#6	9n	55	7F				OFF=0x00, ON=0x7F		
	M17-2		Switch to LINE or PHONO/LINE		1/2/3/4	NOTE	86	D6	9n	56	7F						OFF=0x00, ON=0x7F	
	M17-3				1/2/3/4	NOTE	85/87	C#6/D#6	9n	55/57	00						OFF=0x00, ON=0x7F	
	M17-4		Switch to USB B		1/2/3/4	NOTE	87	D#6	9n	57	7F						OFF=0x00, ON=0x7F	
	M18	MIC OFF/ON /TALKOVER			select	Switch to OFF	7	NOTE	107/108	B7/C8	96	6A	7F				OFF=0x00, ON=0x7F	
						Switch to ON	7	NOTE	107	B7	96	6B	7F				OFF=0x00, ON=0x7F	
							7	NOTE	106/108	A#7/C8	96	6A/6C	00					OFF=0x00, ON=0x7F
							7	NOTE	108	C8	96	6C	7F					OFF=0x00, ON=0x7F
						Switch to TALK OVER	7	NOTE	106/107	A#7/B7	96	6A/6B	00					OFF=0x00, ON=0x7F
M19	SAMPLER CUE		press		7	NOTE	105	A7	96	69	hh				OFF=0x00, ON=0x7F			
		+SHIFT			7	NOTE	110	D8	96	6E	hh				OFF=0x00, ON=0x7F			
M20	SAMPLER VOL		rotate		7	CC	3	35	B6	03	23	MSB	LSB		Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x7F, LSB : 0x7F) When turned fully counterclockwise : Min When turned fully clockwise : Max			
EFFECT	F1-1 F1-2 F1-3 F1-4	COLOR FX Parameter (CH1)		rotate		7	CC	23	55	B6	17	37	MSB	LSB		Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x7F, LSB : 0x7F) When turned fully counterclockwise : Min When turned fully clockwise : Max		
		COLOR FX Parameter (CH2)		rotate		7	CC	24	56	B6	18	38	MSB	LSB		Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x7F, LSB : 0x7F) When turned fully counterclockwise : Min When turned fully clockwise : Max		
		COLOR FX Parameter (CH3)		rotate		7	CC	25	57	B6	19	39	MSB	LSB		Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x7F, LSB : 0x7F) When turned fully counterclockwise : Min When turned fully clockwise : Max		
		COLOR FX Parameter (CH4)		rotate		7	CC	26	58	B6	1A	3A	MSB	LSB		Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x7F, LSB : 0x7F) When turned fully counterclockwise : Min When turned fully clockwise : Max		
	F2	COLOR FX (D-ECHO)		press		7	NOTE	0	C-1	96	00	hh				OFF=0x00, ON=0x7F		
			+SHIFT			7	NOTE	8	C#-1	96	08	hh				OFF=0x00, ON=0x7F		
	F3	COLOR FX (PITCH)		press		7	NOTE	1	C#-1	96	01	hh				OFF=0x00, ON=0x7F		
			+SHIFT			7	NOTE	9	A-1	96	09	hh				OFF=0x00, ON=0x7F		
	F4	COLOR FX (NOISE)		press		7	NOTE	2	D-1	96	02	hh				OFF=0x00, ON=0x7F		
			+SHIFT			7	NOTE	10	A#-1	96	0A	hh				OFF=0x00, ON=0x7F		
	F5	COLOR FX (FILTER)		press		7	NOTE	3	D#-1	96	03	hh				OFF=0x00, ON=0x7F		
			+SHIFT			7	NOTE	11	B-1	96	0B	hh				OFF=0x00, ON=0x7F		
	F6	BEAT ◀		press		5	NOTE	74	D5	94	4A	hh				OFF=0x00, ON=0x7F		
			+SHIFT			5	NOTE	102	F#7	94	66	hh				OFF=0x00, ON=0x7F		
	F7	BEAT ▶		press		5	NOTE	75	D#5	94	4B	hh				OFF=0x00, ON=0x7F		
			+SHIFT			5	NOTE	107	B7	94	6B	hh				OFF=0x00, ON=0x7F		
	F8	FX SELECT (LOW CUT ECHO) FX SELECT (ECHO) FX SELECT (MT DELAY) FX SELECT (SPIRAL) FX SELECT (REVERB) FX SELECT (TRANS) FX SELECT (ENIGMA JET) FX SELECT (FLANGER) FX SELECT (PHASER) FX SELECT (PITCH) FX SELECT (SLIP ROLL) FX SELECT (ROLL) FX SELECT (MOBIUS SAW) FX SELECT (MOBIUS TRI)			rotate		5	NOTE	32	G#1	94	20	hh				OFF=0x00, ON=0x7F	
							5	NOTE	33	A1	94	21	hh					OFF=0x00, ON=0x7F
							5	NOTE	34	A#1	94	22	hh					OFF=0x00, ON=0x7F
							5	NOTE	35	B1	94	23	hh					OFF=0x00, ON=0x7F
						5	NOTE	36	C2	94	24	hh					OFF=0x00, ON=0x7F	
						5	NOTE	37	C#2	94	25	hh					OFF=0x00, ON=0x7F	
						5	NOTE	38	D2	94	26	hh					OFF=0x00, ON=0x7F	
						5	NOTE	39	D#2	94	27	hh					OFF=0x00, ON=0x7F	
						5	NOTE	40	E2	94	28	hh					OFF=0x00, ON=0x7F	
						5	NOTE	41	F2	94	29	hh					OFF=0x00, ON=0x7F	
						5	NOTE	42	F#2	94	2A	hh					OFF=0x00, ON=0x7F	
						5	NOTE	43	G2	94	2B	hh					OFF=0x00, ON=0x7F	
						5	NOTE	44	G#2	94	2C	hh					OFF=0x00, ON=0x7F	
F9	CH SELECT (CH1) CH SELECT (CH2) CH SELECT (CH3) CH SELECT (CH4) CH SELECT (MASTER) CH SELECT (MIC) CH SELECT (SAMPLER)			rotate		5	NOTE	16	E0	94	10	hh				OFF=0x00, ON=0x7F		
						5	NOTE	17	F0	94	11	hh					OFF=0x00, ON=0x7F	
						5	NOTE	18	F#0	94	12	hh					OFF=0x00, ON=0x7F	
						5	NOTE	19	G0	94	13	hh					OFF=0x00, ON=0x7F	
						5	NOTE	20	G#0	94	14	hh					OFF=0x00, ON=0x7F	
						5	NOTE	21	A0	94	15	hh					OFF=0x00, ON=0x7F	
						5	NOTE	22	A#0	94	16	hh					OFF=0x00, ON=0x7F	
F10	LEVEL/DEPTH		rotate		5	CC	2	34	B4	02	22	MSB	LSB		Min (MSB : 0x00, LSB : 0x00) ~ Max (MSB : 0x7F, LSB : 0x7F) When turned fully counterclockwise : Min When turned fully clockwise : Max			
F11	BEAT FX ON/OFF		press		5	NOTE	71	B4	94	47	hh				OFF=0x00, ON=0x7F			
		+SHIFT			5	NOTE	67	G4	94	43	hh				OFF=0x00, ON=0x7F			

Group	Fig.	User Interface				MIDI assign reference ¹				MIDI-IN (to computer)			MIDI-OUT (from computer)			Details (Data 2)
		UI name	+SHIFT	Trigger	Condition (mode)	MIDI Channel (Dec)	NOTE / CC	MIDI Data (Data 1)		Status (Hex)	Data 1 (Hex)	Data 2 (Hex)	Status (Hex)	Data 1 (Hex)	Data 2 (Hex)	
								(Dec)	(English scale)							
PAD	P1	PAD 1		+SHIFT	press	HOT CUE mode	8/9/10/11	NOTE	0	C-1	9p	00	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	8	G#-1	9p	08	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
				+SHIFT	press	ROLL mode	8/9/10/11	NOTE	16	E0	9p	10	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	24	C1	9p	18	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
				+SHIFT	press	SLICER mode	8/9/10/11	NOTE	32	G#1	9p	20	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	40	E2	9p	28	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
				+SHIFT	press	SAMPLER mode	8/9/10/11	NOTE	48	C3	9p	30	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	56	G#3	9p	38	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
				+SHIFT	press	CUE LOOP mode	8/9/10/11	NOTE	64	E4	9p	40	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	72	C5	9p	48	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
				+SHIFT	press	SAVED LOOP mode	8/9/10/11	NOTE	80	G#5	9p	50	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	88	E6	9p	58	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
		+SHIFT	press	SLICER LOOP mode	8/9/10/11	NOTE	96	C7	9p	60	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)			
					8/9/10/11	NOTE	104	G#7	9p	68	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)			
		+SHIFT	press	PITCH PLAY mode	8/9/10/11	NOTE	112	E8	9p	70	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)			
					8/9/10/11	NOTE	120	C9	9p	78	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)			
	P2	PAD 2		+SHIFT	press	HOT CUE mode	8/9/10/11	NOTE	1	C#-1	9p	01	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	9	A-1	9p	09	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
				+SHIFT	press	ROLL mode	8/9/10/11	NOTE	17	F0	9p	11	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	25	C#1	9p	19	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
				+SHIFT	press	SLICER mode	8/9/10/11	NOTE	33	A1	9p	21	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	41	F2	9p	29	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
				+SHIFT	press	SAMPLER mode	8/9/10/11	NOTE	49	C#3	9p	31	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	57	A3	9p	39	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
				+SHIFT	press	CUE LOOP mode	8/9/10/11	NOTE	65	F4	9p	41	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	73	C#5	9p	49	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
				+SHIFT	press	SAVED LOOP mode	8/9/10/11	NOTE	81	A5	9p	51	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
							8/9/10/11	NOTE	89	F6	9p	59	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)	
		+SHIFT	press	SLICER LOOP mode	8/9/10/11	NOTE	97	C#7	9p	61	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)			
					8/9/10/11	NOTE	105	A7	9p	69	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)			
	+SHIFT	press	PITCH PLAY mode	8/9/10/11	NOTE	113	F8	9p	71	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)				
				8/9/10/11	NOTE	121	C#9	9p	79	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)				
P3	PAD 3		+SHIFT	press	HOT CUE mode	8/9/10/11	NOTE	2	D-1	9p	02	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
						8/9/10/11	NOTE	10	A#-1	9p	0A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	ROLL mode	8/9/10/11	NOTE	18	F#0	9p	12	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
						8/9/10/11	NOTE	26	D1	9p	1A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	SLICER mode	8/9/10/11	NOTE	34	A#1	9p	22	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
						8/9/10/11	NOTE	42	F#2	9p	2A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	SAMPLER mode	8/9/10/11	NOTE	50	D3	9p	32	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
						8/9/10/11	NOTE	58	A#3	9p	3A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	CUE LOOP mode	8/9/10/11	NOTE	66	F#4	9p	42	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
						8/9/10/11	NOTE	74	D5	9p	4A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	SAVED LOOP mode	8/9/10/11	NOTE	82	A#5	9p	52	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
						8/9/10/11	NOTE	90	F#6	9p	5A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
	+SHIFT	press	SLICER LOOP mode	8/9/10/11	NOTE	98	D7	9p	62	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)				
				8/9/10/11	NOTE	106	A#7	9p	6A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)				
	+SHIFT	press	PITCH PLAY mode	8/9/10/11	NOTE	114	F#8	9p	72	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)				
				8/9/10/11	NOTE	122	D9	9p	7A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)				

Group	Fig.	User Interface			MIDI assign reference 1				MIDI-IN (to computer)			MIDI-OUT (from computer)			Details (Data 2)	
		UI name	+SHIFT	Trigger	Condition (mode)	MIDI Channel (Dec)	NOTE / CC	MIDI Data (Data 1)		Status (Hex)	Data 1 (Hex)	Data 2 (Hex)	Status (Hex)	Data 1 (Hex)		Data 2 (Hex)
							(Dec)	(English scale)								
PAD	P7	PAD 7		press	HOT CUE mode	8/9/10/11	NOTE	6	F#1	9p	06	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	HOT CUE mode	8/9/10/11	NOTE	14	D0	9p	0E	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
				press	ROLL mode	8/9/10/11	NOTE	22	A#0	9p	16	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	ROLL mode	8/9/10/11	NOTE	30	F#1	9p	1E	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
				press	SLICER mode	8/9/10/11	NOTE	38	D2	9p	26	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	SLICER mode	8/9/10/11	NOTE	46	A#2	9p	2E	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
				press	SAMPLER mode	8/9/10/11	NOTE	54	F#3	9p	36	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	SAMPLER mode	8/9/10/11	NOTE	62	D4	9p	3E	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
				press	CUE LOOP mode	8/9/10/11	NOTE	70	A#4	9p	46	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	CUE LOOP mode	8/9/10/11	NOTE	78	F#5	9p	4E	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
				press	SAVED LOOP mode	8/9/10/11	NOTE	86	D6	9p	56	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	SAVED LOOP mode	8/9/10/11	NOTE	94	A#6	9p	5E	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
				press	SLICER LOOP mode	8/9/10/11	NOTE	102	F#7	9p	66	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	SLICER LOOP mode	8/9/10/11	NOTE	110	D8	9p	6E	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
				press	PITCH PLAY mode	8/9/10/11	NOTE	118	A#8	9p	76	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			+SHIFT	press	PITCH PLAY mode	8/9/10/11	NOTE	126	F#9	9p	7E	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
			P8	PAD 8		press	HOT CUE mode	8/9/10/11	NOTE	7	G-1	9p	07	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)
					+SHIFT	press	HOT CUE mode	8/9/10/11	NOTE	15	D#0	9p	0F	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)
						press	ROLL mode	8/9/10/11	NOTE	23	B0	9p	17	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)
					+SHIFT	press	ROLL mode	8/9/10/11	NOTE	31	G1	9p	1F	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)
		press			SLICER mode	8/9/10/11	NOTE	39	D#2	9p	27	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
	+SHIFT	press			SLICER mode	8/9/10/11	NOTE	47	B2	9p	2F	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
		press			SAMPLER mode	8/9/10/11	NOTE	55	G3	9p	37	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
	+SHIFT	press			SAMPLER mode	8/9/10/11	NOTE	63	D#4	9p	3F	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
		press			CUE LOOP mode	8/9/10/11	NOTE	71	B4	9p	47	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
	+SHIFT	press			CUE LOOP mode	8/9/10/11	NOTE	79	G5	9p	4F	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
		press			SAVED LOOP mode	8/9/10/11	NOTE	87	D#6	9p	57	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
	+SHIFT	press			SAVED LOOP mode	8/9/10/11	NOTE	95	B6	9p	5F	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
		press			SLICER LOOP mode	8/9/10/11	NOTE	103	G7	9p	67	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
	+SHIFT	press			SLICER LOOP mode	8/9/10/11	NOTE	111	D#8	9p	6F	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
		press			PITCH PLAY mode	8/9/10/11	NOTE	119	B8	9p	77	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
	+SHIFT	press			PITCH PLAY mode	8/9/10/11	NOTE	127	G9	9p	7F	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F MIDI-OUT: lit in color specified in color number(1-127). OFF=0x00(dimmer)		
	P9	HOT CUE				press		1/2/3/4	NOTE	27	D#1	9n	1B	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F
						press		1/2/3/4	NOTE	73	C#5	9n	49	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F
					+SHIFT	press		1/2/3/4	NOTE	105	A7	9n	69	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F
	P10	ROLL				press		1/2/3/4	NOTE	30	F#1	9n	1E	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F
				press		1/2/3/4	NOTE	74	D5	9n	4A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press		1/2/3/4	NOTE	107	B7	9n	6B	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
	P11	SLICER		press		1/2/3/4	NOTE	32	G#1	9n	20	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
				press		1/2/3/4	NOTE	90	F#6	9n	5A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press		1/2/3/4	NOTE	109	C#8	9n	6D	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
	P12	SAMPER		press		1/2/3/4	NOTE	34	A#1	9n	22	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
				press		1/2/3/4	NOTE	91	G6	9n	5B	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press		1/2/3/4	NOTE	111	D#8	9n	6F	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
	P13	PARAMETER ◀		press	HOT CUE mode	1/2/3/4	NOTE	36	C2	9n	24	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press	HOT CUE mode	1/2/3/4	NOTE	1	C#-1	9n	01	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
				press	ROLL mode	1/2/3/4	NOTE	37	C#2	9n	25	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press	ROLL mode	1/2/3/4	NOTE	2	D-1	9n	02	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
				press	SLICER mode	1/2/3/4	NOTE	38	D2	9n	26	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press	SLICER mode	1/2/3/4	NOTE	3	D#-1	9n	03	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
				press	SAMPLER mode	1/2/3/4	NOTE	39	D#2	9n	27	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press	SAMPLER mode	1/2/3/4	NOTE	4	E-1	9n	04	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
				press	CUE LOOP mode	1/2/3/4	NOTE	40	E2	9n	28	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press	CUE LOOP mode	1/2/3/4	NOTE	5	F-1	9n	05	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
				press	SAVED LOOP mode	1/2/3/4	NOTE	41	F2	9n	29	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press	SAVED LOOP mode	1/2/3/4	NOTE	6	F#-1	9n	06	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
	P14	PARAMETER ▶		press	SLICER LOOP mode	1/2/3/4	NOTE	42	F#2	9n	2A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press	SLICER LOOP mode	1/2/3/4	NOTE	7	G-1	9n	07	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
				press	PITCH PLAY mode	1/2/3/4	NOTE	43	G2	9n	2B	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press	PITCH PLAY mode	1/2/3/4	NOTE	8	G#-1	9n	08	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
				press	HOT CUE mode	1/2/3/4	NOTE	44	G#2	9n	2C	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press	HOT CUE mode	1/2/3/4	NOTE	9	A-1	9n	09	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
				press	ROLL mode	1/2/3/4	NOTE	45	A2	9n	2D	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			+SHIFT	press	ROLL mode	1/2/3/4	NOTE	122	D9	9n	7A	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F		
			press	SLICER mode	1/2/3/4	NOTE	46	A#2	9n	2E	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F			
+SHIFT			press	SLICER mode	1/2/3/4	NOTE	123	D#9	9n	7B	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F			
			press	SAMPLER mode	1/2/3/4	NOTE	47	B2	9n	2F	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F			
+SHIFT			press	SAMPLER mode	1/2/3/4	NOTE	124	E9	9n	7C	hh	← Same as MIDI-IN	OFF=0x00, ON=0x7F			