

DJ Controller

DDJ-FLX10



Firmware Update Guide

A. Checking the current firmware version of the DDJ-FLX10

1. Connect your DDJ-FLX10 to your PC/Mac using the USB cable.

 
2. Launch the Setting Utility.

- For Mac:
 1. In Finder, open the [Applications] folder.
 2. Click [Pioneer] > [DDJ-FLX10] > [DDJ-FLX10 Setting Utility].
- For Windows:

In the Windows [Start] menu, click [Pioneer] > [DDJ-FLX10 Setting Utility].

3. Check the firmware version in the Setting Utility.

The firmware version is displayed in the [About] tab. (The figure below is a Mac version)

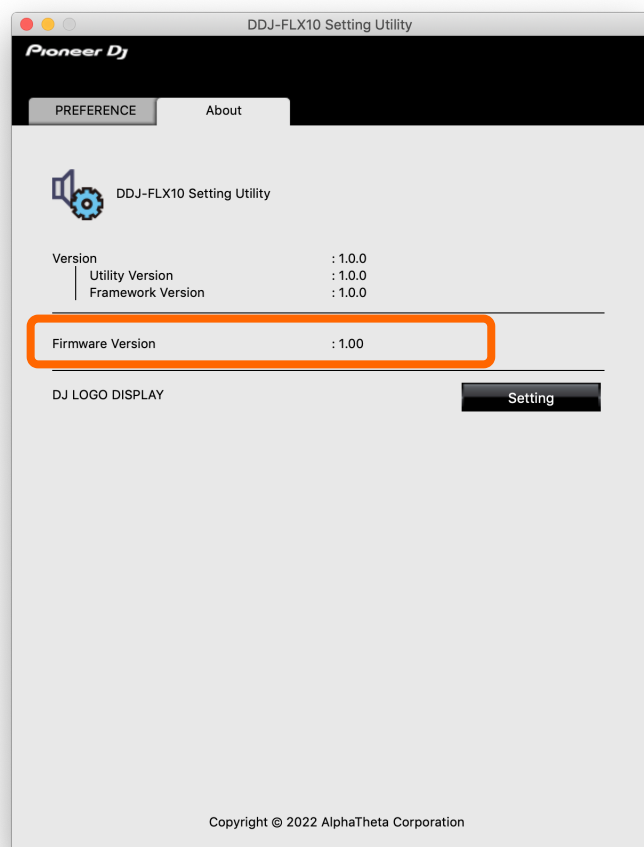

B. Checking the downloaded file

1. Unzip the downloaded file.

- For Mac:

Double-click [DDJ-FLX10_v**xxx**_MAC64.dmg] to mount it.

- For Windows:

Save the downloaded file [DDJ-FLX10_v**xxx**_WIN.zip] to a folder in any location such as desktop and unzip it.

2. Check the unzipped file.

- For Mac:

Check the following file is included in the extracted [DDJ-FLX10_v**xxx**_MAC64] folder.

[DDJ-FLX10_v**xxx**.app]

- For Windows:

Check the following file is included in the extracted [DDJ-FLX10_v**xxx**_WIN] folder.

[DDJ-FLX10_v**xxx**.exe]

- ✓ **xxx** is the new version number of the firmware.
- ✓ Depending on your computer settings, the extension such as .exe or .app may not be displayed.

C. Preparing for the update on the DDJ-FLX10

 
1. Connect the DDJ-FLX10 to your PC/Mac.

Connect your DDJ-FLX10 to your PC/Mac using a USB cable.

(Connect the USB cable to the USB-A terminal of the DDJ-FLX10.)

2. Turn on the power of the DDJ-FLX10.

Press the power button on the rear panel of the DDJ-FLX10 to turn on the power.

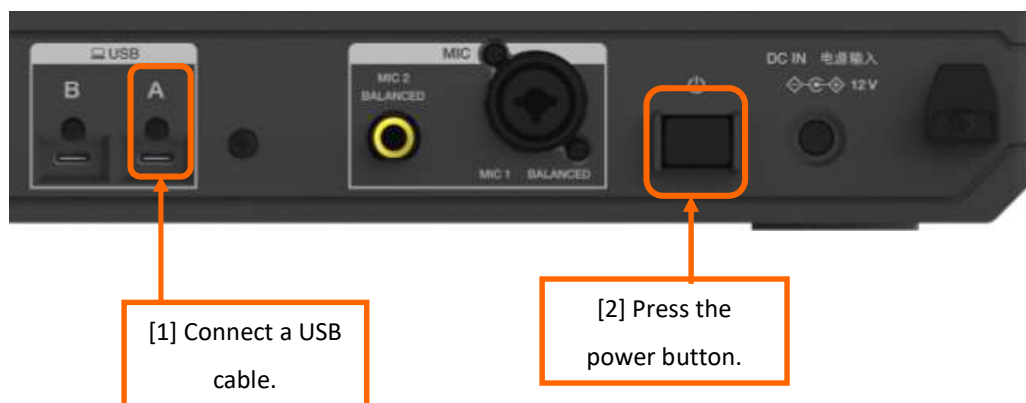

D. Updating the firmware through your PC/Mac

1. Updating procedures

 
Before updating, close all the applications running on your PC/Mac.

<STEP1> Open the updater program.

- For Mac:
Double click [DDJ-FLX10_vxxx.app].
- For Windows:
Double click [DDJ-FLX10_vxxx.exe].

<STEP2> Select a language.

Select a language you want to use and click “OK”.

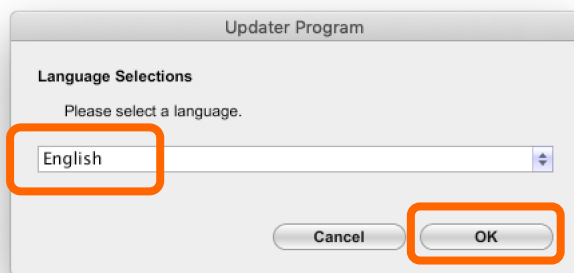

<STEP3> Check the firmware version.

Ensure that the version is **x.xx**. Click “Start”. (The figure below is an example.)

 
Do not disconnect the USB cable during the update.

Please use an **AC adaptor** to power your laptop during update.



<STEP4> During the update


Please wait until the progress bar reaches to the right end.

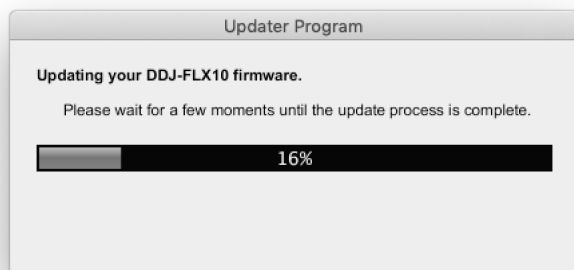

While the update is in progress, the master level indicator of DDJ-FLX10 flashes.

<STEP5> The update process is complete.

 If the message below is displayed, click "OK".

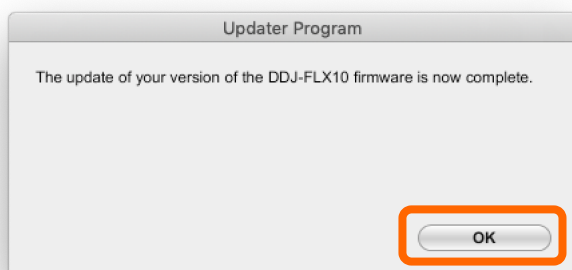

<STEP6> Restart the DDJ-FLX10.

After the update is complete, the DDJ-FLX10 will automatically restart.

E. Checking the firmware version

Check the firmware version of the DDJ-FLX10 as described in “**A. Checking the current firmware version of DDJ-FLX10**”.

When you find the version you wanted, the firmware update is successfully complete.

Tips: When you fail to update the firmware

If the following message appears during the update, turn off the power of the DDJ-FLX10 and then restart the update from “**C. Preparing for the update on the DDJ-FLX10**”.



When the update is abnormally terminated, the DDJ-FLX10 may launch in firmware update mode with the red at the top of the master level indicator flashing. In this case, please restart the update from “**D. Updating the firmware through your PC/Mac**” of the above updating procedures.

Tips: If you are still unable to update the firmware

1. Turn on the power while holding down [4 BEAT JUMP ◀] button and [4 BEAT JUMP ▶] button on the left deck. The red at the top of the master level indicator will start flashing and the DDJ-FLX10 will launch in firmware update mode.
2. Restart the update from “**D. Updating the firmware through your PC/Mac**”.

[Reference information]

For information on the supported operating systems, visit the URL below.

pioneerdj.com/support/

The update will take about 1 minute.

The images may differ from the ways described in this Guide.

About Trademarks and Registered Trademarks

- Pioneer DJ is a trademark of PIONEER CORPORATION and is used under license.
- Mac and Finder are trademarks of Apple Inc., registered in the U.S. and other countries and regions.
- Windows is a registered trademark of Microsoft Corporation in the U.S. and other countries.
- Other product, technology and company names, etc. mentioned herein are trademarks or registered trademarks of their respective owners.

©2023 AlphaTheta Corporation. All rights reserved.

AlphaTheta Corporation

6F, Yokohama i-Mark Place, 4-4-5 Minatomirai, Nishi-ku, Yokohama, Kanagawa 220-0012 Japan