


DJ Controller DDJ-FLX4

Knob Center Position Adjustment Guidelines

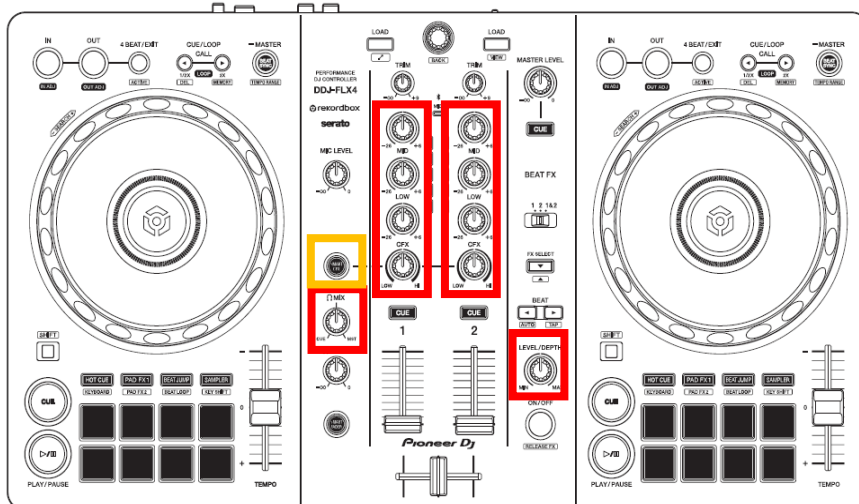


Target Knob: EQ knob, CFX knob, LEVEL/DEPTH knob, MIX knob Total 10 knobs

Adjustment method

- 1 Disconnect the USB cable.
- 2 Hold both the [SHIFT] and [PLAY/PAUSE ▶/||] buttons on the left deck and connect the USB cable. Utilities mode launches.
- 3 Adjust all the knobs listed below* to the center position.

***EQ knob, CFX knob, LEVEL/DEPTH knob, MIX knob
Total 10 knobs**

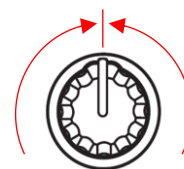

- 4 Press the [SMART CFX] button in the mixer section.
- 5 After the [SMART CFX] button blinks, the adjustment is complete as the button lights up.

If the [SMART CFX] button blinks then goes off, check that all the knobs listed above are in the center position, then press the [SMART CFX] button again.

Unlit : Adjustment is not complete or failed

Lit : Adjustment is complete

- 6 Disconnect the USB cable to turn off the unit. Utilities mode turn off.