

**Pioneer**

PERFORMANCE DJ CONTROLLER

# Digital DJ-SR



<http://pioneeordj.com/support/>

The Pioneer DJ support site shown above offers FAQs, information on software and various other types of information and services to allow you to use your product in greater comfort.

## Firmware Update Guide

## Read Before Use (Important)

- Unzip the downloaded update file for updating.
- If Java has not been installed, please download the Java Runtime Environment (JRE) at: <http://java.com> and install it on your computer.
- ASIO driver exclusively for DDJ-SR is required to be installed for Windows PC users.
- If you should have any questions, please contact the Pioneer Customer Support Center.

### Reference Information


This updater has been verified to operate on the operating systems below;

- Windows® 7/ Windows® 8
- Mac OS X : 10.6/10.7/10.8

## Updating Procedures


**Note:** Turn the power off and disconnect all the cables from the unit. And close all applications on your computer before running this updating procedure.

- 1) Connect your computer to DDJ-SR via the USB cable included with the product.
- 2) Turn on the power of DDJ-SR while pressing the [SHIFT] button and the [SYNC] button on the LEFT deck ensure the Level meter LEDs flash before releasing your finger from these buttons.

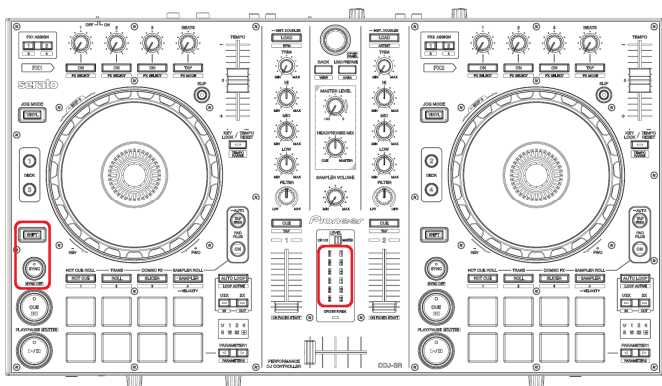

- 3) When the update file for DDJ-SR (DDJ-SR\_Vxxx.jar) is activated, the following dialogue is displayed. Click the [Start] button.

— Approximately a few minutes are required for updating.

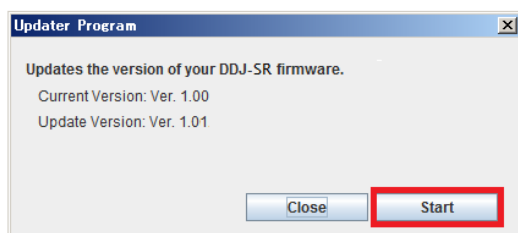

- 4) When the firmware update process is complete, click the [OK] button.

**Note:** Please note that if you fail to update, turn on the power of DDJ-SR again and start from Step 2) of the above Updating Procedures.

## How to check the Firmware Version

### For Windows

From the [Start menu], Run [All Programs] → [Pioneer] → [DDJ-SR] → [DDJ-SR Version Display Utility].  
— Click [DDJ-SR Version Display Utility] tile on the Start Screen for Windows 8.




### For Mac OS X

Open the Apple menu while pressing the option key, then select "System Profiler" or "System Information."



Select the [USB] from the [Hardware] to display the name of the controller. Select the controller to display the firmware version.

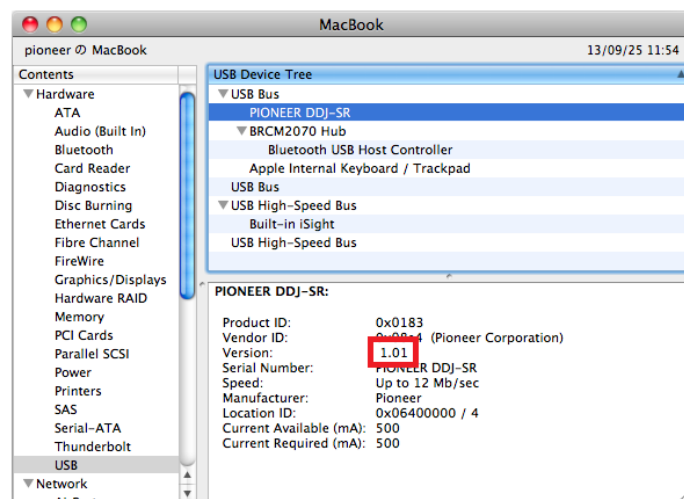

## About Trademarks and Registered Trademarks

- Pioneer is a registered trademark of PIONEER CORPORATION.
- JAVA is a trademarks of Sun Microsystems, Inc. registered in the United States and other countries.
- Windows Vista® and Windows® are either registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- Mac OS is trademarks of Apple Inc. registered in the United State and other countries.

© 2013 PIONEER CORPORATION.

All rights reserved.

PIONEER CORPORATION