

Pioneer Dj

DJ CONTROLLER

DDJ-SX3



pioneerdj.com/support/

The Pioneer DJ support site shown above offers FAQs, information on software and various other types of information and services to allow you to use your product in greater comfort.

Firmware Update Guide

Read Before Use <Important>

- Unzip the downloaded update file for updating.
- Driver exclusively for DDJ-SX3 is required to be installed for PC/Mac. Please refer to Quick Start Guide for the procedure.
- If Java has not been installed, please download the Java Runtime Environment (JRE) at: <https://java.com> and install it on your computer.
- If you should have any questions, please contact the Pioneer Customer Support Center.

Reference Information

 
This updater has been verified to operate on the operating systems below;

- Windows® 10/ Windows® 8.1/ Windows® 7
- macOS High Sierra 10.13/Sierra 10.12/Mac OS X 10.11


Updating Procedures

Note: Turn the power off and disconnect all the cables from the unit. And close all applications on your computer before running this updating procedure.

- 1) Connect your computer to the [USB A] port of DDJ-SX3 via the USB cable included in the box.
- 2) Turn on the power of DDJ-SX3 while pressing the [SHIFT] button and the [SYNC] button on the LEFT deck, and ensure the Level meter LEDs flash before releasing your finger from these buttons.

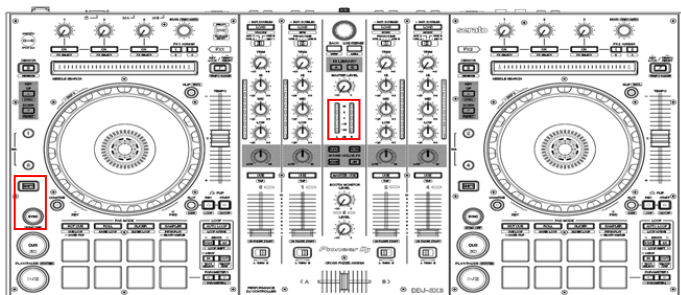

 - 3) Double-click the update file for DDJ-SX3 (DDJ-SX3_Vxxx.jar) to launch. Click the [Start] button when the following dialogue is displayed.

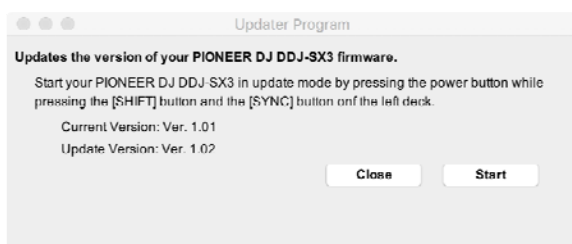

- Approximately 3 ~ 5 minutes are required for updating.

 
- 4) When the firmware update process is complete, click the [OK] button.

Note: Please note that if you fail to update, turn off the power of DDJ-SX3 and start from Step 2) of the above Updating Procedures.

How to check the Firmware Version

For Mac

Click [Macintosh HD] icon > [Application] > [Pioneer] > [DDJ-SX3] > [DDJ-SX3 Setting Utility].

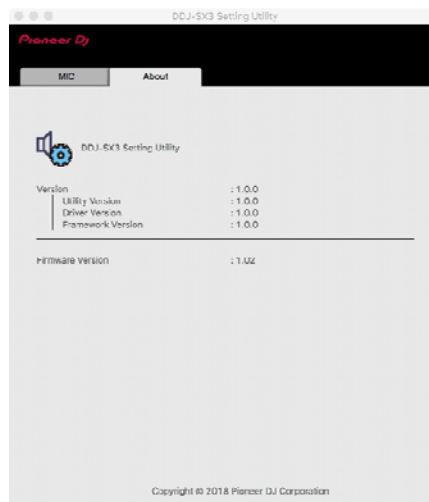

For Windows 10

 
Click [Start] menu > [Pioneer] > [DDJ-SX3] > [DDJ-SX3 Setting Utility].

For Windows 8.1

In [Apps view], click the [DDJ-SX3 Setting Utility] icon.

For Windows 7

Click [Start] menu > [All Programs] > [Pioneer] > [DDJ-SX3] > [DDJ-SX3 Setting Utility].

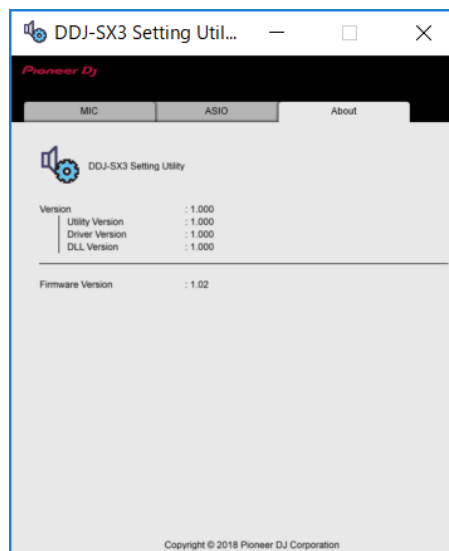

About Trademarks and Registered Trademarks

- Pioneer DJ is a trademark of PIONEER CORPORATION and is used under license.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates.
- Windows is a registered trademark of Microsoft Corporation in the U.S. and other countries.
- Mac, OS X or macOS are trademarks of Apple Inc., registered in the US and other countries.
- Other product, technology and company names, etc. mentioned herein are the trade names or registered trademarks of their respective owners.
- Other trademarks and trade names are the property of their respective owners.

© 2018 PIONEER DJ CORPORATION.

All rights reserved.

PIONEER DJ CORPORATION

6F, Yokohama i-Mark Place, 4-4-5 Minatomirai, Nishi-ku, Yokohama, Kanagawa 220-0012 Japan