

DDJ-WeG02



Firmware Update Guide

Read Before Use (Important)

- \cdot Unzip the downloaded update file for updating.
- · Updating the firmware is not available using iPhone or iPad.
- If Java has not been installed, please download the Java Runtime Environment (JRE) at: <u>http://java.com</u> and install it on your computer.
- If you should have any questions, please contact the Pioneer Customer Support Center.

Reference Information

This updater has been verified to operate on the operating systems below;

· Windows® XP / Windows Vista® / Windows® 7/ Windows® 8
· Mac OS X : 10.5/10.6/10.7/10.8

Updating Procedures

Note: Turn the power off and disconnect all the cables from the unit. Then, close all the applications on your computer before running this updating procedure.

1) Connect your computer to DDJ-WeGO2 via the USB cable included with the product.

2) Turn on the power of DDJ-WeGO2 while pressing the two [HEARDPHONE CUE] buttons (See the figure below) and ensure the Level meter LEDs (Figure below) flash before releasing your finger from the [HEARDPHONE CUE] buttons.



3) When the update file for DDJ-WeGO2 (DDJ-WeGO2_Vxxx .jar) is activated, the following dialogue is displayed. Click the [**Start**] button.

- Approximately 2 minute is required for updating.

	<u>×</u>	1
DDJ-WeGO2 firmware	e.	
Close	Start	
		DDJ-WeGO2 firmware.

4) When the firmware update process is complete, click the [OK] button.

Note: Please note that if you fail to update, turn on the power of DDJ-WeGO2 again and start from Step 2) of the above Updating Procedures.

How to check the Firmware Version

For Windows

- ASIO driver exclusively for DDJ-WeGO2 is required to be

Installed to your computer.

From the [Start menu], Run [All Programs] \rightarrow [Pioneer] \rightarrow [DDJ-WeGO2] \rightarrow [DDJ_WeGO2 Version Display Utility]. — Click [DDJ_WeGO2 Version Display Utility] tile on the Start Screen for Windows 8.

Windows Driver Pack	Ver1.000
Firmware	
DDJ-WeGO2	Ver1.01

For Mac OS X

Open the Apple menu while pressing the option key, then select [System Profiler] or [System Information.]

🚺 Finder Fi	le Edit	View
System Profil	er	
Software Upda Mac OS X Softw		
System Prefere Dock	nces	►
Recent Items		►
Force Quit Find	der 🔨	C#(
Sleep Restart Shut Down	۲	:#▲
Log Out pione	er 1	} ₩Q

Select the [**USB**] from the [**Hardware**] to display the name of the controller. Select the controller to display the firmware version.

00	MacBook	
pioneerの MacBook		13/08/30 16:45
Contents	USB Device Tree	
Bluetooth	▼ USB Bus	
Card Reader	PIONEER DDJ-WeGO2	
Diagnostics	BRCM2070 Hub	
Disc Burning	Bluetooth USB Host Controller	
Ethernet Cards	Apple Internal Keyboard / Trackpad	
Fibre Channel	USB Bus	
FireWire	USB High-Speed Bus	
Graphics/Displays	▼ USB High-Speed Bus	
Hardware RAID	Built-in iSight	
Memory		
PCI Cards	· · · · · · · · · · · · · · · · · · ·	
Parallel SCSI	PIONEER DDJ-WeGO2:	
Power	Product ID: 0x0185	
Printers	Vendor ID: 0x08e4 (Pioneer Corporation)	
SAS	Version: 1.01	
Serial-ATA	Serial Number:	
Thunderbolt	Speed: Up to 12 Mb/sec Manufacturer: Pioneer	
USB	Location ID: 0x06400000 / 4	
Network	Current Available (mA): 500	
AirPort	Current Required (mA): 0	
Firewall	A	
Locations	•	

About Trademarks and Registered Trademarks

- · Pioneer is a registered trademark of PIONEER CORPORATION.
- JAVA is a trademarks of Sun Microsystems, Inc. registered in the United States and other countries.
- Windows Vista® and Windows® are either registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- Mac OS is trademarks of Apple Inc. registered in the United State and other countries.

© 2013 PIONEER CORPORATION. All rights reserved. 1/1 PIONEER CORPORATION