

DJ MIXER

DJM-250MK2



Firmware Update Guide

A. How to check the current Firmware Version of DJM-250MK2

1. Connect DJM-250MK2 to your computer using a USB cable.

2. Launch the Settings Utility.

For Windows:

```
[Start] menu > [All Programs] > [Pioneer] -> [DJM-250MK2] -> [DJM-250MK2 Settings Utility]
```

For Mac OS:

```
[Application] > [Pioneer] > [DJM-250MK2] > [DJM-250MK2 Settings Utility]
```

3. Check the Firmware Version in the Settings Utility

The firmware version is displayed in the [About] tab.





B. Check the downloaded file

1. Unzip the downloaded file.

For Windows:

Save the downloaded file [DJM-250MK2_v**xxx**_Win.zip] to an arbitrary directory such as desk top and unzip it.

For Mac OS:

Save the downloaded file [DJM-250MK2_v**xxx**_Mac.dmg] to an arbitrary directory such as desk top and double click to mount it.

2. Check the unzipped file.

For Windows:

The [DJM-250MK2_v**xxx**_Win] folder is generated when the file is unzipped.

Please ensure the following files are included in the folder.

[DJM-250MK2_vxxx.exe]

For Mac OS:

The [DJM-250MK2_vxxx_Mac] folder is generated when the file is extracted.

Please ensure the following files are included in the folder.

[DJM-250MK2_vxxx.app]

- \checkmark xxx is numeric characters of the new firmware version.
- ✓ Depending on your computer settings, the extension such as .exe or .app may not be displayed.

C. Preparation for updating DJM-250MK2

1. Connect DJM-250MK2 and a computer.

Connect DJM-250MK2 to your computer using a USB cable.

2. Start the update mode.

Press the power button while pressing the [FILTER] button and the [CH1 CUE] button. When the update mode started, 12dB on the MASTER level indicator starts blinking.



D. Updating the firmware using a computer

1. Updating procedures.

Before updating, close all the applications running on the computer.

<STEP1> Start the update program.

For Windows:

Double click [DJM-250MK2_v**xxx**.exe] to activate the update file. For Mac OS:

Double click [DJM-250MK2_v**xxx**.app] to activate the update file.

<STEP2> Select a language.

Select the language you want to use and click on [OK].

Updater Program		
Language Selectio		
English		\$
	Cancel OK	

•Please refer to "Tips: When [Your DJM-250 is not recognized] is shown" in a later section if the same message is popped up after clicking "OK".

<STEP3> Check the firmware version.

After ensuring the firmware version, click on the [Start] button.

Ensure that the power cable and the USB cable are securely connected to the DJM-250MK2 during the update.

Please make sure to use an AC adaptor to power your laptop during updating the firmware.

ī	Updater Program			
	Updates the version of your DJM-250MK2 firmware.			
	Current Version: Ver. 1.00 Update Version : Ver. 1.01			
	Close Start			

The updating process starts.

Please wait until the progress bar reaches to the right end. Approximately 30 seconds is required for updating.

Updater Program	
Updating your DJM-250MK2 firmware.	
Please wait for a few moments until the update process is complete	
42%	

<STEP4> Complete the updating process.

When the firmware update process is complete and the message below appears, click on the [OK] button.



After the update process finished, the DJM-250MK2 is ready to use.

E. Check the firmware version

Check the firmware version of the DJM-250MK2 as described in [A. How to check the current Firmware Version of DJM-250MK2].

The firmware update is successfully completed when you find the version you wanted in the Settings Utility. If not, turn off the power of the DJM-250MK2 and try [D. Updating the firmware using a computer] again.

Tips: How to cope with abnormal termination

If you fail to update and the following message appears, turn off the power of the DJM-250MK2 and start from the beginning of the above Updating Procedures.

Updater Program				
	An error has occurred. It was not possible to update the program.			
	ок			

Tips: When [Your DJM-250MK2 is not recognized] is shown

When the following message appears after selecting a language, please follow the instructions in the

message.

Updater Program		
	Your DJM-250MK2 is not recognized. 1. Connect your DJM-250MK2 and computer using a USB cable. 2. Start you DJM-250MK2 with update mode, by pressing the power button while pressing the [CH1 CUE] button and the [FILTER] button. 3. Restart this program.	
	Close	

About trademarks and registered trademarks

• Pioneer DJ is a trademark of PIONEER CORPORATION, and is used under license.

 $\odot 2017$ Pioneer DJ Corporation. All rights reserved.

Pioneer DJ Corporation

6F, Yokohama i-Mark Place, 4-4-5 Minatomirai, Nishi-ku, Yokohama, Kanagawa 220-0012 Japan