

 AlphaTheta

MULTI PLAYER

**CDJ-3000X**

**Firmware Update Guide**

## How to check the version

---

- 1 Turn on the power of the CDJ-3000X.
- 2 Press and hold the [MENU] button (for over 1 second ) to open the [UTILITY] screen.
- 3 The version No. appears in the upper right corner of the [UTILITY] screen.

## Preparation for update


---

- 1 Unzip the .zip file on your computer.

Unzip the downloaded [CDJ3000Xv\*\*\*.zip] file to find the following update file.  
Please make sure the unzipped update file is CDJ3000Xv\*\*\*.UPD.

CDJ3000Xv\*\*\*.UPD

- 2 Copy the unzipped update file to the root directory of a USB storage device.

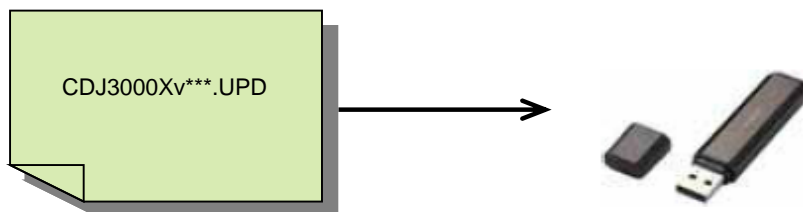

\* DO NOT rename the file name.

\* Please use a USB storage device (USB Mass Storage Class-compliant) formatted in FAT, FAT32 or exFAT.

## How to update

---

### 1 Enter the update mode:

Ensure that the CDJ-3000X is powered off and no USB storage device and USB cable is connected. Then, turn on the power while pressing both the [IN/CUE] and [RELOOP/EXIT] buttons simultaneously. Release your fingers from the buttons after "Connect USB storage device into top USB1 port." is displayed.

### 2 Insert the USB storage device containing the copied update file into the USB port.

\* When using a USB Type-A storage device, insert it into the USB 1 Type-A port. When using a USB Type-C storage device, insert it into the USB 2 Type-C port.



## How to update (Continued)

---

- 3** The update starts automatically and the Progress Bar is displayed.

Both the current and the updated versions are shown there simultaneously.

\* DO NOT remove the USB storage device or turn off the power during the update.

When the update is finished, the below message is displayed:

"Firmware update is complete. Turn the power off/on before using."

- 4** When the complete message is displayed , turn the power off.

Follow "How to check the version" to check the firmware version to make sure that the firmware has been updated.

Then disconnect the USB storage device.

If the update process doesn't start or "MAIN update file is corrupt." is displayed, the downloaded file might be corrupted.

In that case, start over the update process again from downloading the update file.

If the update process still fails even after that, please try another USB storage device because the USB device could cause the failure.

If the Progress Bar doesn't advance and the update doesn't complete during updating or "MAIN firmware update failed" or other error message is displayed, please contact the Customer Support. [alphatheta.com/support/](https://alphatheta.com/support/)