# TORΔIZ

# **TORAIZ SQUID Firmware – CHANGE HISTORY**

## Ver.1.12 (9 July 2019 Update)

#### [FIXED]

✓ Minor issues.

### Ver.1.11 (4 June 2019 Update)

#### [FIXED]

- Arpeggiator worked incorrectly when the TRACK output setting was [CV/GATE1] or [CV/GATE2].
- ✓ Arpeggiator worked incorrectly when the [Mono/Poly] setting of a TRACK SETTING was [Mono].
- External equipment was not communicating correctly when the [OUT Sync Mode] of the [CLOCK settings] was [2ppqn] in the GLOBAL settings.
- ✓ Other minor issues.

# Ver.1.10 (24 April 2019 Update)

#### [NEW]

- Now compatible with SQUID Manager, the dedicated application to backup SQUID projects, and export / import midi clips.
- ✓ MIDI message settings for Program Change and Bank Select.
- ✓ Delay setting for each track.
- ✓ Note programming for each step using external MIDI devices.
- ✓ Pattern Set edit mode.
- ✓ Now able to output MIDI messages received from the MIDI port to the USB port.
- ✓ Added [Euclid Based] as new [Trigger Type] in [Randomizer Settings].
- ✓ Added [Key Based] as new [Pitch Type] in [Randomizer Settings].

#### [IMPROVED]

- Keep sequence playback when entering TIME WARP mode during sequence playback.
- ✓ Better view and operability in Chord mode.
- ✓ Receive MIDI messages of Start/Stop/Continue regardless of [Sync Source] setting.
- ✓ Nudge regardless of [Sync Source] setting.
- ✓ Sequence playback speed can be set at [Pattern Speed] in Pattern mode.

✓ Rec function from external MIDI devices.

#### [FIXED]

- ✓ Unable to send Restart command to external devices connected to [DIN SYNC OUT] or [CLOCK OUT].
- ✓ The behavior when [IN Sync Mode] setting is [1 step] or [Gate].
- ✓ Unable to sync when a legacy device (such as TR-808) is connected to [DIN SYNC OUT].