



**ALL-IN-ONE DJ SYSTEM**

# **OMNIS-DUO**

## **Firmware Update Guide**

### How to check the version:

---

- 1 Turn on the power of the OMNIS-DUO.
- 2 The launcher screen appears.
- 3 Touch [SETTINGS] on the launcher screen. The [SETTINGS] screen appears.
- 4 Touch [UTILITY] on the [SETTINGS] screen. The [UTILITY] screen appears.
- 5 Touch [INFO] on the [UTILITY] screen. The [Version No.] appears .
- 6 Touch [x] on the title/status bar to close the [UTILITY] screen.

### Preparation for update:

 
---

- 1 Unzip the .zip file on your computer.

Unzip the downloaded [OMNISDUOv\*\*\*.zip] file to find the following update file.

OMNISDUOv\*\*\*.UPD

- 2 Copy the unzipped update file to the root directory of a USB storage device.

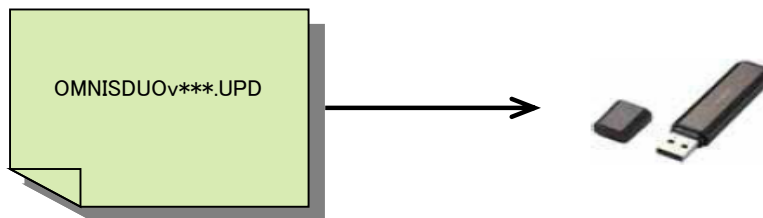

\* DO NOT rename the file name.

\* Please use a USB storage device (USB Mass Storage Class-compliant) formatted in FAT or FAT32.

## How to update:

---

### 1 Enter the update mode:

Connect the supplied AC adapter.

Ensure that the OMNIS-DUO is powered off and no USB storage device and USB cable is connected.

Then, turn on the power while pressing both the [BEAT JUMP◀] and [BEAT JUMP▶] buttons on right deck simultaneously.

When the channel level indicator lights up, please release your fingers from the buttons.



### 2 Insert the USB storage device containing the copied update file into the USB port on the right side.



**3** The update starts automatically and the Progress Bar is displayed.

Both the current and the updated versions are shown there simultaneously.

\* DO NOT remove the USB storage device or turn off the power during the update.

When the update is finished, the below message is displayed:

"Firmware update is complete. Turn the power off/on before using."

**4** When the complete message is displayed , **press and hold the power button for 3 seconds** to turn the power off. Follow "How to check the version" to check the firmware version to make sure that the firmware has been updated.

Then disconnect the USB storage device.

If the update process does not start or "MAIN update file is corrupt." is displayed, the downloaded file might be corrupted.

In that case, start over the update process again from downloading the update file.

If the update process still fails even after that, please try another USB storage device because the USB device could cause the failure.

If the Progress Bar does not advance and the update does not complete during updating or "MAIN firmware update failed" or other error message is displayed, please contact the Customer Support. [alphatheta.com/support/](http://alphatheta.com/support/)

## Network Update

---

The OMNIS-DUO can download and install the latest updater directly on the device when connected to a Wi-Fi network. (Firmware version 1.10 or higher is required.)

### Update notification badge appears when network updates are available

---

When connected to a Wi-Fi network,  
an update notification badge will appear in the following area if the latest firmware is available.

- The update notification badge is displayed on the [UTILITY] mark on the launcher screen.
- The update notification badge is displayed in the [Info] section of the [UTILITY] screen.
- "New Firmware(x.xx) Available" is displayed on the right of [Version No].

### Instructions for Network Update

---

When the update notification badge appears, the Network Update is ready.

Make sure that the following conditions are met:

 
- Turn on the power
- Connect the supplied AC adapter
- Connect to a Wi-Fi network

#### 1 Launch the Network Update


Touch [Info] on the [UTILITY] screen. [Version No.] is displayed.

New Firmware(x.xx) Available appears on the right.

Touch "New Firmware(x.xx) Available".

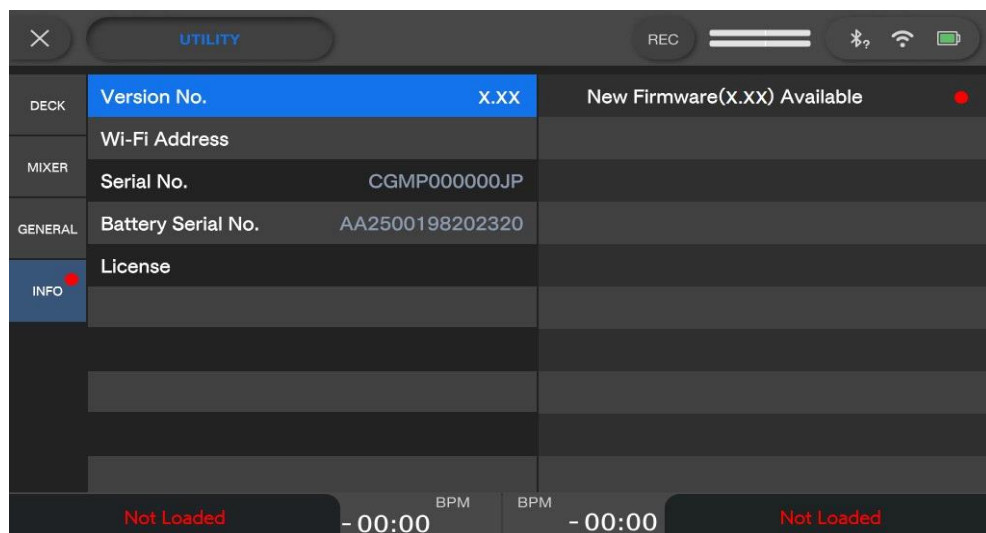

 When the following caution appears, select REBOOT.  
"Reboot the unit for Firmware update. It takes a few minutes."

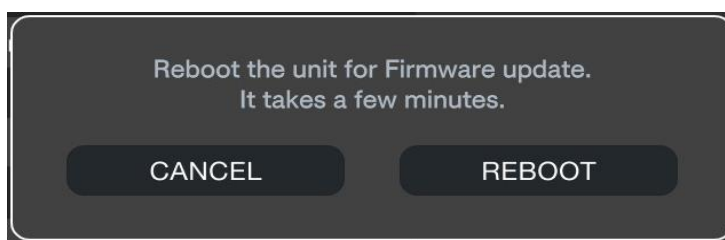

**2** Reboot starts automatically.

**3** After the reboot, the update will automatically start and the progress bar will be displayed.  
At the same time, the current version and the version after the update are displayed.

Note: Do not change the Wi-Fi environment or turn off the power during the update.

When the update is finished, the below message is displayed:  
"Firmware update is complete. Turn the power off/on before using."

**4** When the complete message is displayed, **press and hold the power button for 3 seconds** to turn the power off. Follow the instructions in "How to check the version" to check the firmware version to make sure that the firmware has been updated.

If the progress bar does not advance or an error message such as "MAIN firmware update failed" is displayed, please contact the Customer Support.  
[alphatheta.com/support/](http://alphatheta.com/support/)