


XDJ-R1

Hardware Diagram ~ TRAKTOR PRO2 ~

 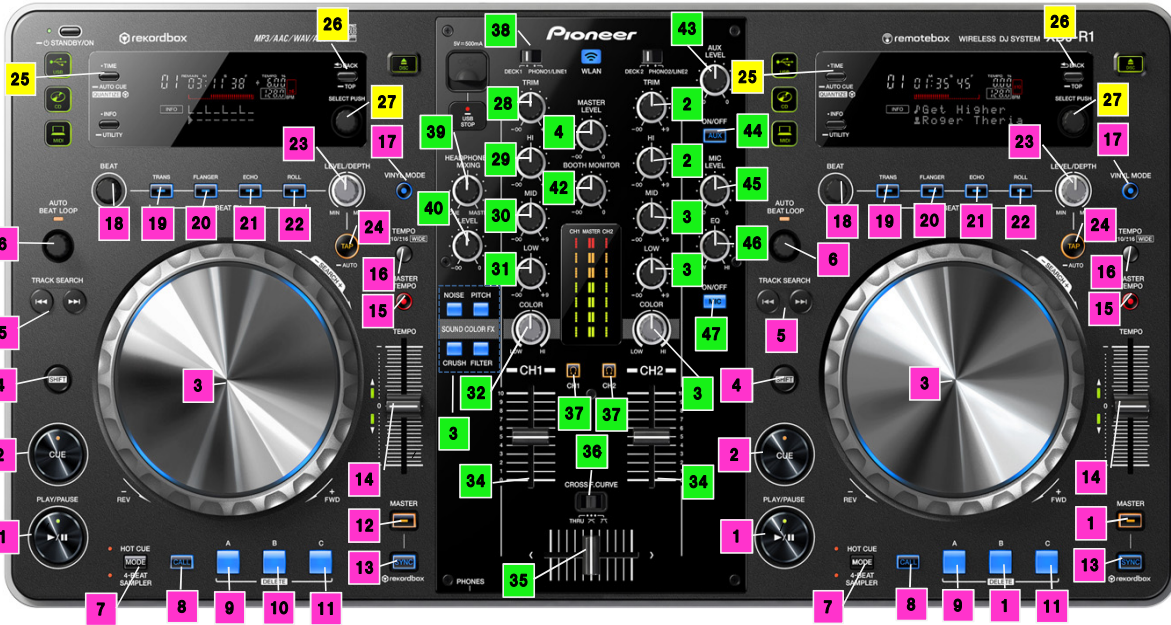


Group	No.	Name	Deck A, B (Track Deck)	Function	(+ SHIFT)	Deck C, D (Remix Deck)	Function	(+ SHIFT)
Deck	1	▶ II (PLAY/PAUSE)	Play/Pause	Play/Pause	-	Play from track beginning of all slots/Pause	-	-
	2	CUE	CUE	Scratch (VINYL mode On), Pitch Bend (VINYL mode Off)	Jump to the track beginning	Trigger to play all slots	-	-
	3	JOG	Top plate Outer wheel	Scratch (VINYL mode On), Pitch Bend (VINYL mode Off)	Search	Scratch (VINYL mode On), Pitch Bend (VINYL mode Off)	-	-
	4	SHIFT	-	-	-	-	-	-
	5	TRACK SEARCH	Tap TSL	Set a Loop In point	Shift 1-beat Loop backward	Set a Loop In point	Shift 1-beat Loop backward	-
	6	AUTO BEAT LOOP	Turn Press	Select Auto Loop length/Loop Half & double Auto Loop On/Off ¹	Beatgrid adjustment Loop active	Select Auto Loop length/Loop Half & double Auto Loop On/Off ¹	Slot Filter adjustment Slot Filter On/Off ¹	-
	7	MODE (HOT CUE/SAMPLER)	-	-	-	-	-	-
	8	CALL	-	Hot Cue / Sampler mode switch ²	-	Hot Cue / Sampler mode switch ²	-	-
	9 to 11	HOT CUE 1 to 3 SAMPLER 1 to 3 (SAMPLER mode)	Sample slot 1 to 3	When a track is not loaded: Sampling from a track in Track Deck ³ When playback stops: Start playback from the track beginning During playback (One-shot): Stop During playback (Looped): Mute/Cancel mute	Load a track from track list Delete Stop Mute/Cancel mute	When a track is not loaded: Sampling from a track in Track Deck ³ When playback stops: Start playback from the track beginning During playback (One-shot): Stop During playback (Looped): Mute/Cancel mute	Load a track from track list Delete Stop Mute/Cancel mute	Trigger to play Remix slot 1~3 Switch Play mode of Remix slot 1~3
	12	MASTER	-	Select Master Deck	-	Select Master Deck	-	-
	13	SYNC	-	Beat Sync	-	Beat Sync	-	-
	14	TEMPO	-	Tempo Control	-	Tempo Control	-	-
	15	MASTER TEMPO	-	Key Lock On/Off	-	Key lock On/Off	-	-
	16	TEMPO RANGE	-	Select Tempo Range (6%, 10%, 16%, 100%)	-	Select Tempo Range (6%, 10%, 16%, 100%)	-	-
	17	VINYL MODE	-	Vinyl mode On/Off	-	Vinyl mode On/Off	-	-
	18	BEAT	-	DRY/WET adjustment	Effect2 parameter adjustment	DRY/WET adjustment	Effect2 parameter adjustment	-
	19	BEAT FX (TRANS)	Group Mode	Effect 1 On/Off ³⁻⁵	Select Effect1	Effect 1 On/Off ³⁻⁵	Select Effect1	-
	20	BEAT FX (FLANGER)		Effect 2 On/Off ³⁻⁵	Select Effect2	Effect 2 On/Off ³⁻⁵	Select Effect2	-
	21	BEAT FX (ECHO)		Effect 3 On/Off ³⁻⁵	Select Effect3	Effect 3 On/Off ³⁻⁵	Select Effect3	-
	22	BEAT FX (ROLL)		Effect1 parameter adjustment	Effect1 parameter adjustment	Effect1 parameter adjustment	Effect1 parameter adjustment	-
	23	LEVEL/DEPTH	Single Mode	Parameter 1 adjustment	Parameter 2 adjustment	Parameter 1 adjustment	Parameter 2 adjustment	-
	19	BEAT FX (TRANS)		Effect On/Off ³⁻⁵	Select effect	Effect On/Off ³⁻⁵	Select effect	-
	20	BEAT FX (FLANGER)		Reset all the parameters (RST button)	-	Reset all the parameters (RST button)	-	-
	21	BEAT FX (ECHO)		Effect button 1 On/Off	-	Effect button 1 On/Off	-	-
22	BEAT FX (ROLL)	Effect button 2 On/Off	-	Effect button 2 On/Off	-	-		
23	LEVEL/DEPTH	Parameter 1 adjustment	Parameter 1 adjustment	Parameter 1 adjustment	Parameter 1 adjustment	-		
24	TAP	Single/Group Switch	Single/Group Switch	Parameter 3 adjustment	Single/Group Switch	Parameter 3 adjustment	-	
Browse	25	TIME/AUTO CUE, QUANTIZE	Switch deck	-	Switch deck	-	-	
	26	BACK	Zoom in/out the browser	-	Zoom in/out the browser	-	-	
	27	SELECT PUSH	Turn Press	Move the cursor in the browser list Load a track	Move the cursor in the browser tree Open/Close a folder	Move the cursor in the track list Load a Remix Sets	Move the cursor in the browser tree Open/Close a folder	
Mixer	28	TRIM	GAIN	GAIN	GAIN	GAIN	-	
	29	HI	EQ (HI)	EQ (HI)	EQ (HI)	EQ (HI)	-	
	30	MID	EQ (MID)	EQ (MID)	EQ (MID)	EQ (MID)	-	
	31	LOW	EQ (LOW)	EQ (LOW)	EQ (LOW)	EQ (LOW)	-	
	32	COLOR	When SOUND COLOR FX [FILTER] is ON: Filter	When SOUND COLOR FX [FILTER] is ON: Filter	When SOUND COLOR FX [FILTER] is ON: Filter	When SOUND COLOR FX [FILTER] is ON: Filter	When SOUND COLOR FX [FILTER] is ON: Filter	-
	33	SOUND COLOR FX	NOISE - PITCH - FILTER	- - - - Filter Enable/Disable	- - - - Filter Enable/Disable	- - - - Filter Enable/Disable	- - - - Filter Enable/Disable	
	34	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	Channel Fader	
	35	Crossfader	Crossfader	Crossfader	Crossfader	Crossfader	Crossfader	
	36	Crossfader Curve Switch	Crossfader Curve Switch	Crossfader Curve Switch	Crossfader Curve Switch	Crossfader Curve Switch	Crossfader Curve Switch	
	37	CUE	Headphone monitor On/Off	Headphone monitor On/Off	Headphone monitor On/Off	Headphone monitor On/Off	Headphone monitor On/Off	
	38	DECK, PHONE/LINE switch	Input Switch ⁵	Input Switch ⁵	Input Switch ⁵	Input Switch ⁵	Input Switch ⁵	
	39	HEADPHONES MIXING	Headphone monitor balance ⁶	Headphone monitor balance ⁶	Headphone monitor balance ⁶	Headphone monitor balance ⁶	Headphone monitor balance ⁶	
	40	HEADPHONES LEVEL	Headphone volume adjustment ⁶	Headphone volume adjustment ⁶	Headphone volume adjustment ⁶	Headphone volume adjustment ⁶	Headphone volume adjustment ⁶	
	41	MASTER LEVEL	Master Volume adjustment	Master Volume adjustment	Master Volume adjustment	Master Volume adjustment	Master Volume adjustment	
	42	BOOTH MONITOR	Booth monitor adjustment	Booth monitor adjustment	Booth monitor adjustment	Booth monitor adjustment	Booth monitor adjustment	
	43	AUX LEVEL	AUX Volume adjustment	AUX Volume adjustment	AUX Volume adjustment	AUX Volume adjustment	AUX Volume adjustment	
	44	AUX (ON/OFF)	AUX On/Off	AUX On/Off	AUX On/Off	AUX On/Off	AUX On/Off	
45	MIC LEVEL	MIC LEVEL	MIC LEVEL	MIC LEVEL	MIC LEVEL	MIC LEVEL		
46	MIC EQ knob	MIC Equalizer	MIC Equalizer	MIC Equalizer	MIC Equalizer	MIC Equalizer		
47	MIC (ON/OFF) button	MIC (ON/OFF)	MIC (ON/OFF)	MIC (ON/OFF)	MIC (ON/OFF)	MIC (ON/OFF)		

*1 This feature is effective only if playback starts when the SAMPLER 1-3 button is pressed, but it is not effective if playback starts when the PLAY/PAUSE button is pressed
 *2 The combination of Remix Deck where a sample is stored and Track Deck where a sample is loaded should be set as follows: Deck C stores samples from Deck A and Deck D from Deck B

*3 When TRANS is activated in Single Mode, and either FLANGER, ECHO or ROLL is activated in Group Mode, the Effect Insert button on Traktor will be activated in the following combinations.
 Deck A: Effect Insert 1
 Deck B: Effect Insert 2
 Deck C: Effect Insert 3
 Deck D: Effect Insert 4

*4 When FX is used on Remix Deck, FX on the Slot Parameter should be enabled.



*5 If you want to use this unit as a controller for TRAKTOR, [DECK] should be selected.
 *6 Double click on Cue Mix knob and Cue Vol knob on the GUI of TRAKTOR PRO 2 to set them as in the figure below.

[Note: When using remotebox]
 (1) HOT CUE/SAMPLER cannot be switched by remotebox. Please switch them on XDJ-R1.
 (2) The needle search pad for Track Deck on TRAKTOR PRO2 is always enabled whether needle lock is enabled or not in the settings screen.
 (3) The needle search pad for Remix deck of TRAKTOR PRO2 is always disabled whether needle lock is enabled or not in the settings screen.
 (4) Software takeover is always enabled whether it is enabled or not in the settings screen.
 (5) The color of a beat size button for auto beat loop on remotebox is changed when it is tapped and when your finger is removed from the button, it will be changed to the original color regardless of the loop status

The portion highlighted in blue is the functions only for XDJ-R1. TRAKTOR cannot be controlled by these knobs and switches.