


Workaround when macOS does not recognize your DJ equipment

1. Connect your Mac with your DJ equipment using a USB cable. Turn on the power of the DJ equipment.
2. Open **[Finder]** and select **[Applications]** from **[Go]** on the menu bar.
3. Run **[Audio MIDI Setup]** in the **[Utilities]** folder.
4. Ensure that **[Audio MIDI Setup]** is shown on the menu bar. Then, select **[Show MIDI Window]** or **[Show MIDI Studio]** from **[Window]** drop-down menu.




An example of
macOS Sonoma

5. **[MIDI Studio]** window opens up.
➤ **[USB MIDI Device]** may appear, instead of the connected DJ equipment.
6. Switch **[Default]** to **[New Configuration]** from **[Configuration]** drop-down menu.

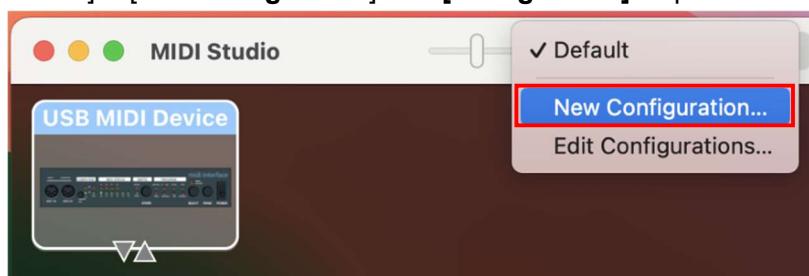

An example of macOS Sonoma

7. Make sure that **[USB MIDI Device]** is changed to the connected DJ equipment.
➤ An example when DDJ-FLX4 is connected to macOS Sonoma.

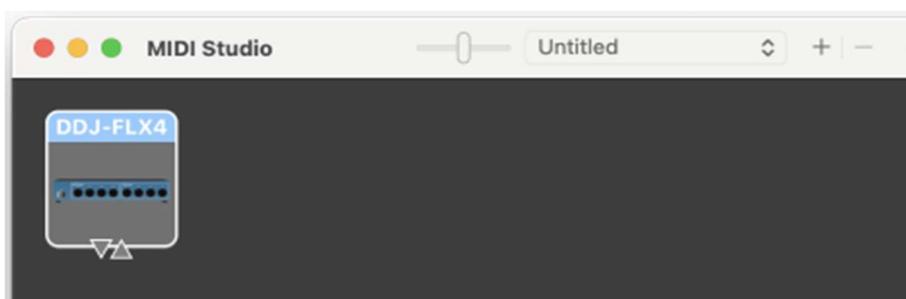

About Trademarks and Registered Trademarks

- Mac, macOS and Finder are registered trademarks of Apple Inc. in the U.S. and other countries.

Other stated company names, product names, technology names, etc. are the trademarks or registered trademarks of their respective owners.

© 2024 AlphaTheta Corporation. All rights reserved.

AlphaTheta CORPORATION

6F, Yokohama i-Mark Place, 4-4-5 Minatomirai, Nishi-ku, Yokohama, Kanagawa 220-0012 Japan