

# DDJ-200

## Hardware Diagram for rekordbox dj



Group	No.	Name	Function	+SHIFT
<b>1.DECK</b> *All the functions assigned on the right deck are the same as those on the left deck shown below.				
1	JOG DIAL	platter	Scratch (Vinyl mode on)	Search
		wheel side	Pitch bend (Vinyl mode off)*1	Pitch bend
2	BEAT SYNC		Beat Sync on/off	Tempo range
3	TEMPO		Tempo control	
4	PLAY/PAUSE		Play/Pause	
5	CUE		Set/Call cue, Back cue	Jump to track start
6	SHIFT		Shift	—

Group	No.	Name	Function	+SHIFT
<b>2.EFFECT</b>				
1	TRANSITION FX		—	—
<b>3.MIXER</b>				
1	EQ (HI, MID, LOW)		EQ (HI, MID, LOW)	
2	CFX		SOUND COLOR FX parameter (CH1,CH2)	
3	MASTER CUE		Master out monitor on/off	Switch panel display
4	CUE		Headphone monitor on/off	Tap BPM
5	CHANNEL FADER		Channel fader	Channel fader start
6	CROSS FADER		Crossfader	Crossfader start

Group	No.	Name	Function	+SHIFT
<b>4.PERFORMANCE PADS</b>				
1	PAD 1-8	mode		
		HOT CUE*2	Set/Call Hot Cue	Delete Hot Cue
		BEAT LOOP*3	Auto Beat Loop on/off	
		PAD FX 1*4	Pad FX1 on	
		SAMPLER*5	Sampler slot playback	Sampler slot playback stop Load a sample to sampler slot

\*1 Vinyl mode can not be turned on/off via the DDJ-200. But it can be turned on/off using keyboard shortcut of rekordbox.

\*2 The Hot Cue points are set to Performance Pads as follows.

Hot Cue A	Hot Cue B	Hot Cue C	Hot Cue D
Hot Cue E	Hot Cue F	Hot Cue G	Hot Cue H

\*3 The number of beats set to the Performance Pads are as follows.

1/4 beat	1/2 beat	1 beat	2 beats
4 beats	8 beats	16 beats	32 beats

\*4 Effects are set to Performance Pads as follows.

When the [SHIFT] button is not pressed

Effect A	Effect B	Effect C	Effect D
Effect E	Effect F	Effect G	Effect H

When the [SHIFT] button is pressed

Effect I	Effect J	Effect K	Effect L
Effect M	Effect N	Effect O	Effect P

\*5 Sampler slots are set to Performance Pads as follows.

Left deck

Slot 1	Slot 2	Slot 3	Slot 4
Slot 5	Slot 6	Slot 7	Slot 8

Right deck

Slot 9	Slot 10	Slot 11	Slot 12
Slot 13	Slot 14	Slot 15	Slot 16