


DDJ-ERGO

Hardware Diagram for TRAKTOR PRO 2.6.0

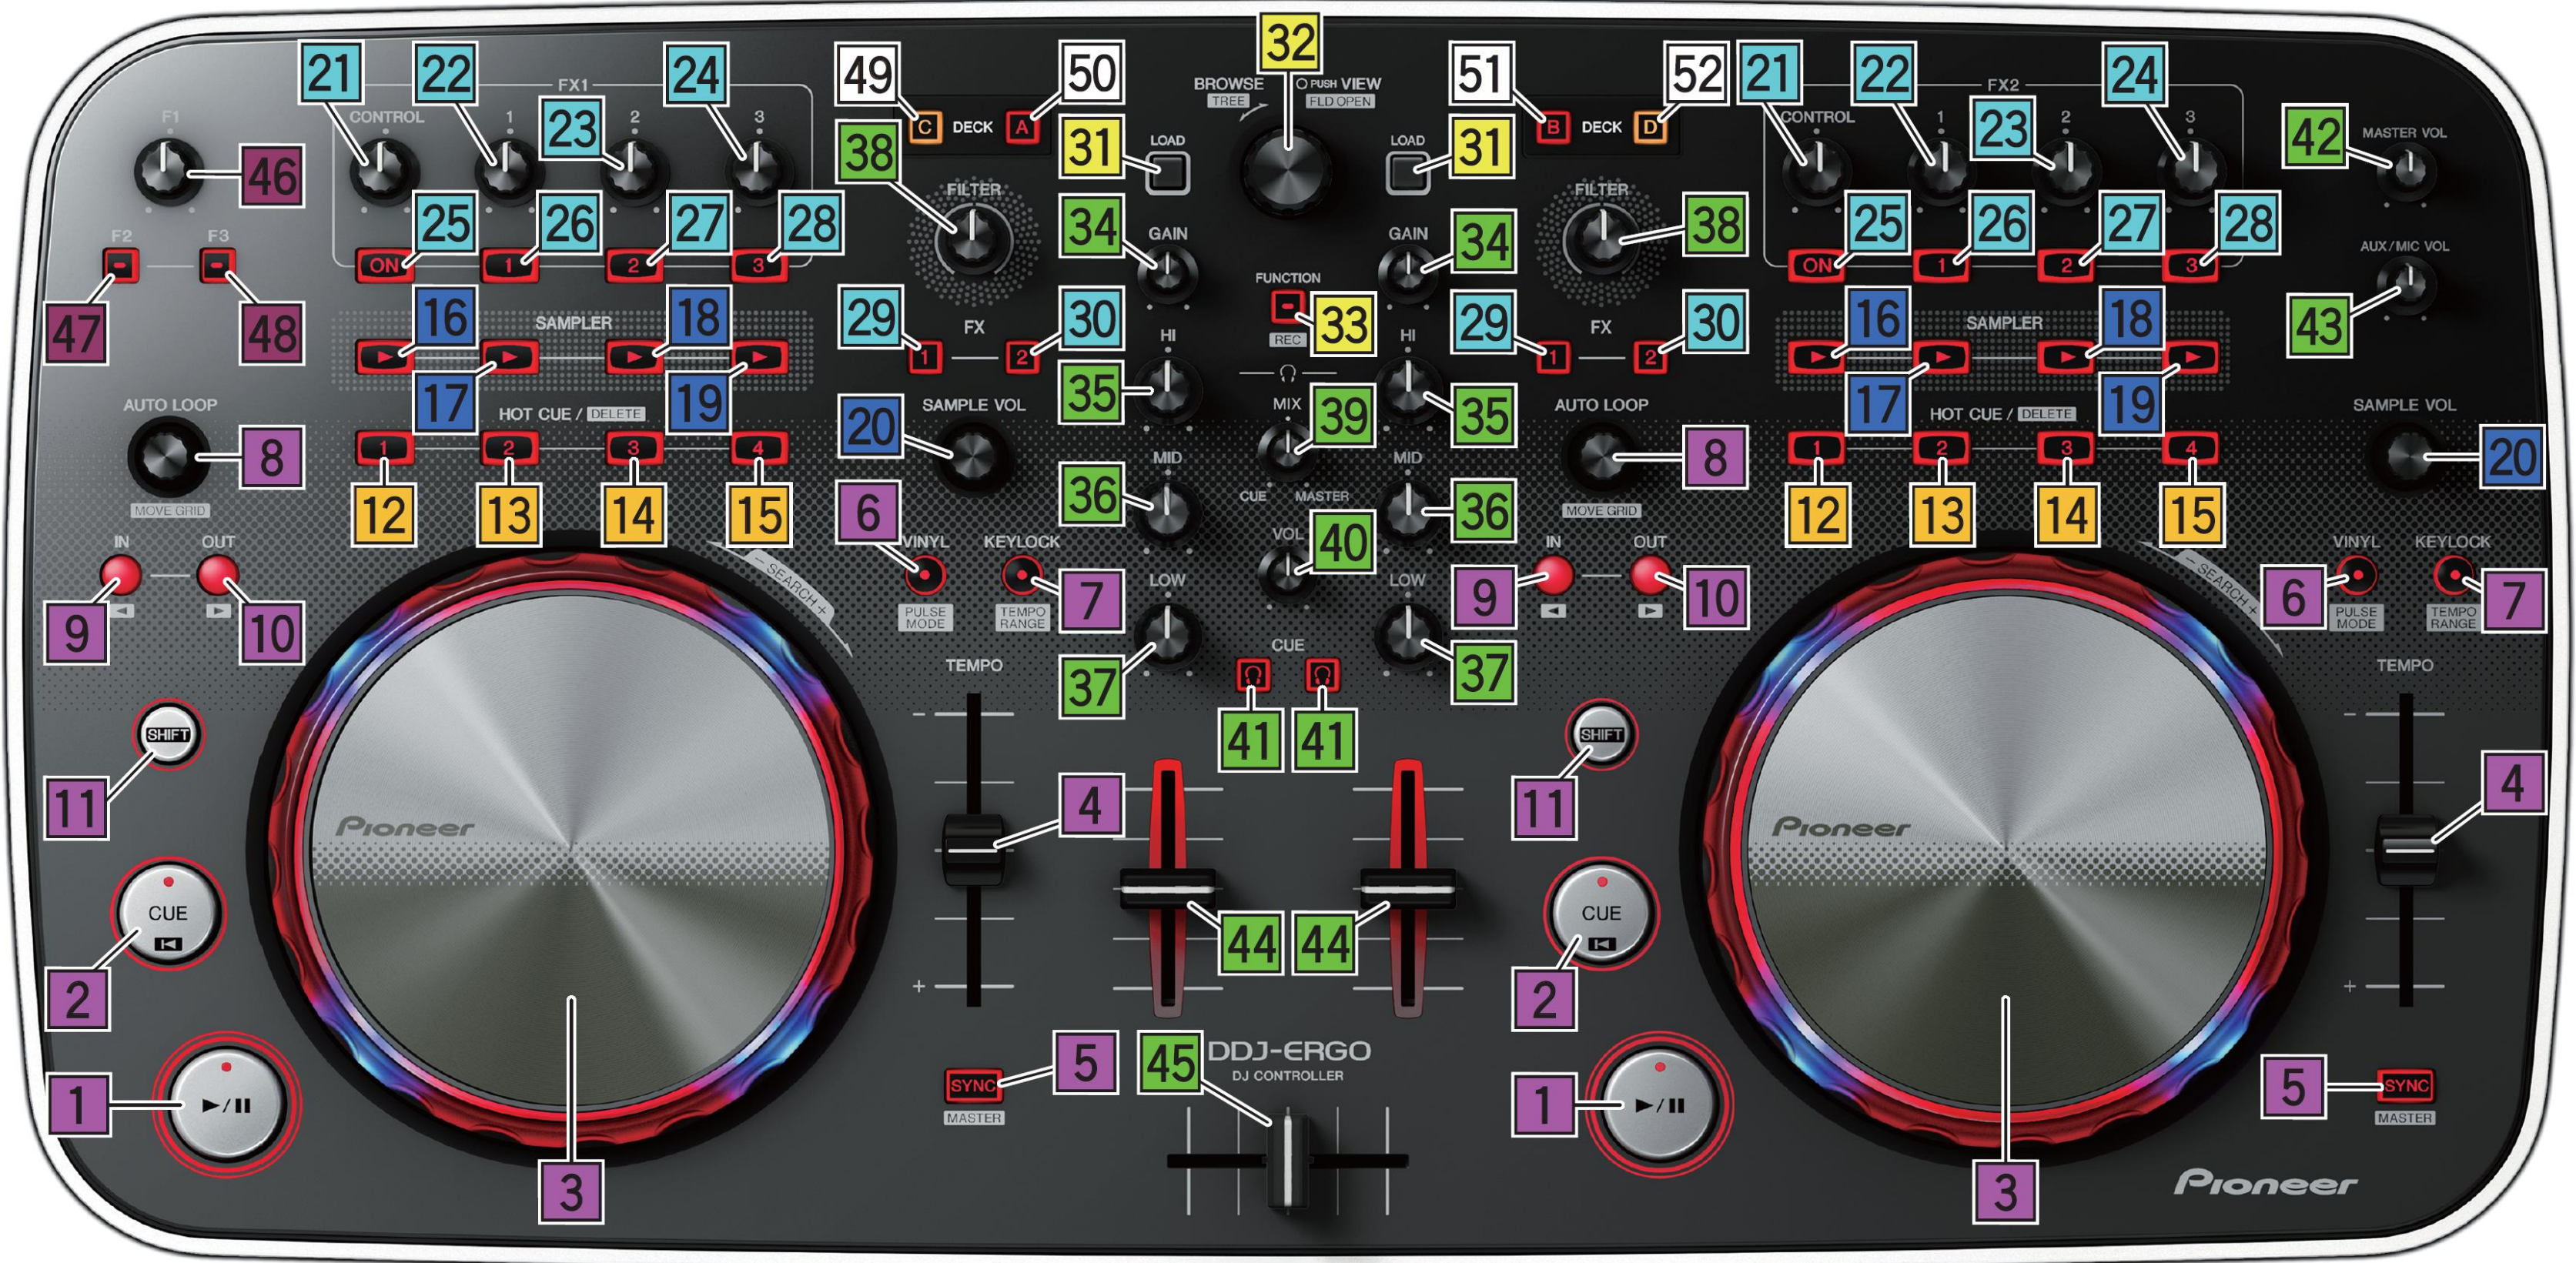

GROUP	NAME		Track Deck		Remix Deck	
	No.		FUNCTION	(+SHIFT)	FUNCTION	(+SHIFT)
TRANSPORT						
	1	►/	Play/Pause	-	Play/Stop All Slots	-
	2	CUE	Cue Set/Play , Cue Back	Jump To Track Start	Trigger Play All Slots	-
	3	JOG	top plate	Scratch (Vinyl On)	Scratch All Slots(Vinyl On)	-
				Pitch Bend (Vinyl Off)	Pitch Bend All Slots(Vinyl Off)	-
			outer wheel	Pitch Bend	Pitch Bend All Slots	-
	4	TEMPO	Tempo Control	-	Tempo Control	-
	5	SYNC	Sync On/Off	Master Deck Select	Sync On/Off	-
	6	VINYL	Vinyl Mode On/Off	Pulse Mode Change	Vinyl Mode On/Off	-
	7	KEYLOCK	Keylock On/Off	Tempo Range (6% , 10% , 16% , 100%)	Keylock On/Off All Slots	-
	8	AUTO LOOP	rotate	Auto Loop Size Select	Auto Loop Size Select All Slots	-
			press	Auto Loop On/Off	Auto Loop On/Off All Slots	-
	9	IN	Loop In	1 Beat Loop Move (Backward)	One-Shot Mode All Slots	Effect On/Off All Slots
	10	OUT	Loop Out	1 Beat Loop Move (Forward)	Looped Mode All Slots	Cue Monitor On/Off All Slots
	11	SHIFT	Shift	-	Shift	-
HOT CUE						
	12 1 15	1 ~ 4	Hot Cue 1 ~ 4	Delete Hot Cue 1 ~ 4	Sample Trigger Slot1 ~ 4	
					empty	Load From Deck
					loaded	Play
	16 1 19		Sample Play Slot1 ~ 4		playing	Retrigger
					playing (One-shot)	Stop
					playing (Looped)	Mute/Unmute
						Stop
	20	SAMPLE VOL	rotate	Sample Volume All Slots	Sample Volume All Slots	Sample Filter All Slots
			press	Sample Volume Reset All Slots	Sample Volume Reset All Slots	Sample Filter Reset All Slots

GROUP	NAME	FUNCTION	(+SHIFT)
BROWSE			
31 32 33	LOAD	Load	-
	BROWSE	Track Select	Folder Select
	VIEW	Browser Zoom	Folder Open/Close
	FUNCTION	Preview	Recording
MIXER			
34 35 36 37 38 39 40 41 42 43 44 45	GAIN	Input Gain	-
	HI	EQ (Hi)	-
	MID	EQ (Mid)	-
	LOW	EQ (Low)	-
	FILTER	Filter	-
	MIX	Monitor Balance	-
	VOL	Monitor Volume	-
	CUE	Monitor On/Off	-
	MASTER VOL	Master Out Volume	-
	AUX/MIC VOL	Aux/Mic Volume	-
46 47 48	F1	Loop Recorder Dry/Wet	-
	F2	Recording, Overdubbing	Loop Size Select
	F3	Loop Recorder Play/Stop	Delete, Undo/Redo
DECK CHANGE			
49 50 51 52	DECK C	Deck C Select	-
	DECK A	Deck A Select	-
	DECK B	Deck B Select	-
	DECK D	Deck D Select	-

GROUP	NAME		FX Group Mode		FX Single Mode	
	No.		FUNCTION	(+SHIFT)	FUNCTION	(+SHIFT)
EFFECT						
21 22 23 24 25 26 27 28 29 30	CONTROL		Dry/Wet Group	-	Dry/Wet Single	Effect Select
	1		Effect1 Amount	Effect1 Select	Effect Parameter1	-
	2		Effect2 Amount	Effect2 Select	Effect Parameter2	-
	3		Effect3 Amount	Effect3 Select	Effect Parameter3	-
	ON	-	-	Group/Single Mode Change	Effect On/Off	Group/Single Mode Change
	1		Effect1 On/Off	-	Effect Parameter Reset	-
	2		Effect2 On/Off	-	Effect Button1	-
	3		Effect3 On/Off	-	Effect Button2	-
	FX1		FX Unit1 Assign	-	FX Unit1 Assign	-
	FX2		FX Unit2 Assign	-	FX Unit2 Assign	-