

DJ Controller DDJ-ERGO



"TRAKTOR PRO 2" Setup Guide

Before start (Important)

Setup Wizard offers a simple setup procedure for TRAKTOR PRO 2 (Ver.2.1.2. or later).

Cautions

- For Windows users, DDJ-ERGO driver software is required to be installed in advance.
- All the current settings of TRAKTOR PRO 2 will be overwritten to default settings.

Please follow the instructions below before starting the setup procedures of TRAKTOR PRO 2.

- · Update the DDJ-ERGO's firmware to the latest version.
- · For Windows users:

Turn on the power of DDJ-ERGO first. Then, run the TRAKTOR software.

If the TRAKTOR PRO 2 is launched before the DDJ-ERGO is powered on, the DDJ-ASIO driver may not be recognized.

If the DDJ-ASIO driver is not recognized, turn off both the TRAKTOR PRO 2 and the DDJ-ERGO and repeat the above procedures.

Setup procedures

* The screenshots used in this guide may be different depending on the version of TRAKTOR PRO 2.

1. Connect the DDJ-ERGO to your computer by a USB cable and turn on the power of the controller using ON/OFF slide switch.

- 2. Launch TRACTOR PRO 2 after DDJ-ERGO starts. Note: Ensure that DDJ-ERGO starts before launching TRAKTOR PRO 2.
- ·

3. From the upper left "Help" menu, open "Start Setup Wizard" and click "Next."



4. When the message "Are you using an external controller?" is displayed, select "Yes" and click "Next."



5. When the messages "Choose your manufacturer" and "Choose you model" are displayed, select "Pioneer" and "DDJ ERGO" respectively. Then, click "Next."

*TRAKTOR	Setup Wizard
HARDWARE CONTROLLER S	SELECTION
Please select the manufacturer and below.	d model of your external controller from the list
Choose your manufacturer:	
Pioneer	
Choose your model:	
DDJ-ERGO	
Cancel	d Back Next ▶

6. The message "Are you using an external mixer?" is displayed. If you use one, select "Yes" and if you do not, select "No" and click "Next."

* TRAKTOR		Setup Wizard
MIXER SETUP		
TRAKTOR offers 2 options You can use the internal so mixer device.	of how to handle mixing of your audio Iftware mixer or connect TRAKTOR to	sources. your external
Are you using an externa	il mixer?	
No	•	
Cancel	4 Back	Next ▶

7. When "Select your setup" is displayed, select the decks you will use and click "Next."



8. When "Finish" is displayed in the lower right corner of the wizard, click "Finish" to complete the Setup Wizard.



9. Select [File] > [Controller Manger...]. Under [Device Setup], select the

[PIONEER_DDJ-ERGO] from [Device] menu and select the device corresponding to the DDJ-ERGO at [In-Port] and [Out-Port].

	161	erences						
	•	Audio Setup	Device Setup					
l	•	Output Bouting					In-Port	Out-Port
l		Inout Routing	Device	PIO	NEER_DDJ-EF	RGO - G 🔻	None	DJ-ERG 🔻
l		MIDI Clock		Add	i Ed	lit	DDJ-ERGO M	DI _{DCUS}
l		Looding					All Ports	
l		Torrent	Modifier State	1 0	203	0 4 0	5 0 6 0	7 0 8 0
l	Č	Transport	Assignment Table					
l	°	Decks Layout	Constant.	1/0		A sector		0
l	•	Decks	Deck Play	1/0	Assignment Dock A	Toggle	Ch01 Note B-1	Condi Con-
l	۰	Mixer	Deck Play	In	Deck B	Toggle	Ch02.Note.B-1	
l		Global Settings	Deck Play	In	Deck C	Toggle	Ch03.Note.B-1	
l		Effects	Deck Play	In	Deck D	Toggle	Ch04.Note.B-1	
l		Mix Recorder	Cue	In	Deck A	Hold	Ch01.Note.C0	
l		Loop Recorder	Cue		Deck B	Hold	Ch02.Note.C0	
l		Broadcasting	Cue		Deck C	Hold	Ch03.Note.C0	
l		Browser Details	Cue	In	Deck D	Hold	Ch04.Note.C0	
l		Layout Manager			-	_	10.000	
l		File Management	Add In Add Ou	Jt			Duplicate	Delete
110	0	Controller Manager	Device Mapping					
l			Comment					
l			Comment	_		_		
l			Mapping Details	м	odifier	Value	Modifier	Value
l			Modifier Conditions					
l								
l			Type of Controller					
l			Interaction Mode				Assignment	
l								
l								
l								
l								
l								
l								
l								
l								
100			- C.					
	s	etup Wizard Import	Export					Close
:1								

 The preferences settings may be overwritten to the default settings after completing the setup wizard depending on the versions of TRAKTOR PRO 2.
 When using DDJ-ERGO, the following audio settings are minimal requirements.
 Please ensure that you go through the setup procedures.

(1) Audio Setup

Audio Device: PIONEER DDJ ASIO (For Windows users) DDJ-ERGO (For Mac users)

Audio Setup	Audio Setup				
• Output Routing	Audio Device	Pioneer DDJ A	SIO	~	
• Input Routing	Sample Rate	44100 Hz	-		
MIDI Clock	Latency			1216	Settings
 Timecode Setup 					
 Loading 		27.6 ms	0.0 ms	27.6 ms	
 Transport 					
 Decks Layout 					

(2) Output Routing

- · Mixing Mode : Internal
- Output Monitor : L 3:DDJ-ERGO PHONE L
- R 4:DDJ-ERGO PHONE R • Output Master :
- L 1:DDJ-ERGO MASTER L R 2:DDJ-ERGO MASTER R

R 2.DDJ-ERGO MASIER

Audio Setup Mixing Mode				
Output Routing		📕 Internal 📄 External		
Input Routing Output Monitor	r I			
Timecode Setup		3: DDJ-ERGO PHONES L	-	Mono
• Loading	R	4: DDJ-ERGO PHONES R		
Transport Output Master				
O Decks Layout		1: DDJ-ERGO MASTER L	.	Mono
Track Decks Remix Decks		2: DDJ-ERGO MASTER R	•	

(3) Input Routing

* For those who do not use external input (AUX/MIC), the following setup is not needed.

• Input Aux

L(Mono) 1:DDJ-ERGO AUX/MIC L R 2:DDJ-ERGO AUX/MIC R

 Audio Setup 	Input Deck A		
 Output Routing 	L (Mono) 🔤 - no	ot connected -	
Input Routing	R - no	ot connected -	
MIDI Clock			
 Timecode Setup 	Input Deck B		
Loading	L (Mono) - no	ot connected -	
• Transport	R - no	ot connected -	
Decks Layout			
o Track Decks	Input Deck C		
Development	L (Mono) - no	ot connected -	
o Remix Decks	R - no	ot connected -	
 Mixer 			
 Global Settings 	Input Deck D		
Effects	L (Mono) 1: [DDJ-ERGO AUX/MIC L	
Mix Recorder	R 2:0	DJ-ERGO AUX/MIC R	
 Loop Recorder 			
Broadcasting	Input FX Send (Ext)		
Browser Details	L (Mono) - no	ot connected - 🛛 🔻	
 Layout Manager 	R - no	ot connected -	
File Management			
Controller Manager	Input Aux		
Controller Manager	L (Mono) 1: [DDJ-ERGO AUX/MIC L	
	R 2:0	DDJ-ERGO AUX/MIC R	

(4) Mix Recorder

· Source : Internal

Audio Setup	Source	
 Output Routing 	Source	🖬 Internal 🔲 External
 Input Routing 	External Input	
MIDI Clock		
 Timecode Setup 	File	· · · · · · · · · · · · · · · · · · ·
• Loading	Directory	C:\Documents and Settings\0067645\My L
• Transport	Prefix	
 Decks Layout 	Split File at Size	650 MB 🔻
• Track Decks		
Remix Decks		
• Mixer		
 Global Settings 		
• Effects		
Mix Recorder		

11. Close the TRAKTOR PRO 2, power off the DDJ-ERGO and turn it on again, and reboot the TRAKTOR PRO 2.

Now, you have completed all the settings.

- To operate TRAKTOR PRO 2 using the buttons of DDJ-ERGO, see the separate "Hardware Diagram for TRAKTOR PRO 2".
- TRAKTOR PRO 2 is a product of Native Instruments.
- In principle, Pioneer is not in the position of answering any inquiries on the usage of the software itself. For further details, please refer to the manual of TRAKTOR and other resources.

About trademarks and registered trademarks

- TRAKTOR is the registered trademark of Native Instruments GmbH.
- Microsoft[®], Windows Vista[®], Windows[®], and Internet Explorer[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States of America and other countries.
- Apple, Macintosh, Mac OS, Safari, iTunes, and Finder are trademarks of Apple Inc., registered in the U.S. and other countries.

©2012 PIONEER CORPORATION all rights reserved. PIONEER CORPORATION

1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan