


DDJ-ERGO

Hardware Diagram vjay for iPad

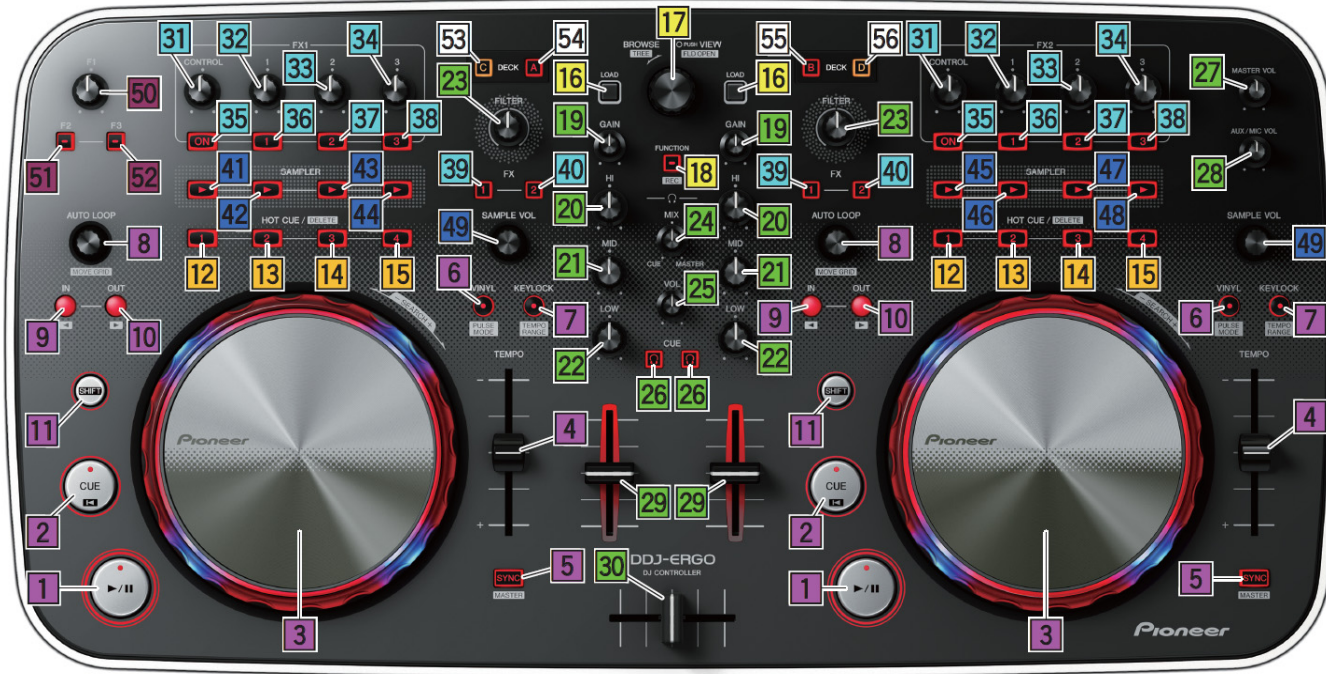

GROUP	NAME	FUNCTION	(+SHIFT)
TRANSPORT			
1	▶/	Play / Pause	Echo Brake
2	CUE	Set/call a CUE	Jump to the beginning
3	JOG	top plate	Scratch (when Vinyl is on) Search (when Vinyl is off)
		outer wheel	Pitch Bend
4	TEMPO	Tempo *1	Tempo (Tweak) *1
5	SYNC	Sync	-
6	VINYL	Toggle Scratch Mode / Jog Seek Mode	Switch Pulse mode
7	KEY LOCK	Key Lock	-
8	AUTO LOOP	turn	Loop length (half / double)
		press	Loop On/Off
9	IN	Loop In	Skip backward
		Half (during Loop)	Skip backward
10	OUT	Loop out	Skip forward
		Unloop (during Loop)	Skip forward
11	SHIFT	-	-
HOT CUE			
12	1	Set Cue 1	Jump to Cue 1
13	2	Set Cue 2	Jump to Cue 2
14	3	Set Cue 3	Jump to Cue 3
15	4	Set Cue 4	Jump to Cue 4
BROWSE			
16	LOAD	While Library is displayed: Load a song (Close Library)	-
		long press	Close Library if open
17	BROWSE	(turn)	Browse ("Videos" tab only)
		(press)	-
18	FUNCTION	-	Recording On/Off
MIXER			
19	GAIN	Gain	-
20	HI	EQ (HI)	-
21	MID	EQ (MID)	-
22	LOW	EQ (LOW)	-
23	FILTER	High pass/Low pass filter	-
24	MIX	Headphone Cue Mix	-
25	VOL ¹²	Headphone Cue Volume	-
26	CUE	Headphone Cue monitor on/off	-
27	MASTER VOL ¹²	Master Volume	-
28	AUX / MIC VOL	-	-
29	Channel fader	Channel fader	-
30	Crossfader	Crossfader	-

GROUP	NAME	FUNCTION	(+SHIFT)
EFFECT			
31	CONTROL	Wet / Dry	-
32	1	FX 1 Parameter	-
33	2	FX 2 Parameter	-
34	3	FX 3 Parameter	-
35	FX ON	FX 1 On / All FX Off	Instant FX: Punch (hold)
36	1	FX 1 On/Off (default : Crush)	Instant FX: Flanger (hold)
37	2	FX 2 On/Off (Strobe)	Instant FX: Crush (hold)
38	3	FX 3 On/Off (Twirl)	Instant FX: Twist (hold)
39	FX1	Instant FX: Absorb (hold)	Instant FX: Absorb (hold)
40	FX2	Instant FX: Drift (hold)	Instant FX: Drift (hold)
SAMPLER			
41	▶	-	Bounce Loop 1/16 (1)
42	▶	-	Bounce Loop 1/8 (1)
43	▶	-	Bounce Loop 1/4 (1)
44	▶	-	Bounce Loop 1/2 (1)
45	▶	-	Bounce Loop 1/16 (2)
46	▶	-	Bounce Loop 1/8 (2)
47	▶	-	Bounce Loop 1/4 (2)
48	▶	-	Bounce Loop 1/2 (2)
49	SAMPLE VOL	turn	-
		press	-
OTHER			
50	F1	Turntable Brake Duration	Turntable Brake Duration
51	F2	Auto-Transition Left	-
52	F3	Auto-Transition Right	-
DECK CHANGE			
53	DECK C	N/A	-
54	DECK A	Deck A Select	-
55	DECK B	Deck B Select	-
56	DECK D	N/A	-

*1 The direction (+/-) of the Slider is changeable. To change it, open Preferences, select the General tab, and check or uncheck the slider setting at the Turntable section.
 *2 The GUI counterpart on vjay for iPad is not synced.

[Note] Please use your iPad to control any features other than listed in the above hardware diagram.