


DDJ-ERGO

Hardware Diagram for Virtual DJ

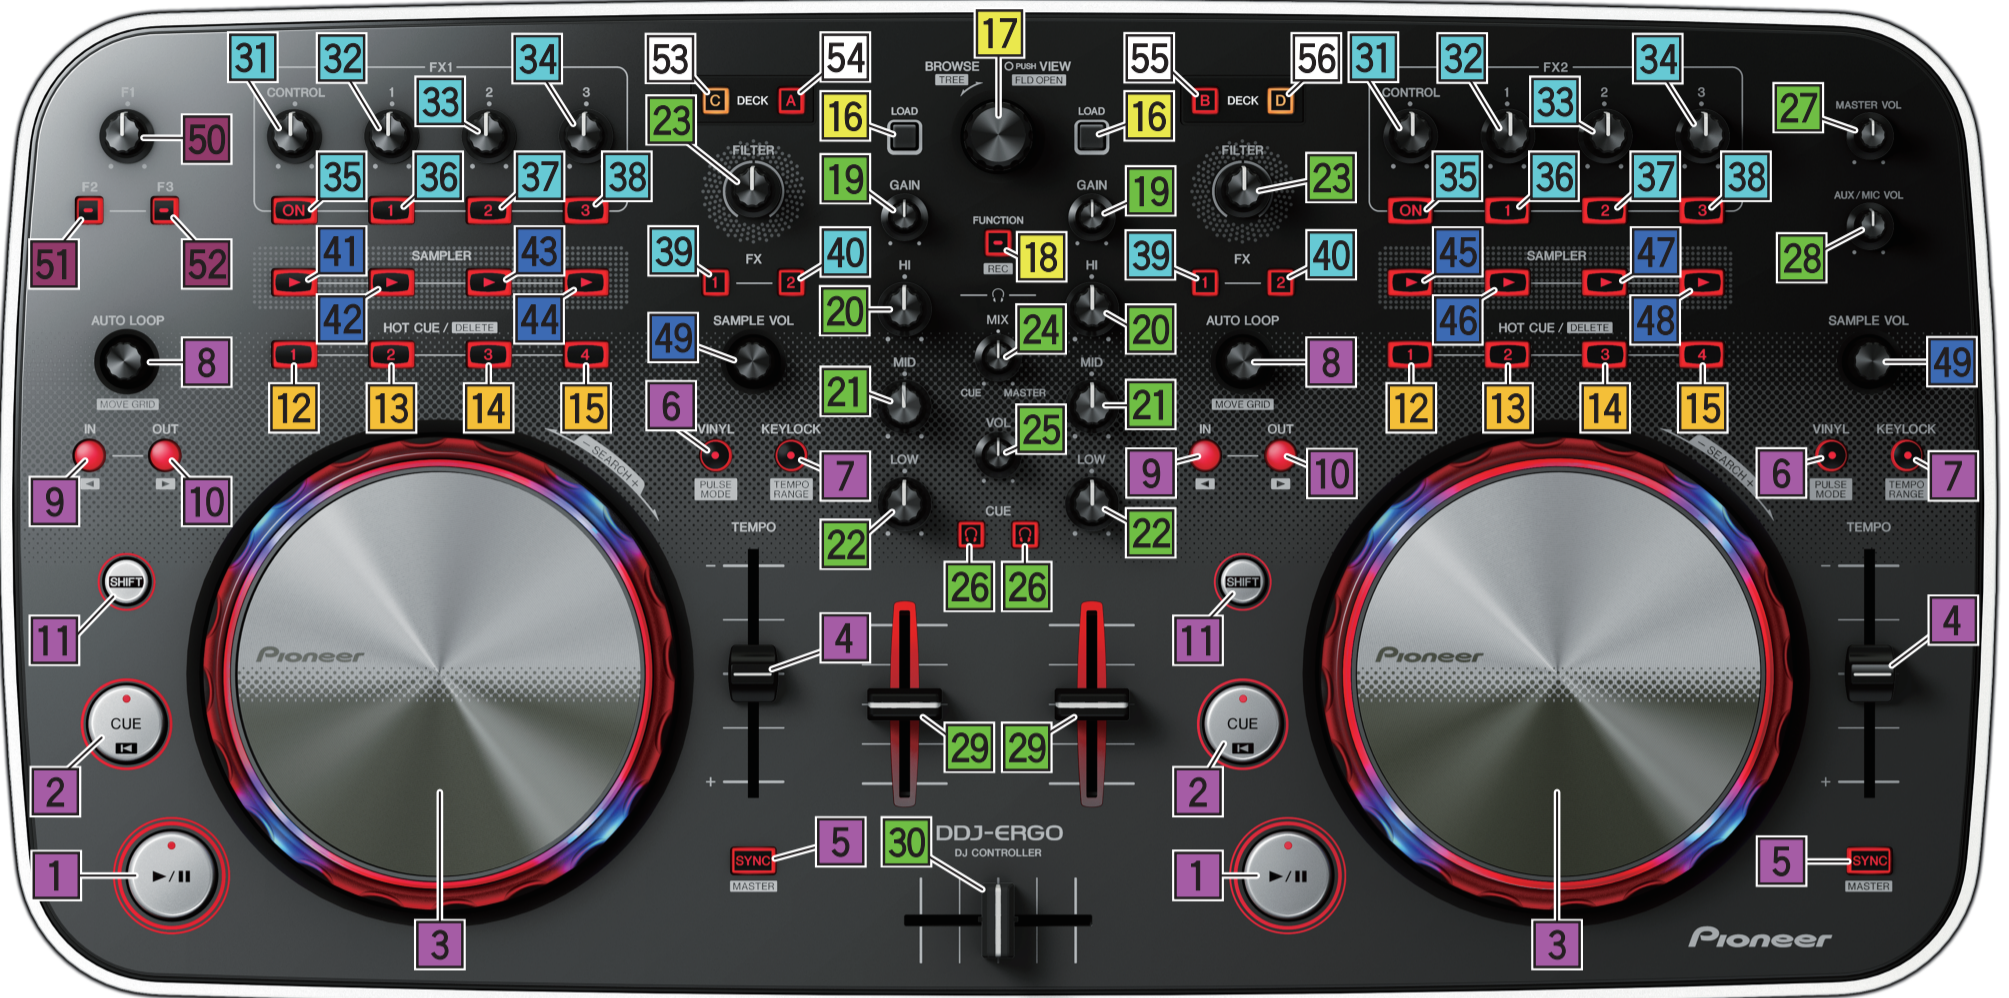

GROUP	NAME	FUNCTION	(+SHIFT)
No.			
TRANSPORT			
1	▶/	Play/Pause	-
2	CUE	Cue Set/Play, Cue Back	Jump To Track Start
3	top plate	Scratch(Vinyl On), Pitch Bend(Vinyl Off)	Search
	outer wheel	Pitch Bend	-
4	TEMPO	Tempo Control	-
5	SYNC	Beat Sync	Master Deck Select
6	VINYL	Vinyl Mode On/Off	Pulse Mode Change
	KEYLOCK	Keylock On/Off	Tempo Range (6%, 10%, 16%, 100%)
8	rotate	Auto Loop Size Select / Half and Double	Move Grid*
	press	Auto Loop On/Off	Reloop
9	IN	Loop In	1 Beat Loop Move (Backward)
10	OUT	Loop Out	1 Beat Loop Move (Forward)
11	SHIFT	Shift	-
HOT CUE			
12	1	Hot Cue 1	Delete Hot Cue 1
13	2	Hot Cue 2	Delete Hot Cue 2
14	3	Hot Cue 3	Delete Hot Cue 3
15	4	Hot Cue 4	Delete Hot Cue 4
BROWSE			
16	LOAD	Load	-
17	BROWSE	Track Select	Folder Select
	VIEW	Browser Zoom	Folder Open/Close
18	FUNCTION	Center Panel Change	Recording
MIXER			
19	GAIN	Input Gain	-
20	HI	EQ (Hi)	-
21	MID	EQ (Mid)	-
22	LOW	EQ (Low)	-
23	FILTER	Filter	-
24	MIX	Monitor Balance	-
25	VOL	Monitor Volume	-
26	CUE	Monitor On/Off	-
27	MASTER VOL	Master Out Volume	-
28	AUX/MIC VOL	Aux/Mic Volume	-
29	CH FADER	Channel Fader	-
30	CROSSFADER	Crossfader	-

GROUP	NAME	FUNCTION	(+SHIFT)
No.			
EFFECT			
31	CONTROL	Effect Select	-
32	1	Effect Parameter 1	Effect Parameter 4*
33	2	Effect Parameter 2	Effect Parameter 5*
34	3	Effect Parameter 3*	Effect Parameter 6*
35	ON	Effect On/Off	-
36	1	Effect Button 1	Effect Button 4
37	2	Effect Button 2	Effect Button 5
38	3	Effect Button 3	Effect Button 6*
39	FX1	BeatGrid Effect On/Off	-
40	FX2	Flanger Effect On/Off	-
SAMPLER			
41	▶	Sampler 1 Play/Stop	Sampler 1 Stutter
42	▶	Sampler 2 Play/Stop	Sampler 2 Stutter
43	▶	Sampler 3 Play/Stop	Sampler 3 Stutter
44	▶	Sampler 4 Play/Stop	Sampler 4 Stutter
45	▶	Sampler 5 Play/Stop	Sampler 5 Stutter
46	▶	Sampler 6 Play/Stop	Sampler 6 Stutter
47	▶	Sampler 7 Play/Stop	Sampler 7 Stutter
48	▶	Sampler 8 Play/Stop	Sampler 8 Stutter
49	SAMPLE VOL	rotate	Sampler Volume
	VOL	press	Sampler Select
VIDEO			
50	F1	Video Effect Parameter	-
51	F2	Video Transition On/Off	Video Transition Select
52	F3	Video Effect On/Off	Video Effect Select
DECK CHANGE			
53	DECK C	Deck C Select	-
54	DECK A	Deck A Select	-
55	DECK B	Deck B Select	-
56	DECK D	Deck D Select	-

* Virtual DJ Pro version only

