


DDJ-ERGO

Hardware Diagram for TRAKTOR PRO 2

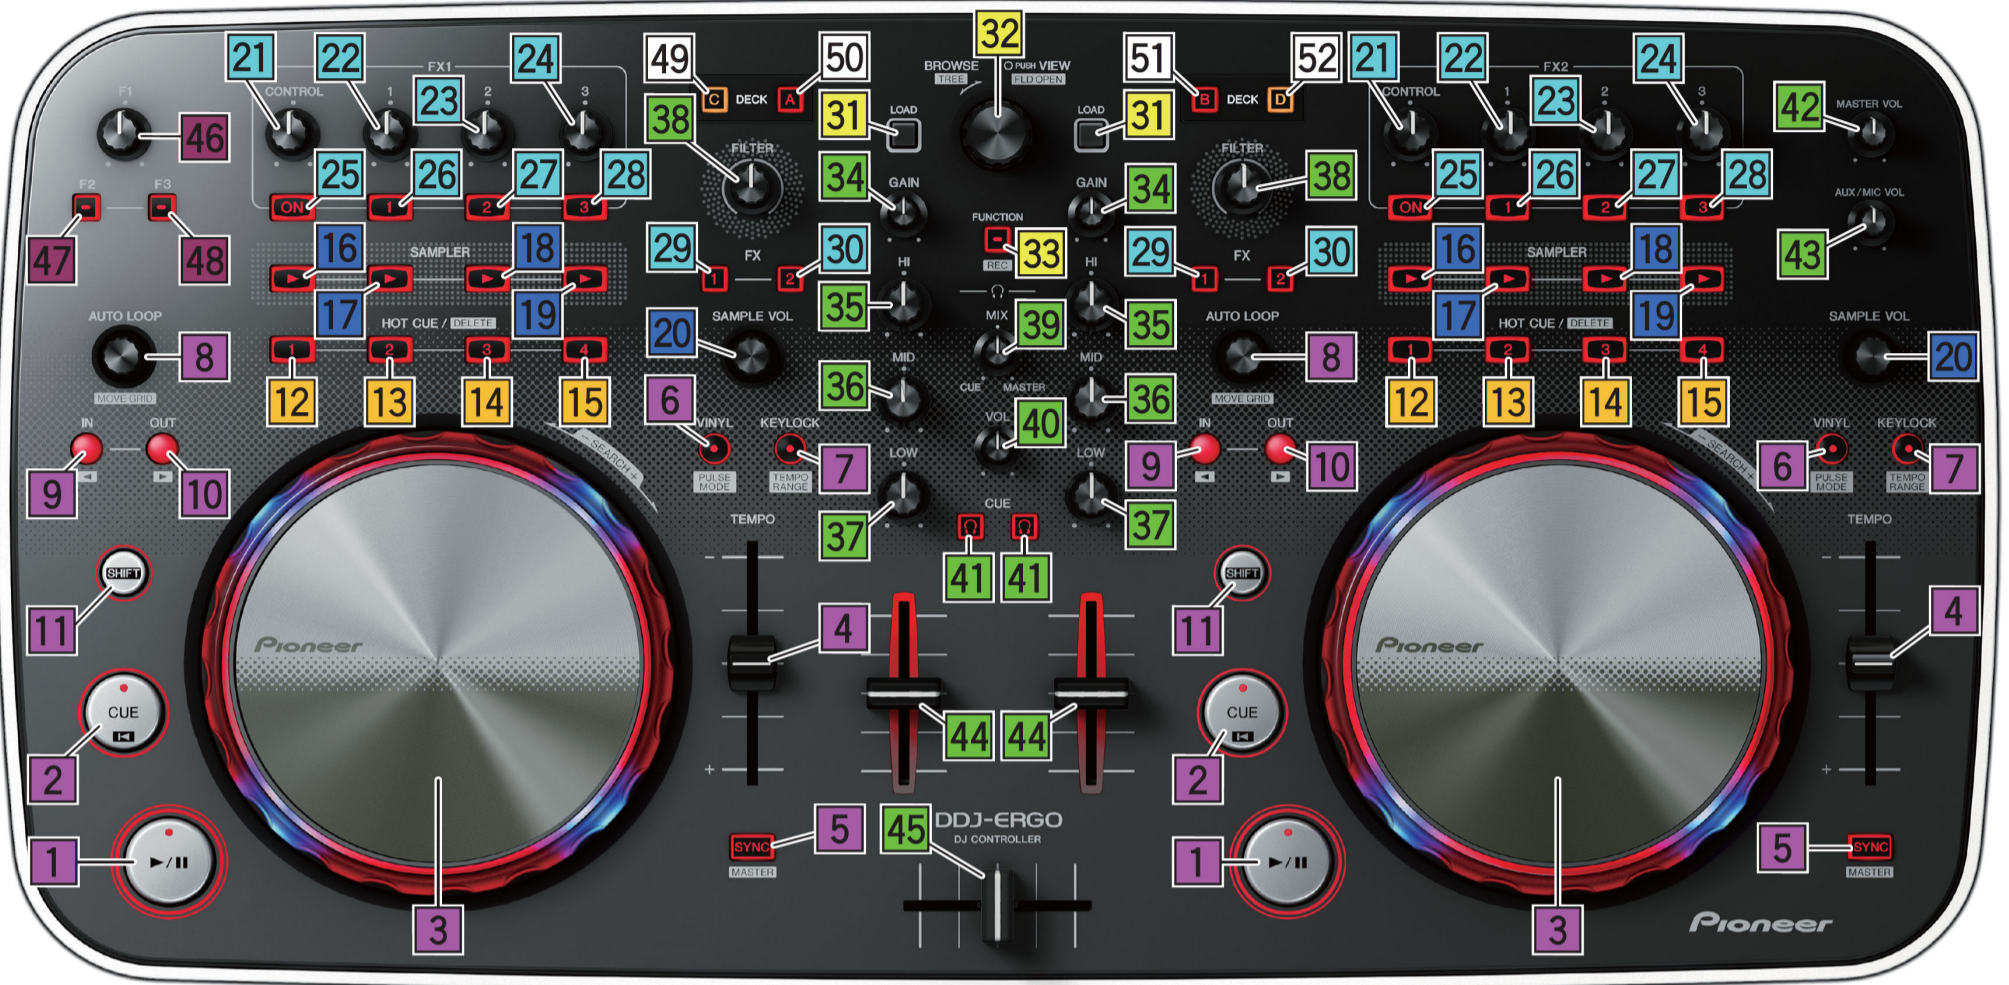

GROUP No.	NAME	Track Deck		Remix Deck (Sample Deck)	
		FUNCTION	(+SHIFT)	FUNCTION	(+SHIFT)
TRANSPORT					
1	▶/	Play/Pause	-	Play/Stop All Slots	-
2	CUE	Cue Set/Play, Cue Back	Jump To Track Start	Trigger Play All Slots	-
3	JOG	top plate	Scratch (Vinyl On) Pitch Bend (Vinyl Off)	*1 Scratch All Slots (Vinyl On) Pitch Bend All Slots (Vinyl Off)	-
		outer wheel	Pitch Bend	*2 Seek All Slots	-
4	TEMPO	Tempo Control	-	*1 Tempo Control All Slots	-
5	SYNC	Beat Sync	Master Deck Select	Phase Sync All Slots	-
6	VINYL	Vinyl Mode On/Off	Pulse Mode Change	*1 Vinyl Mode On/Off	-
7	KEYLOCK	Keylock On/Off	Tempo Range (6%, 10%, 16%, 100%)	Keylock On/Off All Slots	-
8	AUTO LOOP	rotate	Auto Loop Size Select Half & Double	Loop Size Half & Double All Slots	-
		press	Auto Loop On/Off	Loop Active	Loop Size Reset All Slots
9	IN	Loop In	1 Beat Loop Move (Backward)	One-Shot Mode All Slots	Effect On/Off All Slots
10	OUT	Loop Out	1 Beat Loop Move (Forward)	Looped Mode All Slots	Cue Monitor On/Off All Slots
11	SHIFT	Shift	-	Shift	-
HOT CUE					
12	1~4	Hot Cue 1~4	Delete Hot Cue 1~4	Sample Trigger Slot 1~4	Individual Control Mode
15	?			empty	Load From Deck On/Off
				loaded	*1 Play *2 Play (Hold)
				playing	Retrigger
SAMPLER Access Remix Deck (Sample Deck)					
16	?			Sample Play Slot 1~4	
				empty	Load From Deck Load From List
				loaded	Play Delete
				playing	Retrigger Stop
19	?			playing (One-shot)	Stop
				playing (Looped)	Mute/Unmute Stop
20	SAMPLE VOL	rotate	Sample Volume All Slots Sample Filter All Slots	Sample Volume All Slots Sample Filter All Slots	Sample Filter All Slots
		press	Sample Volume Reset All Slots Sample Filter Reset All Slots	Sample Volume Reset All Slots Sample Filter Reset All Slots	Sample Filter Reset All Slots

GROUP No.	NAME	FUNCTION	(+SHIFT)
BROWSE			
31	LOAD	Load	-
32	BROWSE	Track Select	Folder Select
	VIEW	Browser Zoom	Folder Open/Close
33	FUNCTION	Preview	Recording
MIXER			
34	GAIN	Input Gain	-
35	HI	EQ (Hi)	-
36	MID	EQ (Mid)	-
37	LOW	EQ (Low)	-
38	FILTER	Filter	-
39	MIX	Monitor Balance	-
40	VOL	Monitor Volume	-
41	CUE	Monitor On/Off	-
42	MASTER VOL	Master Out Volume	-
43	AUX/MIC VOL	Aux/Mic Volume	-
44	CH FADER	Channel Fader	-
45	CROSSFADER	Crossfader	-
LOOP RECORDER			
46	F1	Loop Recorder Dry/Wet	-
47	F2	Recording, Overdubbing	Loop Size Select
48	F3	Loop Recorder Play/Stop	Delete, Undo/Redo
DECK CHANGE			
49	DECK C	Deck C Select	-
50	DECK A	Deck A Select	-
51	DECK B	Deck B Select	-
52	DECK D	Deck D Select	-

GROUP No.	NAME	FX Group Mode		FX Single Mode	
		FUNCTION	(+SHIFT)	FUNCTION	(+SHIFT)
EFFECT					
21	CONTROL	Dry/Wet Group	-	Dry/Wet Single	Effect Select
22	1	Effect1 Amount	Effect1 Select	Effect Parameter1	-
23	2	Effect2 Amount	Effect2 Select	Effect Parameter2	-
24	3	Effect3 Amount	Effect3 Select	Effect Parameter3	-
25	ON	-	Group/Single Mode Change	Effect On/Off	Group/Single Mode Change
26	1	Effect1 On/Off	-	Effect Parameter Reset	-
27	2	Effect2 On/Off	-	Effect Button1	-
28	3	Effect3 On/Off	-	Effect Button2	-
29	FX1	FX Unit1 Assign	-	FX Unit1 Assign	-
30	FX2	FX Unit2 Assign	-	FX Unit2 Assign	-

*1 : Function of Remix Deck on TRAKTOR v2.5.0.
*2 : Function of Sample Deck on TRAKTOR v2.1.2 and v2.1.3.