

DDJ-GRV6

Hardware Diagram for Serato DJ Pro



Group	No.	Name	Function	+SHIFT	
1.DECK * Functions are the same for both left and right decks.					
	1	JOG	platter	Scratch (Vinyl mode on) Pitch bend (Vinyl mode off)	Super fast search
			wheel side	Pitch bend	—
		2	MASTER TEMPO	Key lock on/off	Tempo range
	3	TEMPO	Tempo control		
	4	BEAT SYNC	Sync on	Sync off	
	5	KEY SYNC	Key Sync on/off *1	Key Reset *1	
	6	PLAY/PAUSE	Play/Pause	Stutter	
	7	CUE	Set/Call cue, Back cue	Jump to track start	
	8	Shift	Shift	—	
	9	SLIP	Slip mode on/off	Vinyl mode on/off	
	10	QUANTIZE *2	Quantize on/off	Tap BPM	
	11	LOOP IN / 4 BEAT	loop off	Loop in	—
			loop on	Loop in adjustment	—
			long press	4 Beat Loop on	—
	12	LOOP OUT	loop off	Loop out	—
			loop on	Loop out adjustment	—
			loop on	Loop active on/off	
	13	RELOOP / EXIT	loop off	Reloop	
			loop on	Loop exit	
			loop off	Select the loop slot	—
14	CUE/LOOP CALL ◀	loop on	Loop cutter	—	
		loop on		—	
		loop off	Select the loop slot	—	
15	CUE/LOOP CALL ▶	loop off		—	
		loop on	Loop double	—	
		loop on	Lock / Unlock the loop slot	Delete the loop slot	
16	MEMORY				
17	DECK 1-4	Deck select		—	
		Dual Deck mode *3			
2.GROOVE CIRCUIT (STEMS FX)					
	1	GAIN (LEVEL/DEPTH)	Level/Depth for Stem FX via [DRUM RELEASE (FX)] lever		
	2	DRUM SWAP 1 (VOCAL)	Arm the Vocal Stem for Stem FX	Set Stem FX type to Echo Out	
	3	DRUM SWAP 2 (MELODY)	Arm the Melody Stem for Stem FX	Set Stem FX type to Roll Out	
	4	DRUM SWAP 3 (BASS)	Arm the Bass Stem for Stem FX	Set Stem FX type to Braker	
	5	DRUM SWAP 4 (DRUMS)	Arm the Drums Stem for Stem FX	Set Stem FX type to Delay	
	6	CAPTURE (1/2 BEAT)	Beat setting for Stem FX	Stems Roll/Trans latch function on/off	
	7	DRUM ROLL (STEMS ROLL)	Stems Roll on/off	Stems Trans on/off	
	8	DRUM RELEASE (FX)	Stem FX on/off	—	

Group	No.	Name	Function	+SHIFT
3.EFFECT				
	1	SOUND COLOR FX	Sound Color FX parameter	
	2	SOUND COLOR FX ON/OFF	Sound Color FX on/off	FX Select
	3	BEAT ◀ *4	Select beats for Beat FX	BPM auto mode on
	4	BEAT ▶ *4	Select beats for Beat FX	BPM tap mode on
	5	BEAT FX SELECT	Select Beat FX	
	6	BEAT FX CH SELECT 1	Select Beat FX channel (CH1)	
	7	BEAT FX CH SELECT 2	Select Beat FX channel (CH2)	
	8	BEAT FX CH SELECT 3	Select Beat FX channel (CH3)	
	9	BEAT FX CH SELECT 4	Select Beat FX channel (CH4)	
	10	BEAT FX CH SELECT SP	Select Beat FX channel (SAMPLER)	
	11	BEAT FX CH SELECT MST	Select Beat FX channel (MASTER)	
	12	LEVEL/DEPTH	Beat FX parameter	
	13	BEAT FX ON/OFF	Beat FX on/off	—
4.MIXER				
	1	TRIM	Trim	
	2	EQ (HI, MID, LOW)	EQ mode	EQ (HI, MID, LOW)
			Stems Level mode	Each stem (Vocal, Melody and Bass, Drums) volume
	3	CH CUE	Headphones monitor on/off	Switch EQ mode / Stems Level mode
	4	CHANNEL FADER	Channel fader	Channel fader start
	5	CROSSFADER	Crossfader	Crossfader start
	6	MASTER LEVEL	Master Level	
	7	BOOTH LEVEL	Booth Level	
	8	MASTER CUE	Master out monitor on/off	—
	9	Android MONO/STEREO *5	—	
	10	MIC ATT.	Mic Attenuator	
	11	HEADPHONES LEVEL	Monitor level	
	12	HEADPHONES MIX	Monitor balance	
	13	MIC LEVEL	Mic Level	

Group	No.	Name	Function	+SHIFT	
5.BROWSE					
	1	SMART ROTARY SELECTOR	rotate	Library scroll	Library fast scroll
			Tilt forward or backward	Library scroll	---
			Tilt to the left	Toggles focus between Library and Crate, Close a folder	---
			Tilt to the right	Toggles focus between Library and Crate, Open a folder	---
			press	Toggles focus between Library and Crate, Open a folder	---
	2	DISCOVER	Cycle Files/Browse/Prepare/History	---	
	3	BACK	Toggles focus between Library and Crate, Close a folder	---	
	4	VIEW	Toggle through Serato DJ Pro view mode	---	
	5	PREVIEW	Add a track in the Prepare Panel	---	
	6	LOAD 1-4	Load a track	---	
			press twice	Instant Doubles	---
6.PERFORMANCE PADS					
	1	PAD *6	mode		
			HOT CUE	Set/Call Hot Cue	Delete Hot Cue
			PITCH PLAY	Play Cue Point over variable pitch range	Select Hot Cue point
			STEMS	Output setting of each Stem, Effect on/off to Stem	---
			PAD FX	Pad FX on	---
			BEAT JUMP	Move Playback position	---
			AUTO LOOP	Auto Loop on/off	---
			SAMPLER	Playback sampler slot	Stop sampler slot Load sample to sampler slot
			KEY SHIFT	Change the key, with the sound pitch assigned to that pad	---
	2	HOT CUE	Hot Cue mode	Pitch Play mode *1	
	3	STEMS	Stems mode	Pad FX mode	
	4	BEAT JUMP	Beat Jump mode	Auto Loop mode	
	5	SAMPLER	Sampler mode	Key Shift mode *1	

- *1 Key Sync, Key Reset, Pitch Play mode and Key Shift mode are functions of Pitch 'n Time DJ. To use these function, you'll need to buy and activate it first.
- *2 Pressing this button while in Off mode (Power Management) will cancel Off mode. This operation is limited to the button of the deck on the right side.
- *3 To enter Dual Deck mode on left deck, press the [DECK 3] button while pressing the [DECK 1] button or press the [DECK 1] button while pressing the [DECK 3] button. To cancel Dual Deck mode on left deck, press the [DECK 1] button or [DECK 3] button.
- * In the right deck, Use the [DECK 2] button and [DECK 4] button to enter Dual Deck mode.
- *4 The parameters changed by the [BEAT ◀] or [BEAT ▶] buttons can be checked by the illuminated values above the buttons.
- When set to 2 beats, [1] and [4] light up
 - When set to more than 32 beats, [32] flashes
 - When set to less than 1/4 beat, [1/4] flashes
 - When the set number of beats is a minus number, the number flashes rapidly
 - When Reverb and Pitch are selected, each indicator will light up as shown below :

Reverb

1%	10%	25%	50%	75%	90%	100%
1/4 1/2 3/4 1	1/4 1/2 3/4 1	1/4 1/2 3/4 1	1/4 1/2 3/4 1	1/4 1/2 3/4 1	1/4 1/2 3/4 1	1/4 1/2 3/4 1
4 8 16 32	4 8 16 32	4 8 16 32	4 8 16 32	4 8 16 32	4 8 16 32	4 8 16 32

Pitch

-50%	-37%	-25%	0%	26%	50%	100%
1/4 1/2 3/4 1	1/4 1/2 3/4 1	1/4 1/2 3/4 1	1/4 1/2 3/4 1	1/4 1/2 3/4 1	1/4 1/2 3/4 1	1/4 1/2 3/4 1
4 8 16 32	4 8 16 32	4 8 16 32	4 8 16 32	4 8 16 32	4 8 16 32	4 8 16 32

- *5 This switch isn't used when using Serato DJ Pro.

*6 The pad assignment for each pad mode is shown as follows.

Hot Cue mode

When the [Shift] button is not pressed.

Hot Cue 1 Set / Call	Hot Cue 2 Set/Call	Hot Cue 3 Set/Call	Hot Cue 4 Set/Call	Hot Cue 5 Set/Call	Hot Cue 6 Set/Call	Hot Cue 7 Set/Call	Hot Cue 8 Set/Call
-------------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------

When the [Shift] button is pressed.

Hot Cue 1 Delete	Hot Cue 2 Delete	Hot Cue 3 Delete	Hot Cue 4 Delete	Hot Cue 5 Delete	Hot Cue 6 Delete	Hot Cue 7 Delete	Hot Cue 8 Delete
---------------------	---------------------	---------------------	---------------------	---------------------	---------------------	---------------------	---------------------

Stems mode

Vocal Stem on/off	Melody Stem on/off	Bass Stem on/off	Drums Stem on/off	FX Vocal Echo on/off	FX Instrumental Echo on/off	FX Instrumental Braker on/off	FX Drums Echo on/off
----------------------	-----------------------	---------------------	----------------------	-------------------------	--------------------------------	----------------------------------	-------------------------

Beat Jump mode

When the [Shift] button is not pressed.

Beat Jump to the left	Halve the Beat Jump length	Double the Beat Jump length	Beat Jump to the right	Previous track	Search Rwd	Search Fwd	Censor
--------------------------	-------------------------------	--------------------------------	---------------------------	----------------	------------	------------	--------

When the [Shift] button is pressed.

-	-	-	-	-	-	-	Reverse
---	---	---	---	---	---	---	---------

Sampler mode

When the [Shift] button is not pressed.

Slot 1 Play	Slot 2 Play	Slot 3 Play	Slot 4 Play	Slot 5 Play	Slot 6 Play	Slot 7 Play	Slot 8 Play
----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------

When the [Shift] button is pressed.

Slot 1 Stop/Load	Slot 2 Stop/Load	Slot 3 Stop/Load	Slot 4 Stop/Load	Slot 5 Stop/Load	Slot 6 Stop/Load	Slot 7 Stop/Load	Slot 8 Stop/Load
---------------------	---------------------	---------------------	---------------------	---------------------	---------------------	---------------------	---------------------

Pitch Play mode

When the [Shift] button is not pressed.

Semitone -4	Semitone -3	Semitone -2	Semitone -1	Semitone 0	Semitone +1	Semitone +2	Semitone +3
----------------	----------------	----------------	----------------	---------------	----------------	----------------	----------------

When the [Shift] button is pressed.

Select Hot Cue point	Select Hot Cue point	Select Hot Cue point	Select Hot Cue point	Select Hot Cue point	Select Hot Cue point	Select Hot Cue point	Select Hot Cue point
-------------------------	-------------------------	-------------------------	-------------------------	-------------------------	-------------------------	-------------------------	-------------------------

Pad FX mode

Effect A	Effect B	Effect C	Effect D	Effect E	Effect F	Effect G	Effect H
-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

Auto Loop mode

1/8 beat	1/4 beat	1/2 beat	1 beat	2 beats	4 beats	8 beats	16 beats
----------	----------	----------	--------	---------	---------	---------	----------

Key Shift mode

Semitone -4	Semitone -3	Semitone -2	Semitone -1	Semitone 0	Semitone +1	Semitone +2	Semitone +3
----------------	----------------	----------------	----------------	---------------	----------------	----------------	----------------