



DDJ-REV1

Hardware Diagram for Serato DJ Lite/Pro



Group	No.	Name	Function	+SHIFT
1. DECK				
* All the functions assigned to the right deck are the same as those to the left deck shown below.				
1	JOG	platter	Scratch (Vinyl mode on)	Search
		wheel side	Pitch bend (Vinyl mode off)	Skp mode
2	PLAY/PAUSE		Play/Pause	Stutter
3	CUE		Set/Call cue, Back cue	Jump to track start
4	DECK SELECT		Deck select	Vinyl mode on/off
		long press	Tempo range	-
5	AUTO LOOP	loop off	Auto loop on	Reloop
		loop on	Auto/manual loop off	Loop exit
6	LOOP 1/2x	loop off	Loop length select	Loop in
		loop on	Loop half	Loop in adjustment
7	LOOP 2x	loop off	Loop length select	Loop out
		loop on	Loop double	Loop out adjustment
8	TEMPO		Tempo control	-
9	SYNC		Sync on	Sync off
2. EFFECT				
* All the functions assigned to the FX2 are the same as those to the FX1 shown below.				
1	EFFECT ON		Effect On/Off	-
2	EFFECT 1		Select/cancel the effect on slot1	Change the effect type on slot1
		+rotate BROWSE	Change the effect types on slot1	-
3	EFFECT 2		Select/cancel the effect on slot2	Beat length -
		+rotate BROWSE	Change the effect types on slot2	-
4	EFFECT 3		Select/cancel the effect on slot3	Beat length +
		+rotate BROWSE	Change the effect types on slot3	-
5	LEVEL/DEPTH		Adjust the parameter of the effect	-
6	SHIFT		Shift	-
3. MIXER				
* All the functions assigned to the CH2 are the same as those to the CH1 shown below.				
1	TRIM		Trim	-
2	EQ (HI)		EQ (Hi)	-
3	EQ (MID)		EQ (Mid)	-
4	EQ (LOW)		EQ (Low)	-
5	FILTER		Filter	-
6	CHANNEL FADER		Channel fader	Channel fader start
7	CROSSFADER		Crossfader	Crossfader start
8	CUE(CH)		Headphone monitor on/off	Tap BPM
9	CUE(MASTER)		Master out monitor on/off	-
10	MIC LEVEL		MIC level	-
4. BROWSER				
1	BROWSE	rotate	Library scroll	Library fast scroll
		press	*The behavior differs depending on the cursor position - When it's in the crates panel or in the library Move between the crates panel and the library	*The behavior differs depending on the cursor position - When it's in the crates panel Open/close subcrates - When it's in the library Move to the crates panel -When it's in the [Files] panel Move to the lower level
2	LOAD		Load a track	Sort by BPM(CH1) Sort by ARTIST(CH2)
		press twice	Instant Doubles	-

*1 : You can control Beat Jump if you select "Show Beat Jump Controls" in the Serato DJ Pro setup screen.

 : Serato DJ Lite Only
 : Serato DJ Pro Only

Group	No.	Name	Function	+SHIFT
5. PERFORMANCE PADS				
1	HOT CUE		HOT CUE mode	Beat Jump mode *1
2	AUTO LOOP		Auto Loop mode	Roll mode
3	TRACKING		Tracking Scratch mode	Trans mode
4	SAMPLER		SAMPLER mode	Scratch Bank mode
HOT CUE mode				
5	PAD1		Set/Trigger Hot cue1	Delete Hot Cue1
	PAD2		Set/Trigger Hot cue2	Delete Hot Cue2
	PAD3		Set/Trigger Hot cue3	Delete Hot Cue3
	PAD4		Set/Trigger Hot cue4	Delete Hot Cue4
Lite only				
5	PAD5		Previous track	-
	PAD6		Search Rwd	-
	PAD7		Search Fwd	-
	PAD8		Censor	Reverse
Pro only				
5	PAD5		Set/Trigger Hot cue5	Delete Hot Cue5
	PAD6		Set/Trigger Hot cue6	Delete Hot Cue6
	PAD7		Set/Trigger Hot cue7	Delete Hot Cue7
	PAD8		Set/Trigger Hot cue8	Delete Hot Cue8
Beat Jump mode				
5	PAD1		BEAT JUMP to left	-
	PAD2		BEAT JUMP to left/select BEAT JUMP length	-
	PAD3		BEAT JUMP to right/select BEAT JUMP length	-
	PAD4		BEAT JUMP to right	-
	PAD5		Previous track	-
	PAD6		Search Rwd	-
	PAD7		Search Fwd	-
	PAD8		Censor	Reverse
Auto Loop mode				
Lite only				
5	PAD1		Loop 1	-
	PAD2		Loop 2	-
	PAD3		Loop 4	-
	PAD4		Loop 8	-
	PAD5		Previous track	-
	PAD6		Search Rwd	-
	PAD7		Search Fwd	-
	PAD8		Censor	Reverse
Pro only				
5	PAD1		Loop 1/8	-
	PAD2		Loop 1/4	-
	PAD3		Loop 1/2	-
	PAD4		Loop 1	-
	PAD5		Loop 2	-
	PAD6		Loop 4	-
	PAD7		Loop 8	-
	PAD8		Loop 16	-
Roll mode				
5	PAD1		Loop Roll 1/32	-
	PAD2		Loop Roll 1/16	-
	PAD3		Loop Roll 1/8	-
	PAD4		Loop Roll 1/4	-
	PAD5		Loop Roll 1/2	-
	PAD6		Loop Roll 1	-
	PAD7		Loop Roll 2	-
	PAD8		Loop Roll 4	-

Group	No.	Name	Function	+SHIFT
5. PERFORMANCE PADS				
Tracking Scratch mode				
5	PAD1		Pattern 1	-
	PAD2		Pattern 2	-
	PAD3		Pattern 3	-
	PAD4		Pattern 4	-
	PAD5		Pattern 5	-
	PAD6		Pattern 6	-
	PAD7		Speed down	-
	PAD8		Speed up	-
Trans mode				
5	PAD1		Trans 1/16	-
	PAD2		Trans 1/8	-
	PAD3		Trans 1/4	-
	PAD4		Trans 1/2	-
	PAD5		Trans 1	-
	PAD6		Trans 2	-
	PAD7		Trans 1/3	-
	PAD8		Trans Manual	-
SAMPLER mode				
5	PAD1		Sampler slot1 play	Sampler slot1 stop/load
	PAD2		Sampler slot2 play	Sampler slot2 stop/load
	PAD3		Sampler slot3 play	Sampler slot3 stop/load
	PAD4		Sampler slot4 play	Sampler slot4 stop/load
Lite only				
5	PAD5		Previous track	-
	PAD6		Search Rwd	-
	PAD7		Search Fwd	-
	PAD8		Censor	Reverse
Pro only				
5	PAD5		Sampler slot5 play	Sampler slot5 stop/load
	PAD6		Sampler slot6 play	Sampler slot6 stop/load
	PAD7		Sampler slot7 play	Sampler slot7 stop/load
	PAD8		Sampler slot8 play	Sampler slot8 stop/load
Scratch Bank mode				
5	PAD1		The Scratch Bank1 sound is loaded onto the deck	The previous loaded track is loaded again
	PAD2		The Scratch Bank2 sound is loaded onto the deck	The previous loaded track is loaded again
	PAD3		The Scratch Bank3 sound is loaded onto the deck	The previous loaded track is loaded again
	PAD4		The Scratch Bank4 sound is loaded onto the deck	The previous loaded track is loaded again
Lite only				
5	PAD5		Previous track	-
	PAD6		Search Rwd	-
	PAD7		Search Fwd	-
	PAD8		Censor	Reverse
Pro only				
5	PAD5		The Scratch Bank5 sound is loaded onto the deck	The previous loaded track is loaded again
	PAD6		The Scratch Bank6 sound is loaded onto the deck	The previous loaded track is loaded again
	PAD7		The Scratch Bank7 sound is loaded onto the deck	The previous loaded track is loaded again
	PAD8		The Scratch Bank8 sound is loaded onto the deck	The previous loaded track is loaded again