


# DDJ-S1

## Hardware Diagram for Serato DJ Pro

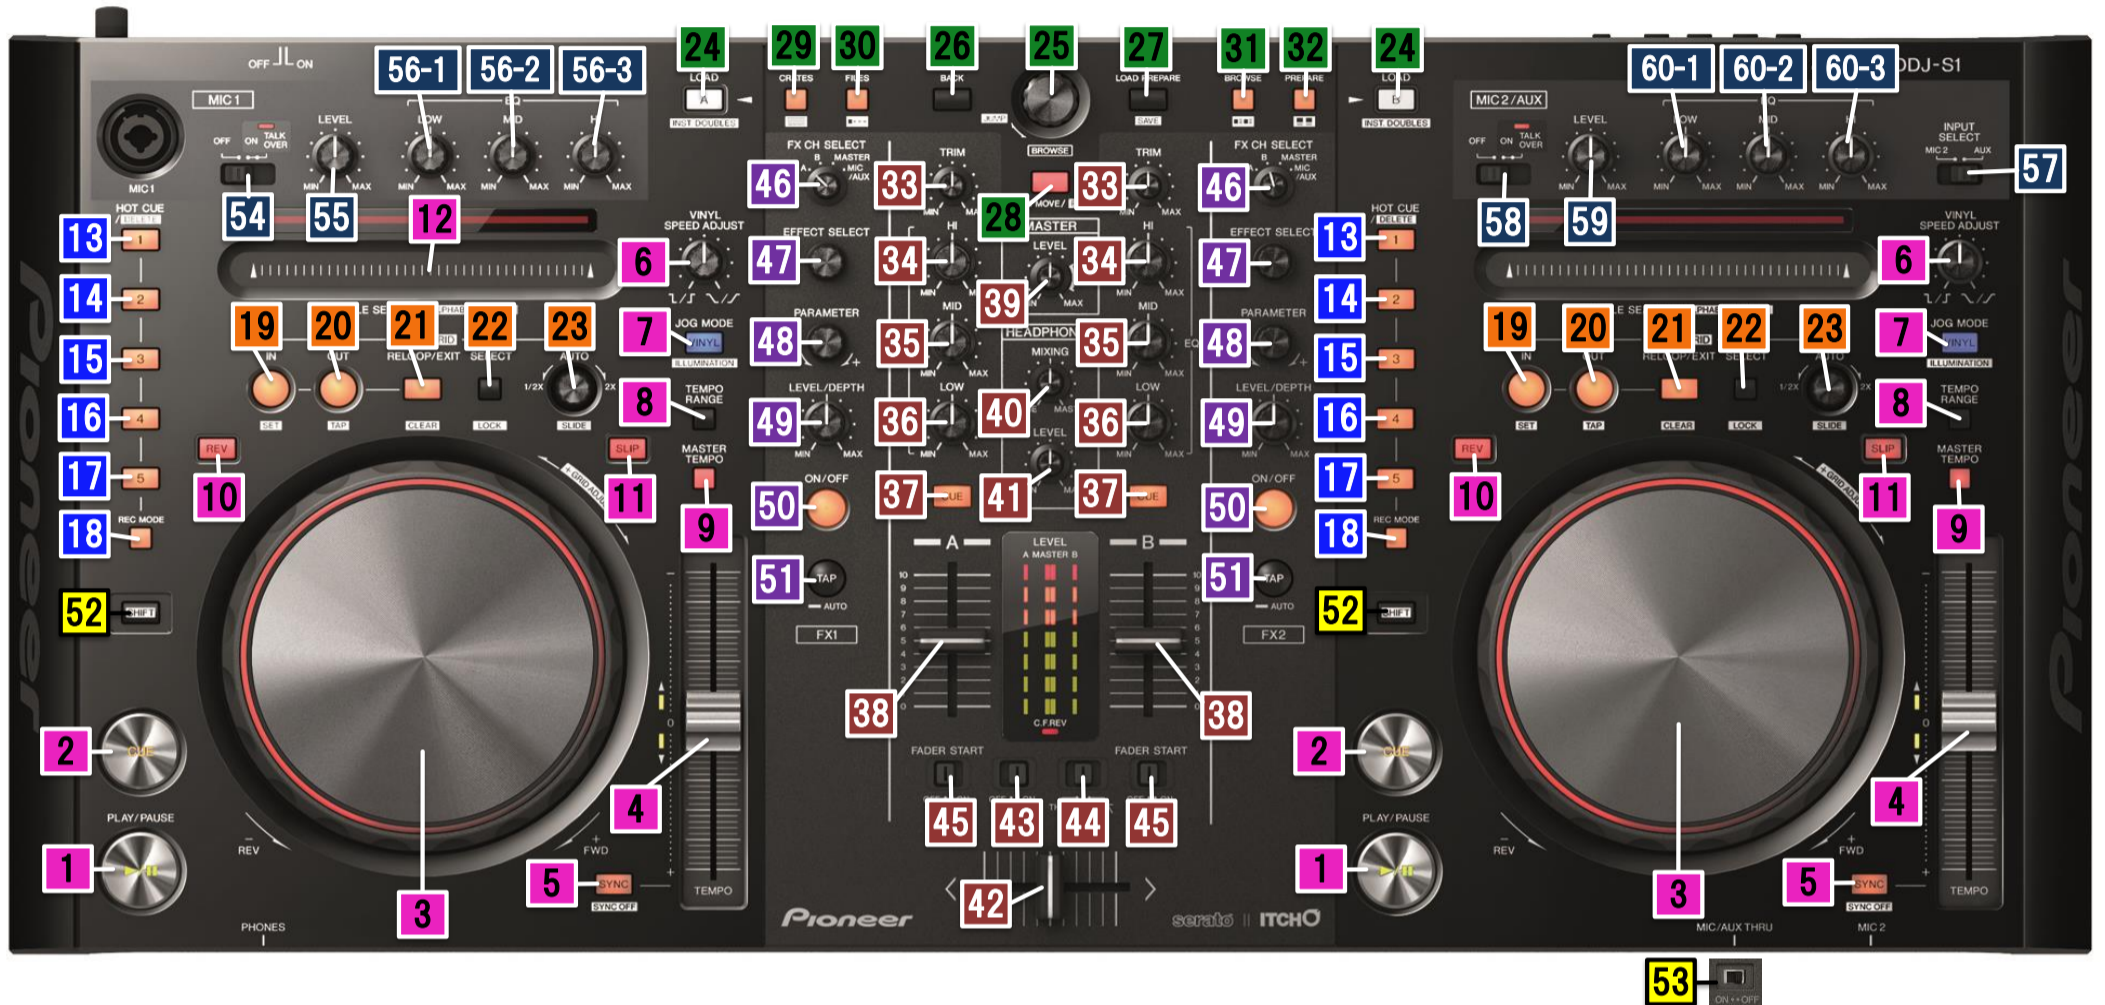

GROUP No.	NAME	FUNCTION	(+SHIFT)
<b>TRANSPORT</b>			
1	PLAY/PAUSE	Play/Pause	Stutter
2	CUE	Cue	Previous Track
3	JOG DIAL	top plate	Scratch(Vinyl On) , Pitch Bend(Vinyl Off)
		outer wheel	Pitch Bend
4	TEMPO SLIDER	sync off	Tempo Control
		sync on	Adjust physical position of TEMPO SLIDER
5	SYNC	Sync	Sync Off
6	BRAKING SPEED ADUJST	Braking Adjust(Stop Time Only)	No assign
7	VINYL	Vinyl Mode On/Off	Jog Illumination Change
8	TEMPO RANGE	Tempo Range(8%, 16%, 50%, 100%)	Tempo Reset
9	KEY LOCK	Key Look On/Off	No assign
10	REVERSE	Censor	Reverse
11	SLIP	Slip Mode On/Off	No assign
12	NEEDLE SEARCH	Search	Roll(1/16, 1/8, 1/4, 1/2, 1)
<b>HOT CUE/SAMPLER</b>			
18	SAMPLER MODE	on	Sampler Mode
		off	Hot Cue Mode
<b>HOT CUE MODE</b>			
13	1	Hot Cue 1	Delete Hot Cue 1
14	2	Hot Cue 2	Delete Hot Cue 2
15	3	Hot Cue 3	Delete Hot Cue 3
16	4	Hot Cue 4	Delete Hot Cue 4
17	5	Hot Cue 5	Delete Hot Cue 5
<b>SAMPLER MODE</b>			
13	1	Sample Slot1 Play/Retrigger	Sample Slot1 Stop
14	2	Sample Slot2 Play/Retrigger	Sample Slot2 Stop
15	3	Sample Slot3 Play/Retrigger	Sample Slot3 Stop
16	4	Sample Slot4 Play/Retrigger	Sample Slot4 Stop
17	5	Sample Slot5 Play/Retrigger	Sample Slot5 Stop
<b>LOOP</b>			
19	LOOP IN	Loop In/In Adjust	Grid Set
20	LOOP OUT	Loop Out/Out Adjust	Grid Tap
21	RELOOP/EXIT	Reloop/Exit	Grid Clear
22	LOOP SELECT	Loop Select	Grid Lock
23	AUTO LOOP	rotate	Auto Loop Size Select/Half and Double
		press	Auto Loop On/Off
<b>BROWSE</b>			
24	LOAD	Load	Instant Doubles
25	ROTARY SELECTOR	rotate	Library Scroll
		press	Library Forward
26	BACK	Library Back	Library
27	LOAD PREPARE	Add Prepare	Save Rec
28	PANEL SELECT/REC	Panel Select	Rec
29	CRATES	Crates Panel	Simple List
30	FILES	Files Panel	Album Art List
31	BROWSE	Browse Panel	No assign
32	PREPARE	Prepare Panel	No assign

GROUP No.	NAME	FUNCTION	(+SHIFT)
<b>MIXER</b>			
33	TRIM	Input Gain	Same
34	EQ(HI)	EQ(Hi)	Same
35	EQ(MID)	EQ(Mid)	Same
36	EQ(LOW)	EQ(Low)	Same
37	HEADPHONES CUE	Monitor On/Off	Same
38	CH FADER	Channel Fader	Same
39	MASTER LEVEL	Master Out Volume	Same
40	HEADPHONES MIXING	Monitor Balance	Same
41	HEADPHONES LEVEL	Monitor Volume	Same
42	CROSSFADER	Crossfader	Same
43	C.F. REVERSE	Crossfader Reverse	Same
44	CROSSFADER CURVE	Crossfader Curve(3pos.)	Same
45	FADER START	Crossfader Start	Same
<b>EFFECT</b>			
46	FX CH SELECT *1	Deck1 /Deck2/Master	Same
47	EFFECT SELECT	Multi	Effect1 Select
		Single	Effect2 Select
48	BEATS/PARAMETER *2	Beats	Parameter3
49	LEVEL/DEPTH	Parameter1	Same
50	FX ON/OFF	Multi	Effect1 On/Off
		Single	Effect2 On/Off
51	TAP	Effect Tap/BPM Auto(Long Press)	FX Mode(Switch Multi/Single)
<b>OTHER</b>			
52	SHIFT	Shift	-
53	MIC/AUX THRU	Mic/Aux Thru On/Off(GUI)	Same
<b>MIC/AUX</b>			
<b>MIC1</b>			
54	OFF, ON, TALK OVER	MIC1 Off/On/Talk Over	Same
55	LEVEL	MIC1 Volume	Same
56-1	EQ(LOW)	EQ(Low)	Same
56-2	EQ(MID)	EQ(Mid)	Same
56-3	EQ(HI)	EQ(Hi)	Same
<b>MIC2/AUX</b>			
57	INPUT SELECT	MIC2/AUX Select SW	Same
58	OFF/ON/TALK OVER	MIC2 Off/On/Talk Over	Same
59	LEVEL	MIC2 Volume	Same
60-1	EQ(LOW)	EQ(Low)	Same
60-2	EQ(MID)	EQ(Mid)	Same
60-3	EQ(HI)	EQ(Hi)	Same

**Notes:**

\*1 To be included when the application is upgraded: MODE SELECT/MIC, AUX

\*2 When you want to control beatgrids, please select [Smart sync] in [DJ Preference] from the [SETUP] of Serato DJ Pro.

-Please refer to the Serato DJ Pro manual for details of these functions.