

DDJ-SB

Hardware Diagram for Serato DJ Lite / Serato DJ Pro



GROUP No.	NAME	FUNCTION	+SHIFT
TRANSPORT			
1	PLAY / PAUSE	Play/Pause	Stutter
2	CUE	Cue Set/Play_Cue Back	Previous Track
3	SYNC	Sync On	Sync Off
4	JOG	Scratch (Vinyl On) Pitch Bend (Vinyl Off)	Skip Mode
5	TEMPO	Tempo Control	-
6	VINYL	Vinyl Mode On/Off	Slip Mode On/Off
7	KEY LOCK	Key Look On/Off	Tempo Range (8%, 16%, 50%)
8	SHIFT	Shift	-
BROWSE			
17	LOAD	Load	-
18	BROWSE	Library Scroll	Library Scroll fast
19	BACK	Move to the next layer Folder Open/Close	Layout Change Panel Select
MIXER			
20	HI	EQ Hi	-
21	MID	EQ Mid	-
22	LOW	EQ Low	-
23	FILTER	Filter	-
24	CUE	Monitor On/Off	Tap BPM
25	MASTER LEVEL	Master Out Volume	-
26	MIX	Monitor Balance	-
27	VOL	Monitor Level	-
28	CH FADER	Channel Fader	Channel Fader Start
29	CROSSFADER	Crossfader	-
30	FILTER FADE *1	Filter Fade On/Off	-
EFFECT			
31	1	Effect 1 On/Off	Effect 1 Select
32	2	Effect 2 On/Off	Effect 2 Select
33	3	Effect 3 On/Off	Effect 3 Select
34	LEVEL	Effect Level	Effect Beats
EFFECT (Single FX Mode)			
31	1	Effect On/Off	Effect Select
32	2	Effect Parameter Control On/Off	Effect Button Parameter
33	3	Effect Parameter Control On/Off	Effect Button Parameter
34	LEVEL	Effect Level/Parameter	Effect Beats

■ : Serato DJ Lite Only
■ : Only available if upgraded to Serato DJ Pro

GROUP No.	NAME	FUNCTION	+SHIFT
PERFORMANCE Pads			
9	HOT CUE	HOT CUE Mode	HOT CUE 5-8 Mode
10	AUTO LOOP	AUTO LOOP Mode	ROLL Mode
11	MANUAL LOOP	MANUAL LOOP Mode	HOT LOOP Mode
12	SAMPLER	SAMPLER Mode	BANK Mode
in HOT CUE mode			
13	Pad1	Hotcue 1	Delete Hotcue 1
14	Pad2	Hotcue 2	Delete Hotcue 2
15	Pad3	Hotcue 3	Delete Hotcue 3
16	Pad4	Hotcue 4	Delete Hotcue 4
in AUTO LOOP mode			
13	Pad1	Autoloop 1 Beat	Loop Half
14	Pad2	Autoloop 2 Beat	Loop Double
15	Pad3	Autoloop 4 Beat	AutoLoop On/Off
16	Pad4	Autoloop 8 Beat	-
in MANUAL LOOP mode			
13	Pad1	Loop In/Loop In Adjust	-
14	Pad2	Loop Out/Loop Out Adjust	-
15	Pad3	Reloop/Exit	Loop Active
16	Pad4	Loop Half	Loop Double
in SAMPLER mode			
13	Pad1	Sampler 1 Play	Sampler 1 Stop
14	Pad2	Sampler 2 Play	Sampler 2 Stop
15	Pad3	Sampler 3 Play	Sampler 3 Stop
16	Pad4	Sampler 4 Play	Sampler 4 Stop
in HOT CUE 5-8 mode			
13	Pad1	Hotcue 5	Delete Hotcue 5
14	Pad2	Hotcue 6	Delete Hotcue 6
15	Pad3	Hotcue 7	Delete Hotcue 7
16	Pad4	Hotcue 8	Delete Hotcue 8
in ROLL mode			
13	Pad1	Loop Roll 1/8 Beat	-
14	Pad2	Loop Roll 1/4 Beat	-
15	Pad3	Loop Roll 1/2 Beat	-
16	Pad4	Loop Roll 1 Beat	-
in HOT LOOP mode			
13	Pad1	Hot Loop 1	Hot Loop 1 Reloop
14	Pad2	Hot Loop 2	Hot Loop 2 Reloop
15	Pad3	Hot Loop 3	Hot Loop 3 Reloop
16	Pad4	Loop Half	Loop Double
in SAMPLER BANK mode			
13	Pad1	Sampler Bank A	Sampler Output Select Deck1
14	Pad2	Sampler Bank B	Sampler Output Select Deck2
15	Pad3	Sampler Bank C	Sampler Output Select Master
16	Pad4	Sampler Bank D	Sampler Mute

*1 When FILTER FADE is on, some functions may not be used.
 *You cannot monitor the audio from a deck on the other side of the current crossfader position.
 *The FILTER knob cannot be used to control FILTER.

[Note] Please use your computer to control any features other than listed in the above hardware diagram.