

DDJ-SR2

Hardware Diagram for Serato DJ Pro



Group	No.	UI Name	Function	+SHIFT	
1, DECK					
1	1	JOG DIAL	platter	Scratch (Vinyl On)	
		wheel side	Pitch Bend (Vinyl Off)	Search (Skip mode)	
	2	NEEDLE SEARCH		Needle Search	
	3	TEMPO SLIDER		Tempo Control	
	4	KEY LOCK		Key Lock On/Off	Tempo Range
			long press	Tempo Reset	-
	5	AUTO LOOP	Loop off	Auto Loop On	Loop Active On/Off
			Loop on	Auto Loop/Manual Loop Off	-
	6	LOOP 1/2X	Loop off	Loop Size select	Loop Shift Left
			Loop on	Loop half	-
	7	LOOP 2X	Loop off	Loop Size select	Loop Shift Right
			Loop on	Loop double	-
	8	LOOP IN	Set/Adjust loop in point	Loop Slot select	-
			long press	4-Beat Loop	-
	9	LOOP OUT	Set/Adjust loop out point	Reloop/Exit	-
	10	KEY SYNC	Key Sync	-	-
	11	KEY RESET	Key Reset	-	-
	12	KEY SHIFT DOWN	Key Down	-	-
	13	KEY SHIFT UP	Key Up	-	-
	14	PLAY/PAUSE	Play/Pause	Stutter	Jump to start or track/previous
	15	CUE	Add or Jump to Cue Point	-	-
	16	SYNC	Sync On	Sync Off	-
17	SHIFT	Shift	-	-	
18	GRID ADJUST	Beat Grid adjust	Beat Grid set	-	
19	GRID SLIDE	Beat Grid slide	Beat Grid clear	-	
20	SLIP	Slip mode On/Off	Vinyl mode On/Off	-	
21	CENSOR (WAKE UP)*1	Slip reverse	Reverse	-	
22	PANEL	Select Panel (Flip/REC/FX/Sampler)*2	-	-	
2, EFFECT					
1	FX KNOB 1	Single FX	Adjust Slot 1 FX Parameter	Select Slot 1 FX	
		Multi FX	Adjust Slot 1 FX Parameter	Select Slot 1 FX	
	FX KNOB 2	Single FX	Adjust Slot 3 FX Parameter	Select Slot 2 FX	
		Multi FX	Adjust Slot 3 FX Parameter	Select Slot 2 FX	
	FX KNOB 3	Single FX	Adjust Slot 5 FX Parameter	Select Slot 3 FX	
		Multi FX	Adjust Slot 3 FX Parameter	Select Slot 3 FX	
	2	BEATS	Single FX	Adjust Beats Multiplier	-
Multi FX			-	-	
press		-	Tap BPM		
long press		-	Auto BPM		
3	ON 1	Single FX	FX On/Off	Select Slot 1 FX	
		Multi FX	Slot 1 FX on/off	Select Slot 1 FX	
	ON 2	Single FX	Adjust Slot 2 FX Parameter	-	
ON 3	Multi FX	Slot 2 FX on/off	Select Slot 2 FX		
4	FX1 ASSIGN1	Single FX	Adjust Slot 4 FX Parameter	-	
		Multi FX	Slot 3 FX on/off	Select Slot 3 FX	
	FX1 ASSIGN2	Assign FX1 Unit to DECK1	Assign FX1 Unit to DECK3		
	FX2 ASSIGN1	Assign FX2 Unit to DECK1	Assign FX2 Unit to DECK4		
FX2 ASSIGN2	Assign FX2 Unit to DECK2	Assign FX2 Unit to DECK4			
3, MIXER					
1	INPUT SELECT	PC/External Input select	-	-	
2	TRIM	Trim	-	-	
3	EQ (HI, MID, LOW)	EQ (High, Mid, Low)	-	-	
4	FILTER	Channel Filter	-	-	
5	HEADPHONES CUE	Headphones Monitor On/Off	Tap BPM	-	
6	CH FADER	Channel Fader	Channel Fader Start	-	
7	CROSSFADER	Cross Fader	Cross Fader Start	-	
8	MASTER LEVEL	Master level	-	-	
9	BOOTH MONITOR LEVEL	Booth Monitor level	-	-	
10	HEADPHONES MIXING	Headphones mixing	-	-	
11	SAMPLER VOLUME	Sampler volume	-	-	

Group	No.	UI Name	Function	+SHIFT		
4, FRONT PANEL / REAR PANEL						
1	HEADPHONES LEVEL		Headphones level	-		
			Mic level	-		
			Line/Phono CH2	-		
			Line/Phono CH1	-		
5, BROWSER						
1	LOAD	Left	Load track (double tap) Inst Doubles	BPM sort		
		Right	Load track (double tap) Inst Doubles	Artist sort		
2	BROWSE	Rotate	Scroll Library	Scroll Library (fast)		
		Press	Library forward	-		
3	BACK	Toggle Focus	Cycle View modes	-		
4	LOAD PREPARE	Add selected track to Prepare list	Cycle Files/Browse/Prepare/History	-		
6, PERFORMANCE PADS						
9	HOT CUE		Hot Cue mode	Cue Loop mode		
		Double press	Saved Flip mode*3	Cue Loop mode		
			Roll mode	Saved Loop mode		
		Long press	TRANS mode	Saved Loop mode		
			Slicer mode	Slicer Loop mode		
			Sampler mode	Pitch Play mode		
		1-8	PERFORMANCE PAD 1-8	mode		
				Hot Cue	Add/Play Cue Points	Delete Cue Points
				Roll	Activate Loop Roll	-
				Slicer	Play Slicer section	-
				Sampler	Play Sampler slot	Stop/Load Sampler slot
				Cue Loop	Add/Play Cue Points and Auto Loop On/Off	Add/Play Cue Points and Auto Loop On
Saved Loop	Loop slot Loop active/Loop Off			Loop slot play		
Slicer Loop	Play Slicer section			-		
Pitch Play	Pitch Cue Point			Add/Select Cue Point		
Trans	Trans			-		
Saved Flip	Start Flip/Retrigger Flip	Flip On/Off				
13	PARAMETER (LEFT)	mode				
		Hot Cue	Flip Record On/Off *4	Flip Loop On/Off		
		Roll	Change Roll Loop Size	-		
		Slicer	Select Quantization	Select Domain		
		Sampler	Select Sampler Bank	Select Sampler Output		
		Cue Loop	Loop Half	Loop Shift		
		Saved Loop	Loop Half	Loop Shift		
		Slicer Loop	Select Quantization	Select Domain		
		Pitch Play	Select Key Range	Key Down		
		Trans	-	-		
Saved Flip	Flip Record On/Off *4	Flip Loop On/Off				
14	PARAMETER (RIGHT)	mode				
		Hot Cue	Flip Play	Flip On/Off		
		Roll	Change Roll Loop Size	-		
		Slicer	Select Quantization	Select Domain		
		Sampler	Select Sampler Bank	Select Sampler Output		
		Cue Loop	Loop Double	Loop Shift		
		Saved Loop	Loop Double	Loop Shift		
		Slicer Loop	Select Quantization	Select Domain		
		Pitch Play	Select Key Range	Key Up		
		Trans	-	-		
Saved Flip	Flip Play	Flip On/Off				

*1 Press when you turn on the set from Auto Standby state.
 *2 When Serato Flip is activated and enabled in the [SETUP] menu, the [FLIP] panel can be selected.
 *3 Available only when Serato Flip is activated and enabled in the [SETUP] menu.
 If you do not restart Serato DJ Pro after activating Serato Flip for the first time, some buttons may not respond. Please make sure to restart Serato DJ Pro once you activate Serato Flip.
 *4 Flip record will not begin right after Flip record is enabled. Only when HOT CUE or CENSOR playback starts after Flip record is enabled, Flip record will begin.