

Pioneer Dj

# DDJ-SX3

## Hardware Diagram for Serato DJ Pro





GROUP No.	名称	機能	+SHIFT
<b>1. DECK</b>			
1	PLAY / PAUSE	Play/Pause	Stutter
2	CUE	Set/Call cue, Back cue	Jump to track start
3	SYNC	Sync on	Sync off
4	SHIFT	Shift	
5	QUANTIZE	Quantize on/off	-
6	JOG	platter	Scratch (Vinyl mode on) Search
		wheel side	Pitch bend (Vinyl mode off) Skip mode
			Pitch bend Skip mode
7	NEEDLE SEARCH	Needle search	Needle search during play
8	CENSOR	Slip reverse	Reverse
9	KEY UP	Key up	Key sync
10	KEY DOWN	Key down	Key reset
11	DECK1	Select deck1	-
12	DECK2	Select deck2	-
13	DECK3	Select deck3	-
14	DECK4	Select deck4	-
15	SLIP	Slip mode on/off	Vinyl mode on/off
16	KEY LOCK	Key lock on/off	Tempo range
17	TEMPO	Tempo control	-
18	SLOT	Cycle Flip slot	Save Flip to the slot
19	REC	Start recording of Flip	Flip loop on/off
20	START	Start Flip /Retrigger Flip	Flip on/off
21	AUTO LOOP	loop off	Auto loop on
		loop on	Auto/Manual loop off
22	LOOP 1/2x	loop off	Loop size
		loop on	Loop cutter
		loop on	Loop size
23	LOOP 2x	loop off	Loop size
		loop on	Loop double
		loop on	Loop shift*1
24	LOOP IN	loop off	Loop in
		loop on	Loop in adjustment
		long press	4 beat loop on
25	LOOP OUT	loop off	Loop out
		loop on	Loop out adjustment
<b>2. EFFECT (Multi FX Mode)</b>			
1	1	FX1 parameter	Select FX1
2	2	FX2 parameter	Select FX2
3	3	FX3 parameter	Select FX3
4	BEATS		FX beats
		press	-
		long press	FX beats tap FX beats auto
5	ON1	FX1 on/off	Select FX1
6	ON2	FX2 on/off	Select FX2
7	ON3	FX3 on/off	Select FX3
8	CH ASSIGN CH1	FX assign CH1 on/off	FX assign CH3 on/off
		long press	FX assign AUX (Sampler) on/off
9	CH ASSIGN CH2	FX assign CH2 on/off	FX assign CH4 on/off
<b>Single FX Mode</b>			
1	1	FX1 parameter	Select FX1
2	2	FX2 parameter	-
3	3	FX3 parameter	-
4	BEATS		FX beats
		press	-
		long press	FX beats tap FX beats auto
5	ON1	FX1 on/off	Select FX1
6	ON2	FX2 on/off	-
7	ON3	FX3 on/off	-
8	CH ASSIGN CH1	FX assign CH1 on/off	FX assign CH3 on/off
		long press	FX assign AUX (Sampler) on/off
9	CH ASSIGN CH2	FX assign CH2 on/off	FX assign CH4 on/off
<b>3. MIXER</b>			
1	USB A, PHONO/LINE, USB B	Select USB A, PHONO/LINE, USB B	-
2	USB A, LINE, MIC, USB B	Select USB A, LINE, MIC, USB B	-
3	TRIM	Trim	-
4	EQ (HI, MID, LOW)	EQ (HI, MID, LOW)	-
5	CHANNEL LEVEL INDICATOR	Channel level indicator	-
6	COLOR	SOUND COLOR FX (CH1~4)	-
7	HEADPHONES CUE	Headphones monitor on/off	Tap BPM
8	HEADPHONES CUE/MIC REVERB	Headphones monitor/Reverb on/off	Tap BPM
9	CHANNEL FADER	Channel fader	Channel fader start
10	CROSSFADER ASSIGN	A	Assign to left deck
		THRU	Cross fader through
		B	Assign to right deck

GROUP No.	名称	機能	+SHIFT
11	CROSSFADER	Crossfader	Crossfader start
12	MASTER LEVEL	Master out volume	-
13	MASTER LEVEL INDICATOR	Master level indicator	-
14	ECHO	SOUND COLOR FX ECHO on/off	-
15	NOISE	SOUND COLOR FX NOISE on/off	-
16	JET	SOUND COLOR FX JET on/off	-
17	FILTER	SOUND COLOR FX FILTER on/off	-
18	MASTER CUE	Master out monitor on/off	-
19	BOOTH MONITOR LEVEL	Booth out volume	-
20	SAMPLER VOLUME	Sampler volume	-
21	CROSSFADER CURVE	↗	steeply rising curve
		↘	intermediate curve
		↔	gradually rising curve
22	HEADPHONES LEVEL	Headphones monitor volume	-
23	HEADPHONES MIXING	Headphones mixing volume	-
24	MIC3 LEVEL	Mic3 volume	-
25	MIC3 On/Off	Mic3 on/off	-
26	LINE/PHONO	LINE/PHONO switches	-
<b>4. BROWSE</b>			
1	BROWSE	turn press	Library scroll Toggles focus between Library and Crate list Fast scroll
2	LOAD		Load a track Sort library 1.BPM, 2.SONG, 3.KEY, 4.ARTIST
	- LOAD (DOUBLE PRESS)		Instant double
3	BACK		Toggles focus back between Library and Crate list Toggle through Serato DJ view modes
4	LOAD PREPARE		Add a track in the Prepare Panel Cycle Files/Browse/Prepare/History
5	LIBRARY A		Select USB A
6	LIBRARY B		Select USB B
<b>5. PERFORMANCE PAD</b>			
1	HOT CUE		HOT CUE mode
		long press	SAVED FLIP mode CUE LOOP mode
2	ROLL		ROLL mode
		long press	EDIT GRID mode SAVED LOOP mode
3	SLICER		SLICER mode SLICER LOOP mode
4	SAMPLER		SAMPLER mode
		long press	VELOCITY SAMPLER mode PITCH PLAY mode
5	Pad1	HOT CUE mode	Set/Call Hot Cue
6	Pad2	ROLL mode	Loop roll*1
7	Pad3	SLICER mode	Slicer section play
8	Pad4	SAMPLER mode	Sampler slot play
9	Pad5	CUE LOOP mode	Add/Play Cue Points and Auto Loop on/off
10	Pad6	SAVED LOOP mode	Set the Loop to the slot and loop on/off
11	Pad7	SLICER LOOP mode	Slicer section play
12	Pad8	PITCH PLAY mode	Play Cue Points over variable pitch ranges.
		SAVED FLIP mode	Start Flip/Retrigger Flip
		EDIT GRID mode	Grid adjust/slip
		VELOCITY SAMPLER mode	Sampler slot play
13	PARAMET LEFT	HOT CUE mode	Start recording of Flip
		ROLL mode	Change roll size
		SLICER mode	Select quantization
		SAMPLER mode	Select sampler bank
		CUE LOOP mode	Loop cutter
		SAVED LOOP mode	Loop cutter
		SLICER LOOP mode	Select quantization
		PITCH PLAY mode	Select key range
		SAVED FLIP mode	Start recording of Flip
		EDIT GRID mode	Grid marker set
		VELOCITY SAMPLER mode	Select sampler bank
14	PARAMET RIGHT	HOT CUE mode	Start Flip/Retrigger Flip
		ROLL mode	Change roll size
		SLICER mode	Select quantization
		SAMPLER mode	Select sampler bank
		CUE LOOP mode	Loop double
		SAVED LOOP mode	Loop double
		SLICER LOOP mode	Select quantization
		PITCH PLAY mode	Select key range
		SAVED FLIP mode	Start Flip/Retrigger Flip
		EDIT GRID mode	Grid marker clear
		VELOCITY SAMPLER mode	Select sampler bank

\*1: Serato DJ Pro can do a Beat Jump by enabling Beat Jump in the Setup screen.