


DDJ-SZ2

Serato DJ向け機能対応表

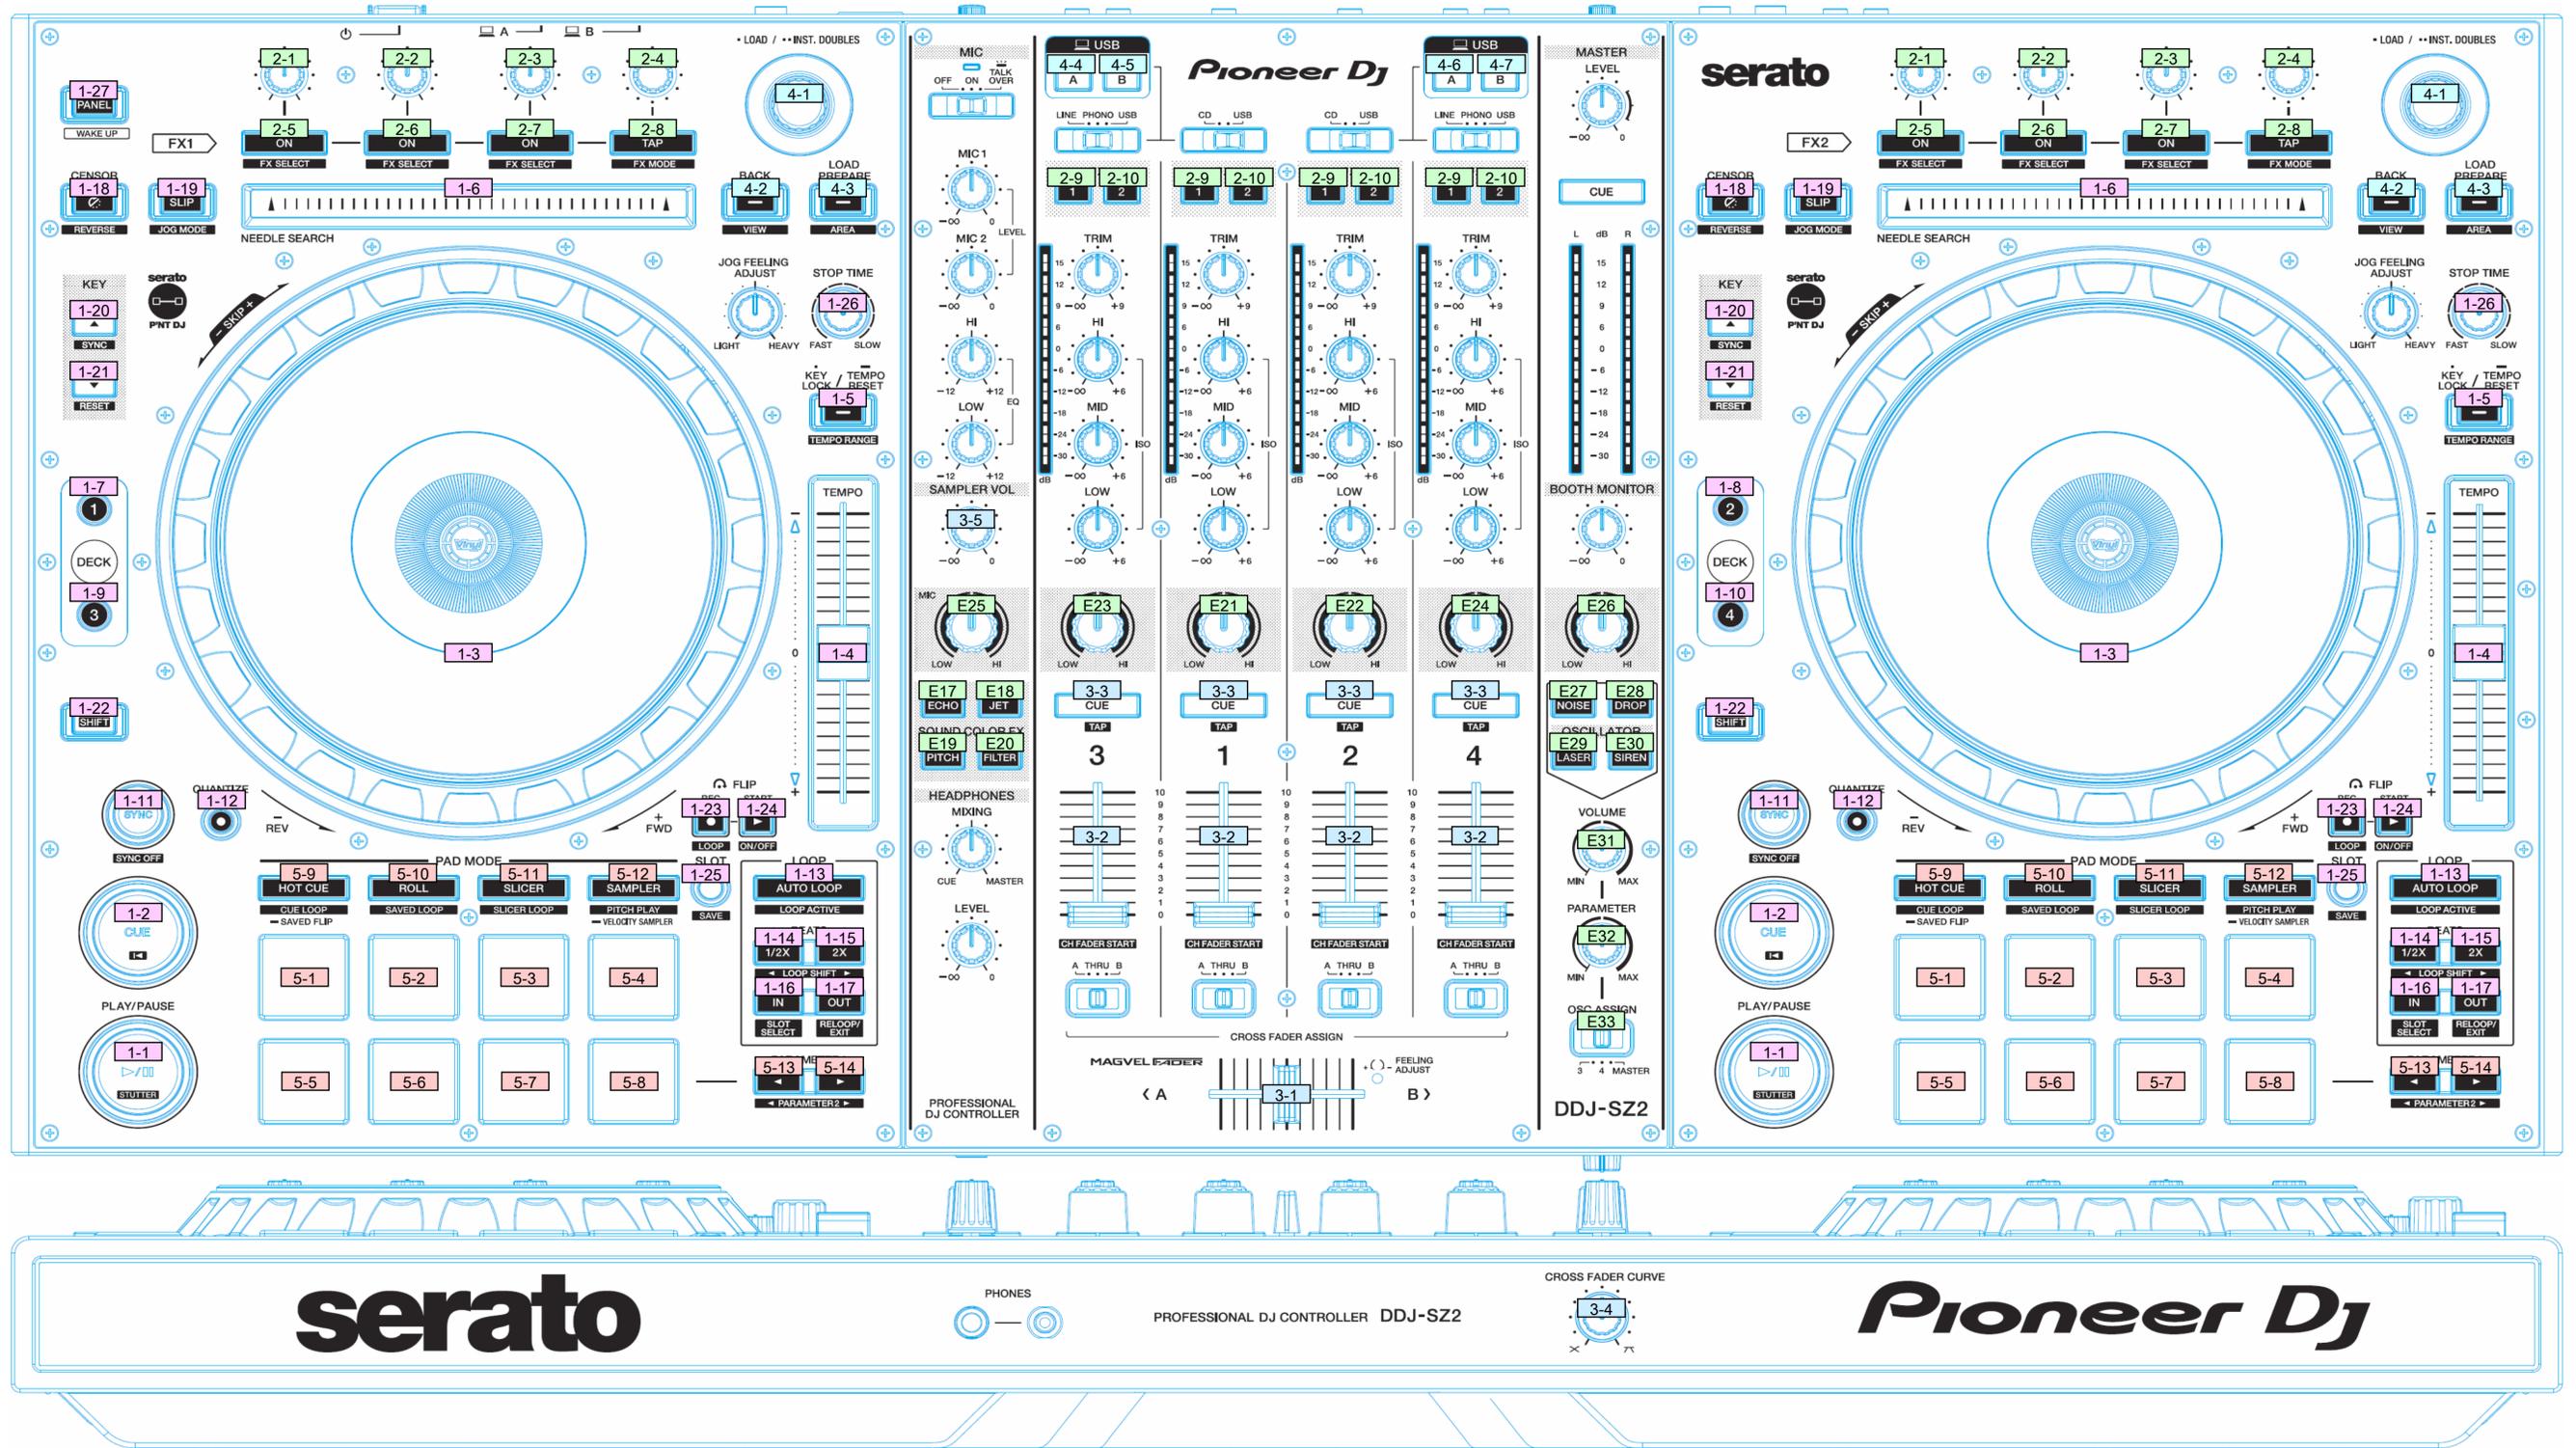

Group No.	UI Name	Function	+SHIFT	Group No.	UI Name	Function	+SHIFT	Group No.	UI Name	Function	+SHIFT
1-1	SLITTER	SLITTER		1-1	SLITTER	SLITTER		1-1	SLITTER	SLITTER	
1-2	CUE	CUE		1-2	CUE	CUE		1-2	CUE	CUE	
1-11	SYNC OFF	SYNC OFF		1-11	SYNC OFF	SYNC OFF		1-11	SYNC OFF	SYNC OFF	
1-12	QUANTIZE	QUANTIZE		1-12	QUANTIZE	QUANTIZE		1-12	QUANTIZE	QUANTIZE	
1-22	SHIFT	SHIFT		1-22	SHIFT	SHIFT		1-22	SHIFT	SHIFT	
1-27	PANEL	WAKE UP		1-27	PANEL	WAKE UP		1-27	PANEL	WAKE UP	
1-18	REVERSE	REVERSE		1-18	REVERSE	REVERSE		1-18	REVERSE	REVERSE	
1-19	JOG MODE	JOG MODE		1-19	JOG MODE	JOG MODE		1-19	JOG MODE	JOG MODE	
1-20	KEY	KEY		1-20	KEY	KEY		1-20	KEY	KEY	
1-21	RESET	RESET		1-21	RESET	RESET		1-21	RESET	RESET	
1-23	FLIP	FLIP		1-23	FLIP	FLIP		1-23	FLIP	FLIP	
1-24	START	START		1-24	START	START		1-24	START	START	
1-25	SAVE	SAVE		1-25	SAVE	SAVE		1-25	SAVE	SAVE	
1-13	LOOP ACTIVE	LOOP ACTIVE		1-13	LOOP ACTIVE	LOOP ACTIVE		1-13	LOOP ACTIVE	LOOP ACTIVE	
1-14	1/2X	1/2X		1-14	1/2X	1/2X		1-14	1/2X	1/2X	
1-15	2X	2X		1-15	2X	2X		1-15	2X	2X	
1-16	IN	IN		1-16	IN	IN		1-16	IN	IN	
1-17	OUT	OUT		1-17	OUT	OUT		1-17	OUT	OUT	
1-14	LOOP SHIFT	LOOP SHIFT		1-14	LOOP SHIFT	LOOP SHIFT		1-14	LOOP SHIFT	LOOP SHIFT	
1-16	IN	IN		1-16	IN	IN		1-16	IN	IN	
1-17	OUT	OUT		1-17	OUT	OUT		1-17	OUT	OUT	
5-13	RELOOP/EXIT	RELOOP/EXIT		5-13	RELOOP/EXIT	RELOOP/EXIT		5-13	RELOOP/EXIT	RELOOP/EXIT	
5-14	PARAMETER2	PARAMETER2		5-14	PARAMETER2	PARAMETER2		5-14	PARAMETER2	PARAMETER2	
5-9	HOT CUE	HOT CUE		5-9	HOT CUE	HOT CUE		5-9	HOT CUE	HOT CUE	
5-10	ROLL	ROLL		5-10	ROLL	ROLL		5-10	ROLL	ROLL	
5-11	SLICER	SLICER		5-11	SLICER	SLICER		5-11	SLICER	SLICER	
5-12	SAMPLER	SAMPLER		5-12	SAMPLER	SAMPLER		5-12	SAMPLER	SAMPLER	
5-1	SAVED FLIP	SAVED FLIP		5-1	SAVED FLIP	SAVED FLIP		5-1	SAVED FLIP	SAVED FLIP	
5-2	SAVED LOOP	SAVED LOOP		5-2	SAVED LOOP	SAVED LOOP		5-2	SAVED LOOP	SAVED LOOP	
5-3	SLICER LOOP	SLICER LOOP		5-3	SLICER LOOP	SLICER LOOP		5-3	SLICER LOOP	SLICER LOOP	
5-4	PITCH PLAY	PITCH PLAY		5-4	PITCH PLAY	PITCH PLAY		5-4	PITCH PLAY	PITCH PLAY	
5-5	VELOCITY SAMPLER	VELOCITY SAMPLER		5-5	VELOCITY SAMPLER	VELOCITY SAMPLER		5-5	VELOCITY SAMPLER	VELOCITY SAMPLER	
5-6	SAVED LOOP	SAVED LOOP		5-6	SAVED LOOP	SAVED LOOP		5-6	SAVED LOOP	SAVED LOOP	
5-7	SLICER LOOP	SLICER LOOP		5-7	SLICER LOOP	SLICER LOOP		5-7	SLICER LOOP	SLICER LOOP	
5-8	PITCH PLAY	PITCH PLAY		5-8	PITCH PLAY	PITCH PLAY		5-8	PITCH PLAY	PITCH PLAY	
5-13	RELOOP/EXIT	RELOOP/EXIT		5-13	RELOOP/EXIT	RELOOP/EXIT		5-13	RELOOP/EXIT	RELOOP/EXIT	
5-14	PARAMETER2	PARAMETER2		5-14	PARAMETER2	PARAMETER2		5-14	PARAMETER2	PARAMETER2	
3-1	CROSS FADER	CROSS FADER		3-1	CROSS FADER	CROSS FADER		3-1	CROSS FADER	CROSS FADER	
3-2	CH FADER START	CH FADER START		3-2	CH FADER START	CH FADER START		3-2	CH FADER START	CH FADER START	
3-3	CUE	CUE		3-3	CUE	CUE		3-3	CUE	CUE	
3-5	SAMPLER VOL	SAMPLER VOL		3-5	SAMPLER VOL	SAMPLER VOL		3-5	SAMPLER VOL	SAMPLER VOL	
4-1	LOAD PREPARE	LOAD PREPARE		4-1	LOAD PREPARE	LOAD PREPARE		4-1	LOAD PREPARE	LOAD PREPARE	
4-2	VIEW	VIEW		4-2	VIEW	VIEW		4-2	VIEW	VIEW	
4-3	AREA	AREA		4-3	AREA	AREA		4-3	AREA	AREA	
4-4	LINE PHONO USB	LINE PHONO USB		4-4	LINE PHONO USB	LINE PHONO USB		4-4	LINE PHONO USB	LINE PHONO USB	
4-5	CD USB	CD USB		4-5	CD USB	CD USB		4-5	CD USB	CD USB	
4-6	LINE PHONO USB	LINE PHONO USB		4-6	LINE PHONO USB	LINE PHONO USB		4-6	LINE PHONO USB	LINE PHONO USB	
4-7	CD USB	CD USB		4-7	CD USB	CD USB		4-7	CD USB	CD USB	
2-1	FX SELECT	FX SELECT		2-1	FX SELECT	FX SELECT		2-1	FX SELECT	FX SELECT	
2-2	FX SELECT	FX SELECT		2-2	FX SELECT	FX SELECT		2-2	FX SELECT	FX SELECT	
2-3	FX SELECT	FX SELECT		2-3	FX SELECT	FX SELECT		2-3	FX SELECT	FX SELECT	
2-4	FX MODE	FX MODE		2-4	FX MODE	FX MODE		2-4	FX MODE	FX MODE	
2-5	ON	ON		2-5	ON	ON		2-5	ON	ON	
2-6	ON	ON		2-6	ON	ON		2-6	ON	ON	
2-7	ON	ON		2-7	ON	ON		2-7	ON	ON	
2-8	TAP	TAP		2-8	TAP	TAP		2-8	TAP	TAP	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM		2-9	TRIM	TRIM		2-9	TRIM	TRIM	
2-10	TRIM	TRIM		2-10	TRIM	TRIM		2-10	TRIM	TRIM	
2-9	TRIM	TRIM									

1. DECK			
1	PLAY/PAUSE	再生/一時停止	スタッター
2	CUE	キュー設定/ジャンプ	曲頭へジャンプ/前曲へジャンプ
3	JOG	天面	スクラッチ (Vinyl on) ピッチバンド (Vinyl off)
		側面	ピッチバンド
4	TEMPO	テンポ調整	-
5	KEY LOCK	キーロック on/off	テンポレンジ
6	NEEDLE	テンポリセット	-
7	DECK1	ニードルサーチ	-
8	DECK2	デッキ1選択	-
9	DECK3	デッキ2選択	-
10	DECK4	デッキ3選択	-
11	SYNC	デッキ4選択	-
12	QUANTIZE	シンク on	シンク off
13	AUTO LOOP	クオンタイズ on/off	-
		オートループ on	-
14	LOOP 1/2X	オート/マニュアルループ off	ループアクティブ on/off
		ループオフ中	ループサイズ選択
15	LOOP 2X	ループオン中	ループサイズ選択
		ループオフ中	ループダブル
16	LOOP IN	ループイン設定/ループイン調整	ループスロット選択
17	LOOP OUT	4拍ループ	-
18	CENSOR	ループアウト設定/ループアウト調整	リループ/イグジット
19	SLIP	スリップリバース	逆再生
20	KEY UP *3	スリップモード on/off	Vinylモード on/off
21	KEY DOWN *3	キーアップ	キー同期
22	SHIFT	キーダウン	キーリセット
23	REC *2	Shift	-
24	START *2	FLIP記録開始	Flipループ on/off
25	SLOT *2	FLIP開始/リトリガー	Flip on/off
26	STOP TIME	Flip slot選択	Flip保存
27	PANEL	楽曲が停止するまでの時間の調整	パネル選択 (Flip/REC/FX/Sampler) *4

2. EFFECT				
1	FX KNOB 1	Single FX	Slot 1 FXパラメータ調整	Slot 1 FX選択
		Multi FX	Slot 1 FXパラメータ調整	Slot 1 FX選択
2	FX KNOB 2	Single FX	Slot 3 FXパラメータ調整	-
		Multi FX	Slot 2 FXパラメータ調整	Slot 2 FX選択
3	FX KNOB 3	Single FX	Slot 5 FXパラメータ調整	-
		Multi FX	Slot 3 FXパラメータ調整	Slot 3 FX選択
4	BEATS	Single FX	Beats調整	-
		Multi FX	-	-
5	ON 1	Single FX	FX on/off	Slot 1 FX選択
		Multi FX	Slot 1 FX on/off	Slot 1 FX選択
6	ON 2	Single FX	Slot 2 FXパラメータ調整	-
		Multi FX	Slot 2 FX on/off	Slot 2 FX選択
7	ON 3	Single FX	Slot 4 FXパラメータ調整	-
		Multi FX	Slot 3 FX on/off	Slot 3 FX選択
8	TAP	Single FX	Tap FXテンポ	Single/Multi FXモード切替
		Multi FX	-	-
9	FX1 ASSIGN	長押し	AUTOモード切替	-
10	FX2 ASSIGN	-	FX1ユニット割当	-

3. MIXER			
1	CROSS FADER	クロスフェーダー	クロスフェーダースタート *1
2	CH FADER	チャンネルフェーダー	チャンネルフェーダースタート
3	CUE	ヘッドフォンモニター on/off	Tap BPM
4	CROSS FADER CURVE	クロスフェーダーカーブ	-
5	SAMPLER	サンプラー音量	-

4. BROWSER			
1	BROWSE	戻す	ライブラリスクロール
		押す	楽曲ロード
		ダブルタップ	インスタントダブル
2	BACK	フォーカス移動	表示モード切替
3	LOAD PREPARE	楽曲をPrepareリストへ追加	Files/Browse/Prepare/Historyパネル選択
4	USB A	DECK1,3を使用してUSB-Aに接続されたPCをコントロール	-
5	USB B	DECK1,3を使用してUSB-Bに接続されたPCをコントロール	-
6	USB A	DECK2,4を使用してUSB-Aに接続されたPCをコントロール	-
7	USB B	DECK2,4を使用してUSB-Bに接続されたPCをコントロール	-

5. PERFORMANCE PAD				
1-8	PERFORMANCE PAD	モード		
		HOT CUE	ホットキュー 設定/再生	ホットキュー 削除
		ROLL	ループロール	-
		SLICER	スライザー 区間 再生	-
		SAMPLER	サンプラーslot再生	サンプラーslot再生停止/ロード
		CUE LOOP	ホットキュー設定/再生+オートループ on/off	ホットキュー設定/再生+オートループ on
		SAVED LOOP	ループslotループアクティブ/ループoff	ループslot再生
		SLICER LOOP	スライザー 区間 再生	-
9	HOT CUE	長押し	HOT CUEモード	CUE LOOPモード
10	ROLL	-	SAVED FLIPモード	-
11	SLICER	-	ROLLモード	SAVED LOOPモード
12	SAMPLER	長押し	SLICERモード	SLICER LOOPモード
		-	SAMPLERモード	PITCH PLAYモード
		-	VELOCITY SAMPLERモード	-
13	PARAMETER (LEFT)	モード		
		HOT CUE	Quantize環境設定選択	-
		ROLL	ループロールサイズ選択	-
		SLICER	Quantization選択	Domain選択
		SAMPLER	サンプラーバンク選択	サンプラー出力先選択
		CUE LOOP	ループハーフ	ループシフト
		SAVED LOOP	ループハーフ	ループシフト
		SLICER LOOP	Quantization選択	Domain選択
14	PARAMETER (RIGHT)	PITCH PLAY *3	キーアップ	
		SAVED FLIP *2	FLIP記録開始	Flipループ on/off
		VELOCITY	サンプラーバンク選択	サンプラー出力先選択
		モード		
		HOT CUE	Quantize環境設定選択	-
		ROLL	ループロールサイズ選択	-
		SLICER	Quantization選択	Domain選択
		SAMPLER	サンプラーバンク選択	サンプラー出力先選択
		CUE LOOP	ループダブル	ループシフト
		SAVED LOOP	ループダブル	ループシフト
		SLICER LOOP	Quantization選択	Domain選択
		PITCH PLAY *3	キーレンジ調整	キーアップ
		SAVED FLIP *2	FLIP開始/リトリガー	Flip on/off
		VELOCITY	サンプラーバンク選択	サンプラー出力先選択

*1: クロスフェーダースタートを使用する場合はクロスフェーダーアサインスイッチをAまたはBに設定してください。
 *2: Serato Flipをアクティベートし、[SETUP]メニューで有効になっている場合のみ使用可能です。
 Serato Flipをアクティベーション後にSerato DJを再起動しないとコントローラーの一部のボタンが反応しないことがあります。
 Serato Flipをアクティベーション後は必ずSerato DJを再起動してください。
 *3: Serato Pitch'n Time DJをアクティベートし、[SETUP]メニューで有効になっている場合のみ使用可能です。
 Serato Pitch'n Time DJをアクティベーション後にSerato DJを再起動しないとコントローラーの一部のボタンが反応しないことがあります。
 Serato Pitch'n Time DJをアクティベーション後は必ずSerato DJを再起動してください。
 *4: Serato Flipをアクティベートし、[SETUP]メニューで有効になっている場合は[Flip]パネルも選択可能です。