


DDJ-WeGO

Hardware Diagram dJAY 2 for iPad

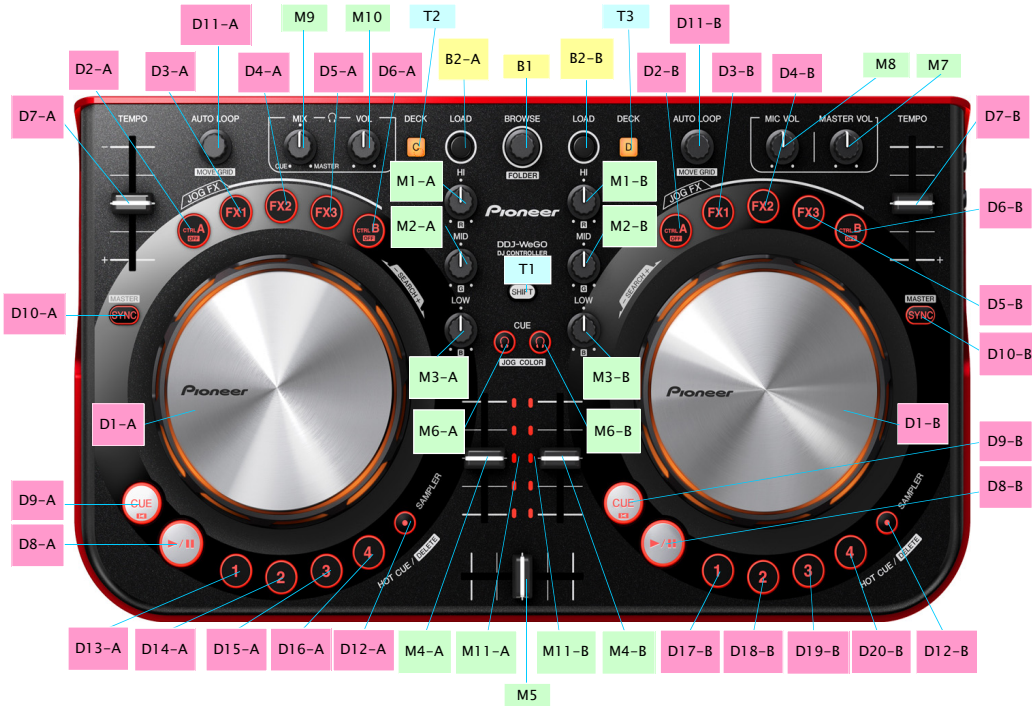

Group	No.	Name	Operation	Function	(+SHIFT)	
Browse	B1	BROWSE	Turn Press	Browse Load a track if Library is open Display the next layer if other than track is selected *6 Open library on inactive deck if it is closed.	- Display the previous layer if Library is open. *6	
	B2	LOAD	Long press Press	Close Library if it is open. Load a track if Library is open. (close Library)	-	
Mixer	M1	HI	Turn	EQ (HI)	Adjust luminance of red LED on 4 sides of the JOG	
	M2	MID	Turn	EQ (MID)	Adjust luminance of green LED on 4 sides of the JOG	
	M3	LOW	Turn	EQ (LOW)	Adjust luminance of blue LED on 4 sides of the JOG	
	M4	CH Fader	Move the slider	Channel Fader	-	
	M5	Cross Fader	Move the slider	Crossfader	-	
	M6	CUE	Press	Headphone Monitor ON/OFF	Change colors of LED on 4 sides of the JOG	
	M7	MASTER VOL	Turn	Adjust Master Volume	Adjust Master Volume	
	M8	MIC VOL	Turn	Adjust the audio level input to MIC	Adjust the audio level input to MIC	
	M9	MIX	Turn	Headphone CUE MIX	Headphone CUE MIX	
	M10	HEADPHONES VOL	Turn	Adjust headphone volume	Adjust headphone volume	
	M11	CH Input Level Meter	-	Channel Input Level Indicator	-	
Deck	D1	JOG	-	Turn	Scratch	Search
		Outer rim	-	Turn	Pitch Bend	Pitch Bend
		JOG Platter	CTRL A	Turn	-	-
		Outer rim	FX1	Turn	Change FX1 Parameter	-
		JOG Platter	FX2	Turn	Change FX2 Parameter	-
		Outer rim	FX3	Turn	Change FX3 Parameter	-
		JOG Platter	CTRL B	Turn	Adjust High-pass /Low-pass filter	-
		Outer rim	-	Turn	-	-
	D2	CTRL A	Press	Enable/Disable CTRL A Mode (no effect)	All JOGFX Mode is off	
	D3	FX1	Press	Enable/Disable FX1 (default : Echo)	Select FX1	
	D4	FX2	Press	Enable/Disable FX2 (default : Flanger)	Select FX2	
	D5	FX3	Press	Enable/Disable FX3 (default : Gate)	Select FX3	
	D6	CTRL B	Press	Enable/Disable CTRL B Mode (Filter)	All JOGFX Mode is off	
	D7	TEMPO	Move the slider	TEMPO control	-	
	D8	PLAY/PAUSE	Press	PLAY/PAUSE	Slip reverse (momentary) *4	
	D9	CUE	Press	Set CUE point/ CUE Sampler/Back CUE	Jump to the beginning of song	
	D10	SYNC	Press	Sync with another deck	Key-Lock ON/OFF	
	D11	AUTO LOOP	Turn Press	Change the Loop length Autoloop ON/OFF	Beat jump (During PLAY) Set Loop In point (After setting Loop In point) Set Loop Out point (After setting Loop Out point) Loop Off *7	
	D12	SAMPLER	Press	Sampler Mode ON/OFF	Sampler Mode ON/OFF	
	D13	Hot CUE 1	Press	Set/Play Hot Cue point 1	Cancel Hot Cue point 1	
D14	Hot CUE 2	Press	Set/Play Hot Cue point 2	Cancel Hot Cue point 2		
D15	Hot CUE 3	Press	Set/Play Hot Cue point 3	Cancel Hot Cue point 3		
D16	Hot CUE 4	Press	Set/Play Hot Cue point 4	Cancel Hot Cue point 4		
D17	SAMPLER 1	Press	Set/Play Hot Cue point 1	Cancel Hot Cue point 1		
D18	SAMPLER 2	Press	Set/Play Hot Cue point 2	Cancel Hot Cue point 2		
D19	SAMPLER 3	Press	Set/Play Hot Cue point 3	Cancel Hot Cue point 3		
D20	SAMPLER 4	Press	Set/Play Hot Cue point 4	Cancel Hot Cue point 4		
Others	T1	SHIFT	Press	-	-	
	T2	DECK C	Press	-	-	
	T3	DECK D	Press	-	-	

*1. The GUI counterpart on dJAY 2 for iPad is disabled. Audio input to MIC cannot be assigned to decks on dJAY 2 for iPad.
 *2. FX2 and FX3 are not displayed on the GUI.
 *3. Only the Mix Pulse feature, where the offset in the beats of two tracks are indicated by the strength of lights, among other Pulse Control illumination features does not function.
 *4. Slip reverse is cancelled when the PLAY/PAUSE button is released while pressing the SHIFT button. Slip reverse is continued when the SHIFT button is released while pressing the PLAY/PAUSE button.
 *5. When DECK C or DECK D is selected on DDJ-WeGO, dJAY 2 for iPad cannot control the deck.
 *6. [Playlist] and [Artist] category can be controlled.

*7. Versions 2.6 or later: Loop is off.
Versions earlier than 2.6: Loop length is halved.

