


# DDJ-WeGO

## Hardware Diagram for djay

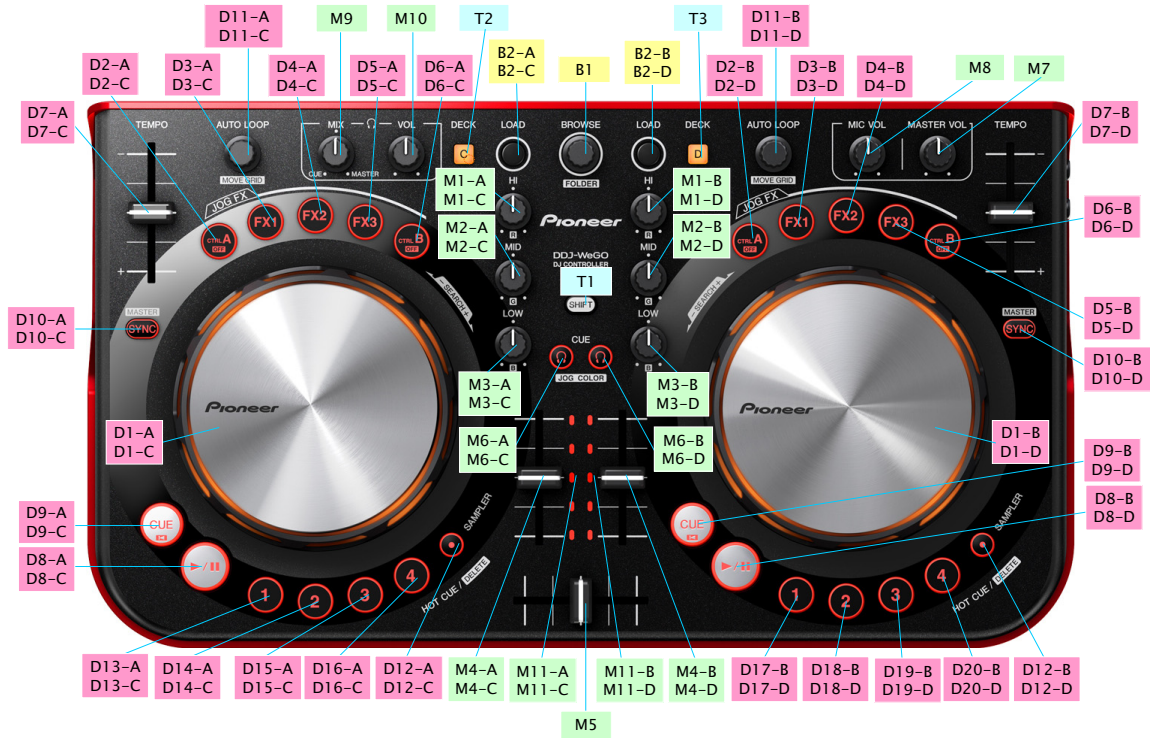

Group	No.	Name	Operation	Function	(+SHIFT)	
Browse	B1	BROWSE	Turn Press	Browse in active library view playlists active: Load track to inactive deck playlists inactive: select tracks table	- Switch Library Table	
	B2	LOAD	Press	Load a track	-	
	M1	HI	Turn	Adjust the sound quality (High)	Adjust luminance of red LED on 4 sides of the JOG	
Mixer	M2	MID	Turn	Adjust the sound quality (Mid)	Adjust luminance of green LED on 4 sides of the JOG	
	M3	LOW	Turn	Adjust the sound quality (Low)	Adjust luminance of blue LED on 4 sides of the JOG	
	M4	CH Fader	Move the slider	Channel Fader	-	
	M5	Cross Fader	Move the slider	Crossfader	-	
	M6	CUE (LED)	Press	Headphone Monitor ON/OFF	Change colors of LED on 4 sides of the JOG	
	M7	MASTER VOL	Turn	Adjust Master Volume	Adjust Master Volume	
	M8	MIC VOL	Turn	Adjust the audio level input to MIC	Adjust the audio level input to MIC	
	M9	MIX	Turn	Adjust CUE/MIX proportion	Adjust CUE/MIX proportion	
	M10	HEADPHONES VOL	Turn	Adjust the audio level output from PHONES	Adjust the audio level output from PHONES	
	M11	CH Input Level Meter	-	Channel Input Level Indicator	-	
	Deck	D1	JOG	JOG Platter	Turn	Scratch
Outer rim				Turn	Pitch Bend	-
JOG Platter			CTRL A	Turn	Key-Lock Control	-
Outer rim						
JOG Platter			FX1	Turn	Change FX1 Parameter	-
Outer rim						
JOG Platter			FX2	Turn	Change FX2 Parameter	-
Outer rim						
JOG Platter		FX3	Turn	Change FX3 Parameter	-	
Outer rim						
JOG Platter		CTRL B	Turn	Adjust High-pass / Low-pass filter	-	
Outer rim						
D2		CTRL A	Press	Key-Lock Control Mode ON	All JOGFX Mode is off	
D3		FX1	Press	Enable FX1	Select FX1	
D4		FX2	Press	Enable FX2	Select FX2	
D5		FX3	Press	Enable FX3	Select FX3	
D6		CTRL B	Press	Activate Jogwheel CTRL B Mode	All JOGFX Mode is off	
D7		TEMPO	Move the slider	TEMPO control	-	
D8		PLAY/PAUSE	Press	PLAY/PAUSE	Slip reverse(momentary)	
D9		CUE	Press	Set CUE point / CUE Sampler/Back CUE	Jump to beginning of song	
D10	SYNC	Press	Sync with the tempo of another deck	Key-Lock ON/OFF		
D11	AUTO LOOP	Turn Press	Change the Loop length Autoloop ON/OFF	- (During PLAY) Set Loop point (After setting Loop point) Set Loop Out point (After setting Loop Out point) Halve the Loop length		
D12	SAMPLER	Press	Sampler Mode ON/OFF	Sampler Mode ON/OFF		
D13	Hot CUE 1 SAMPLER 1	Press	Set/Play Hot Cue point 1 Play Sample 1	Cancel Hot Cue point 1		
D14	Hot CUE 2 SAMPLER 2	Press	Set/Play Hot Cue point 2 Play Sample 2	Cancel Hot Cue point 2		
D15	Hot CUE 3 SAMPLER 3	Press	Set/Play Hot Cue point 3 Play Sample 3	Cancel Hot Cue point 3		
D16	Hot CUE 4 SAMPLER 4	Press	Set/Play Hot Cue point 4 Play Sample 4	Cancel Hot Cue point 4		
D17	Hot CUE 1 SAMPLER 5	Press	Set/Play Hot Cue point 1 Play Sample 3	Cancel Hot Cue point 1		
D18	Hot CUE 2 SAMPLER 6	Press	Set/Play Hot Cue point 2 Play Sample 4	Cancel Hot Cue point 2		
D19	Hot CUE 3 SAMPLER 7	Press	Set/Play Hot Cue point 3 Play Sample 5	Cancel Hot Cue point 3		
D20	Hot CUE 4 SAMPLER 8	Press	Set/Play Hot Cue point 4 Play Sample 6	Cancel Hot Cue point 4		
Others	T1	SHIFT	Press	-	-	
	T2	DECK C	Press	-	-	
	T3	DECK D	Press	-	-	

\*1. The GUI counterpart on djay is disabled. Audio input to MIC cannot be assigned to decks on djay.

\*2. FX3 is not displayed on the GUI.

\*3. Only the Mix Pulse feature, where the offset in the beats of two tracks are indicated by the strength of lights, among other Pulse Control illumination features does not function.