


# DDJ-WeGO

## Hardware Diagram vjay for iPad

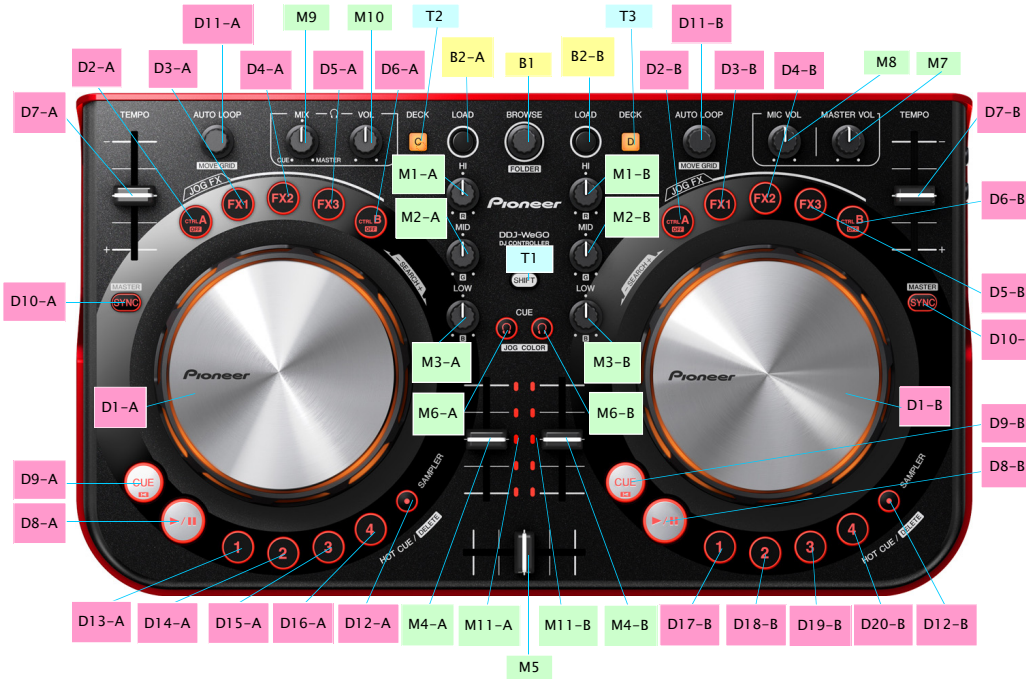

Group	No.	Name	Operation	Function	(+SHIFT)
<b>Browse</b>					
	B1	BROWSE	Turn Press	Browse ("Videos" tab only) Load a track if Library is open Open library on inactive deck if it is closed.	-
	B2	LOAD	Press long Press	Load a track if Library is open. (close Library) Close Library if Library is open.	-
<b>Mixer</b>					
	M1	HI	Turn	EQ (HI)	Adjust luminance of red LED on 4 sides of the JOG
	M2	MID	Turn	EQ (MID)	Adjust luminance of green LED on 4 sides of the JOG
	M3	LOW	Turn	EQ (LOW)	Adjust luminance of blue LED on 4 sides of the JOG
	M4	CH Fader	Move the slider	Channel Fader	-
	M5	Cross Fader	Move the slider	Crossfader	-
	M6	CUE	Press	Headphone Monitor ON/OFF	Change colors of LED on 4 sides of the JOG
	M7	MASTER VOL	Turn	Adjust Master Volume	Adjust Master Volume
	M8	MIC VOL	Turn	Adjust the audio level input to MIC	Adjust the audio level input to MIC
	M9	MIX	Turn	Headphone CUE MIX	Headphone CUE MIX
	M10	HEADPHONES VOL	Turn	Adjust headphone volume	Adjust headphone volume
	M11	CH Input Level Meter	-	Channel Input Level Indicator	-
<b>Deck</b>					
	D1	JOG	Turn	Scratch	Search
		Outer rim	Turn	Pitch Bend	Pitch Bend
		JOG Platter	CTRL A	no effect	-
		Outer rim	Turn	no effect	-
		JOG Platter	FX1	Change FX1 Parameter	-
		Outer rim	Turn	Change FX2 Parameter	-
		JOG Platter	FX2	Change FX2 Parameter	-
		Outer rim	Turn	Change FX3 Parameter	-
		JOG Platter	FX3	Change FX3 Parameter	-
		Outer rim	CTRL B	Adjust High-pass /Low-pass filter	-
	D2	CTRL A	Press	Enable/Disable CTRL A Mode (no effect)	All JOGFX Mode is off
	D3	FX1	Press	Enable/Disable FX1 (default : Crush)	Select FX1
	D4	FX2	Press	Enable/Disable FX2 (Strobe)	Select FX2
	D5	FX3	Press	Enable/Disable FX3 (Twirl)	Select FX3
	D6	CTRL B	Press	Enable/Disable CTRL B Mode (Filter)	All JOGFX Mode is off
	D7	TEMPO	Move the slider	TEMPO control	-
	D8	PLAY/PAUSE	Press	PLAY/PAUSE	Slip reverse(momentary) *4
	D9	CUE	Press	Set CUE point/ CUE Sampler/Back CUE	Jump to the beginning of song
	D10	SYNC	Press	Sync with the tempo of another deck	Key-Lock ON/OFF
	D11	AUTO LOOP	Turn Press	Change the Loop length Autoloop ON/OFF	Beat jump (During PLAY) Set Loop In point (After setting Loop In point) Set Loop Out point (After setting Loop Out point) Loop Off <sup>6</sup>
	D12	SAMPLER	Press	Hot Cue Mode ON/OFF	Hot Cue Mode ON/OFF
	D13	Hot CUE 1	Press	Set/Play Hot Cue point 1	Cancel Hot Cue point 1
	D14	Hot CUE 2	Press	Set/Play Hot Cue point 2	Cancel Hot Cue point 2
	D15	Hot CUE 3	Press	Set/Play Hot Cue point 3	Cancel Hot Cue point 3
	D16	Hot CUE 4	Press	Set/Play Hot Cue point 4	Cancel Hot Cue point 4
	D17	Hot CUE 1	Press	Set/Play Hot Cue point 1	Cancel Hot Cue point 1
	D18	Hot CUE 2	Press	Set/Play Hot Cue point 2	Cancel Hot Cue point 2
	D19	Hot CUE 3	Press	Set/Play Hot Cue point 3	Cancel Hot Cue point 3
	D20	Hot CUE 4	Press	Set/Play Hot Cue point 4	Cancel Hot Cue point 4
<b>Others</b>					
	T1	SHIFT	Press	-	-
	T2	DECK C	Press	-	-
	T3	DECK D	Press	-	-

\*1. The CUI counterpart on vjay for iPad is disabled. Audio input to MIC cannot be assigned to decks on vjay for iPad.

\*2. FX2 and FX3 are not displayed on the GUI.

\*3. Only the Mix Pulse feature, where the offset in the beats of two tracks are indicated by the strength of lights, among other Pulse Control illumination features does not function.

\*4. Slip reverse is cancelled when the PLAY/PAUSE button is released while pressing the SHIFT button. Slip reverse is continued when the SHIFT button is released while pressing the PLAY/PAUSE button.

\*5. When DECK C or DECK D is selected on DDJ-WeGO, vjay for iPad cannot control the deck.

\*6. Versions 1.4.2 or later: Loop is off.  
Versions 1.4.1 or earlier: Loop length is halved.