

DJ CONTROLLER

DDJ-WeGO

「VIRTUAL DJ LE」
MIX PULSE User Guide

MIX PULSE

When the Pulse Mode is active, the multi-color LEDs are illuminated depending on how well the beats of the 2 decks are aligned. How the LED colors change in line with the beat positions of the active deck and the MASTER DECK is illustrated below.

· When the beat is not aligned with the MASTER DECK:

The LEDs of the jog are dimly lit in white.



 
When the beat is aligned with the MASTER DECK:

The LEDs of the jog are lit in the color selected by the user.



When the beats of the both decks are matched, the LEDs are lit in the color selected by the user. Please see "Mixing" on page 11 of the Operating Instructions for details of how to align the beats of the two decks.

Even when the playback speeds of the tracks are not synced, the both decks' beats could be matched only for a moment. In such a case, the LEDs are illuminated in the color selected by the user only for the moment.



About trademarks and registered trademarks • Pioneer is a registered trademark of PIONEER CORPORATION. • Microsoft®, Windows Vista®, Windows® and Internet Explorer® are either registered trademarks or trademark of Microsoft Corporation in the United States and/or other countries.

· Apple, Macintosh, Mac OS and iTunes are trademarks of Apple Inc. registered in the United States and other countries.

2 / 2

© 2012 PIONEER CORPORATION.

All rights reserved.

PIONEER CORPORATION