


# DDJ-WeGO

## Hardware Diagram for Traktor PRO 2

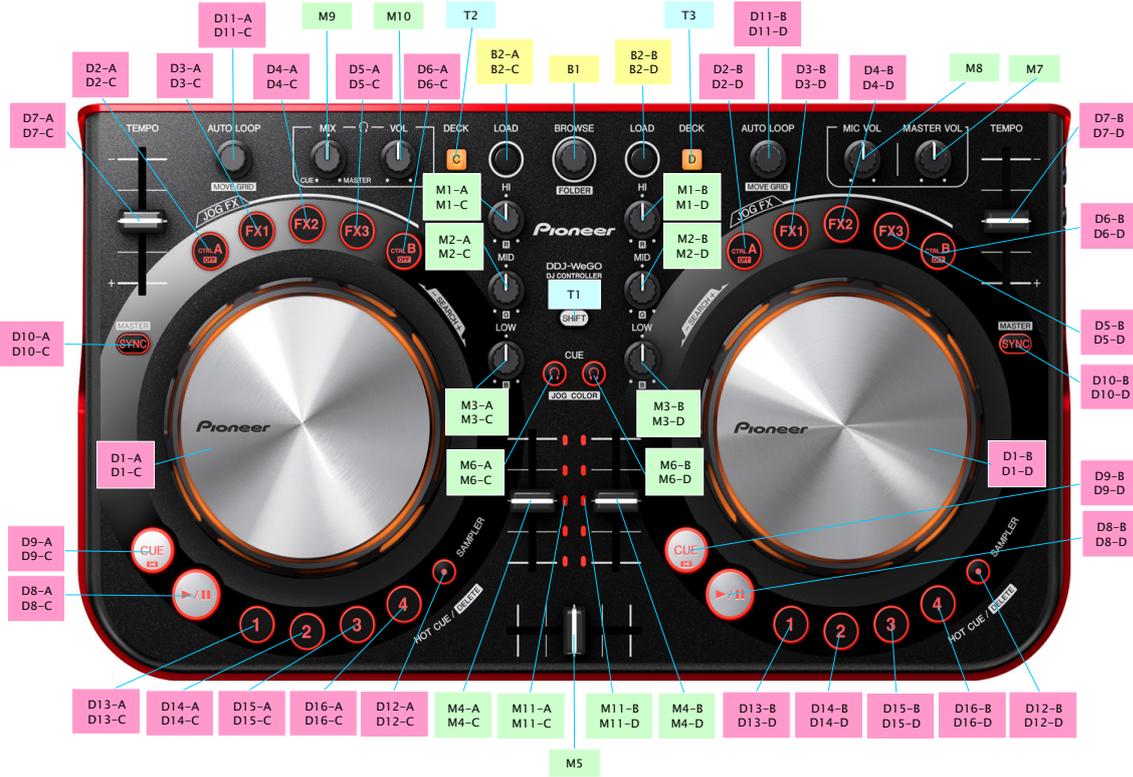

Group	No.	NAME	Operation	Deck A, B (Track Deck) Function	(+SHIFT)	Deck C, D (Remix Deck) Function	(+SHIFT)
Browse	B1	BROWSE	Turn	Move a cursor within the track list	Move a cursor across folders	Move a cursor within the track list	Move a cursor across folders
	B2	LOAD	Press	Zoom in/out the Browse screen	Open/Close a folder	Zoom in/out the Browse screen	Open/Close a folder
	B2	LOAD	Press	Load a track	Load a Remix Set	Load a track	Load a Remix Set
Miner	M1	HIGH	Turn	EQ (High)	Adjust luminance of red LED on 4 sides of the JOG	EQ (High)	Adjust luminance of red LED on 4 sides of the JOG
	M2	MID	Turn	EQ (Mid)	Adjust luminance of green LED on 4 sides of the JOG	EQ (Mid)	Adjust luminance of green LED on 4 sides of the JOG
	M3	LOW	Turn	EQ (Low)	Adjust luminance of blue LED on 4 sides of the JOG	EQ (Low)	Adjust luminance of blue LED on 4 sides of the JOG
	M4	FX Fader	Move the slider	Channel Fader	Channel Fader	Channel Fader	Channel Fader
	M5	Cross Fader	Move the slider	Cross Fader	Cross Fader	Cross Fader	Cross Fader
	M6	CUE	Press	Headphone monitor On/Off	Change LED colors of 4 sides of the JOG	Headphone monitor On/Off	Change LED colors of 4 sides of the JOG
	M7	MASTER VOL	Turn	Master output audio level adjustment	Master output audio level adjustment	Master output audio level adjustment	Master output audio level adjustment
	M8	MIC VOL	Turn	MIC input audio level adjustment	MIC input audio level adjustment	MIC input audio level adjustment	MIC input audio level adjustment
	M9	MIX	Turn	Headphone MIX	Headphone MIX	Headphone MIX	Headphone MIX
	M10	HEADPHONES VOL	Turn	Headphone output audio adjustment	Headphone output audio adjustment	Headphone output audio adjustment	Headphone output audio adjustment
	M11	CH Input Level Meter	-	Channel input level meter	Channel input level meter	Channel input level meter	Channel input level meter
Deck	D1	JOG	JOG FX OFF	Top platter Outer Wheel	Scratch Pitch Bend	Scratch Pitch Bend	
	D2 to D5	CTRL A	Group Mode	Turn	Adjust DRY/WET	Adjust DRY/WET	Adjust DRY/WET
			FX 1	Turn	Adjust FX 1 parameter	Adjust FX 1 parameter	Adjust FX 1 parameter
			FX 2	Turn	Adjust FX 2 parameter	Adjust FX 2 parameter	Adjust FX 2 parameter
	D2 to D5	CTRL B	Group Mode	Turn	Adjust DRY/WET	Adjust DRY/WET	Adjust DRY/WET
			FX 1	Turn	Adjust FX 1 parameter	Adjust FX 1 parameter	Adjust FX 1 parameter
			FX 2	Turn	Adjust FX 2 parameter	Adjust FX 2 parameter	Adjust FX 2 parameter
	D2 to D5	Single Mode	FX 1	Turn	Adjust FX 1 parameter	Adjust FX 1 parameter	Adjust FX 1 parameter
			FX 2	Turn	Adjust FX 2 parameter	Adjust FX 2 parameter	Adjust FX 2 parameter
			FX 3	Turn	Adjust FX 3 parameter	Adjust FX 3 parameter	Adjust FX 3 parameter
	D6	CTRL B	Press	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter
	D7	TEMPO	Move the slider	TEMPO control	TEMPO control	TEMPO control	TEMPO control
	D8	PLAY/PAUSE	Press	PLAY/PAUSE	PLAY/PAUSE from the beginning of tracks of all slots	PLAY/PAUSE from the beginning of tracks of all slots	PLAY/PAUSE from the beginning of tracks of all slots
	D9	CUE	Press	Set CUE point/CUE Sampler/Back CUE	Jump to the beginning of the track	Trigger playback of all slots	Trigger playback of all slots
	D10	SYNC	Press	Sync with the tempo of Master Deck	Select Master deck	Sync with the tempo of Master deck	Sync with the tempo of Master deck
D11	AUTO LOOP	Turn	Change the Loop length	Adjust beatgrid	Change the Loop length	Change the Loop length	
D12	SAMPLER	Press	Autoloop On/Off	(During Play) Set a Loop Point (After a Loop Point is set) Set a Loop Out Point (After a Loop Out Point is set) Loop Off	Autoloop On/Off	(During Play) Set a Loop Point (After a Loop Point is set) Set a Loop Out Point (After a Loop Out Point is set) Loop Off	
D13 to D16	SAMPLER	Hot CUE 1 to 4 (SAMPLER mode)	Press	Sampler mode On/Off Set/Play Hot Cue Point1 to 4	Sampler mode On/Off Cancel Hot Cue Point1 to 4	Sampler mode On/Off Trigger playback Sample Slot1 to 4	Sampler mode On/Off Switch Play mode of Sample Slot1 to 4
Others	T1	SHIFT	Press				
	T2	DECK C	Press	Switch Deck A/C		Switch Deck A/C	
	T2	DECK C	Press	Switch Deck A/C		Switch Deck A/C	
	T2	DECK D	Press	Switch Deck B/D		Switch Deck B/D	

\*1. The GUI of Traktor is not synced with the levels of [MAIN LEVEL]/[HEADPHONES VOLUME]/[AUX VOLUME] on DDJ-WeGO. MIC audio cannot be assigned to the GUI of Traktor. Double-click [MAIN LEVEL] and [HEADPHONES VOLUME] on the GUI of Traktor to set to 0dB.

\*2. On Remix Deck, the JOG ring illumination does not work properly. The SYNC button is not lit.

\*3. When CTRL A is on in Single Mode or either one of FX1, FX2, FX3 is on in Group Mode, Traktor's Effect Insert button is enabled in the following combinations.  
Deck A : Effect Insert 1  
Deck B : Effect Insert 2  
Deck C : Effect Insert 3  
Deck D : Effect Insert 4

\*4. This function is enabled only when pressing the [SAMPLER+4] button for the playback, but it is disabled when pressing the Play/Pause button.

\*First, turn on the power of DDJ-WeGO. Then, run the Traktor PRO2 software. If you launch them in reverse order, close TRAKTOR PRO 2 and turn off the power of DDJ-WeGO. Then, after turning on the power of DDJ-WeGO, reboot TRAKTOR PRO 2 and check all the settings of [9. Audio-related settings].