


DDJ-WeGO

Hardware Diagram for Serato DJ Lite

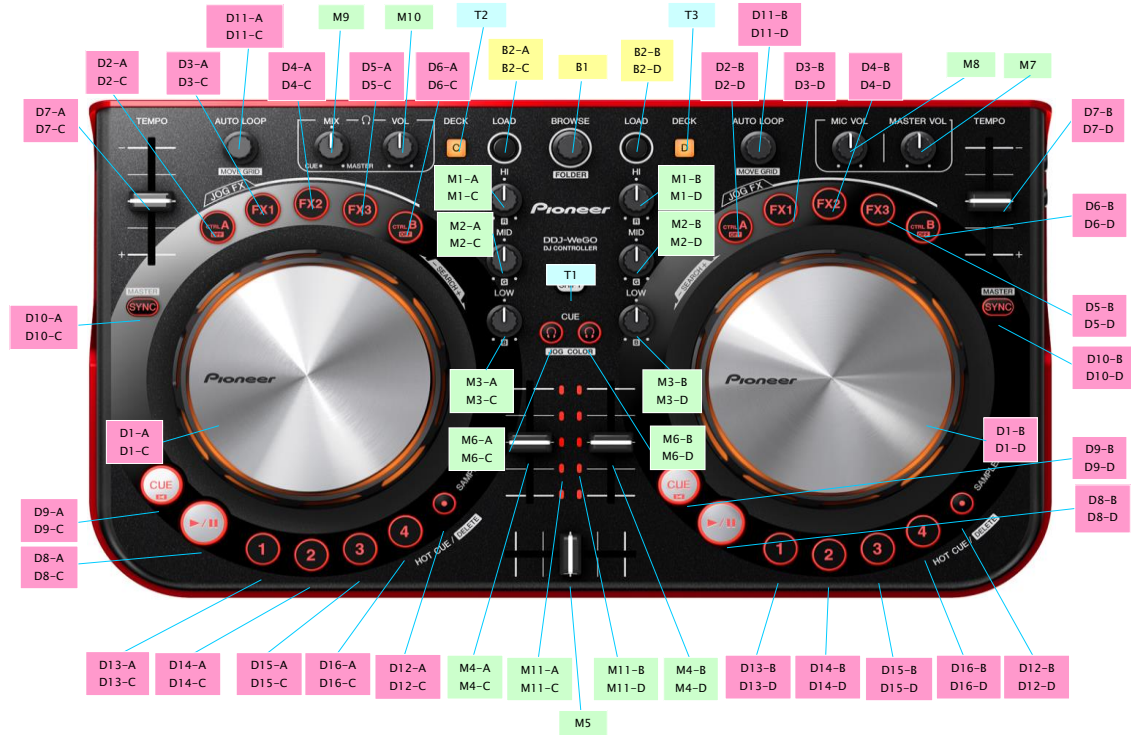

Group	No.	Name	Operation	Function	(+SHIFT)	
Browse	B1	BROWSE	Turn	LIBRARY SCROLL	-	
			Press	Move to the next layer	Move to the previous layer	
	B2	LOAD	Press	Load a track	-	
Mixer	M1	HI	Turn	EQ(HI)	Adjust luminance of red LED on 4 sides of the JOG	
	M2	MID	Turn	EQ(MID)	Adjust luminance of green LED on 4 sides of the JOG	
	M3	LOW	Turn	EQ(LOW)	Adjust luminance of blue LED on 4 sides of the JOG	
	M4	CH Fader	Move the slider	Channel Fader	-	
	M5	Crossfader	Move the slider	Crossfader	-	
	M6	CUE	Press	Headphone Monitor ON/OFF	Change colors of LED on 4 sides of the JOG	
	M7	MASTER VOL	Turn	Adjust the sound level output from MASTER	Adjust the sound level output from MASTER *1	
	M8	MIC VOL	Turn	Adjust the audio level input to MIC	Adjust the audio level input to MIC *1	
	M9	MIX	Turn	HEADPHONES MIX	HEADPHONES MIX	
	M10	HEADPHONES VOL	Turn	Adjust the audio level output from PHONES	Adjust the audio level output from PHONES *1	
	M11	CH Level Meter	-	Channel Input Level Indicator	-	
Deck	D1	JOG Platter	-	Turn	Scratch	Search
		Outer rim	-	Turn	Pitch bend	Pitch bend
		JOG Platter	CTRL A	Turn	Adjust High-pass /Low-pass filter	-
		Outer rim	FX1	Turn	Adjust FX1-1/FX2-1 Parameter	-
		JOG Platter	FX2	Turn	Adjust FX1-2/FX2-2 Parameter	-
		Outer rim	FX3	Turn	Adjust FX1-3/FX2-3 Parameter	-
		JOG Platter	CTRL B	Turn	FX Beats	-
		Outer rim	-	Turn	-	-
	D2	CTRL A	Press	JOGFX High-pass/Low-pass Filter ON	All JOGFX Mode is off	
	D3	FX1	Press	JOGFX FX1-1 /FX2-1 ON	Select Effect FX1-1 /FX2-1	
	D4	FX2	Press	JOGFX FX1-2 /FX2-2 ON	Select Effect FX1-2 /FX2-2	
	D5	FX3	Press	JOGFX FX1-3 /FX2-3 ON	Select Effect FX1-3 /FX2-3	
	D6	CTRL B	Press	JOGFX FX Beats Adjust Mode ON	All JOGFX Mode is off	
	D7	TEMPO	Move the slider	TEMPO control	-	
	D8	PLAY/PAUSE	Press	PLAY/PAUSE	Stutter	
	D9	CUE	Press	Set CUE point/ CUE Sampler/Back CUE	previous track	
D10	SYNC	Press	Sync On	Sync Off		
D11	AUTO LOOP	Press	Change the Loop length	-		
		Press	Autoloop ON/OFF	-		
D12	SAMPLER	Press	Sampler Mode ON/OFF	Sampler Mode ON/OFF		
D13	Hot CUE 1	Press	Set/Play Hot Cue point 1	Delete Hot Cue point 1		
	SAMPLER 1	SAMPLER Mode	Play Sampler 1	Stop Sampler 1		
D14	Hot CUE 2	Press	Set/Play Hot Cue point 2	Delete Hot Cue point 2		
	SAMPLER 2	SAMPLER Mode	Play Sampler 2	Stop Sampler 2		
D15	Hot CUE 3	Press	Set/Play Hot Cue point 3	Delete Hot Cue point 3		
	SAMPLER 3	SAMPLER Mode	Play Sampler 3	Stop Sampler 3		
D16	Hot CUE 4	Press	Set/Play Hot Cue point 4	Delete Hot Cue point 4		
	SAMPLER 4	SAMPLER Mode	Play Sampler 4	Stop Sampler 4		
Others	T1	SHIFT	Press	-	-	
	T2	DECK C	Press	-	-	
	T3	DECK D	Press	-	-	

*1. The GUI counterpart on Serato DJ Lite is disabled. Audio Input to MIC cannot be assigned to decks on Serato DJ Lite.

*2. When the JOG FX Mode is ON (either LED of CTRL A, FX1, FX2, FX3 or CTRL B is lit), scratch or pitch bend using the JOG cannot be performed. Please turn off the JOG FX Mode before performing scratch or pitch bend.

*3. When [Use auto gain] is ticked in the [Setup] of Serato DJ Lite, auto gain is enabled. Individual control of Gain or TRIM is not available.

*4. The JOG wheel illumination does not always work in the same way as other DJ applications.

[Note] Please use your computer to control any features other than listed in the above hardware diagram.