


# DDJ-WeGO

## Hardware Diagram for Serato DJ Pro

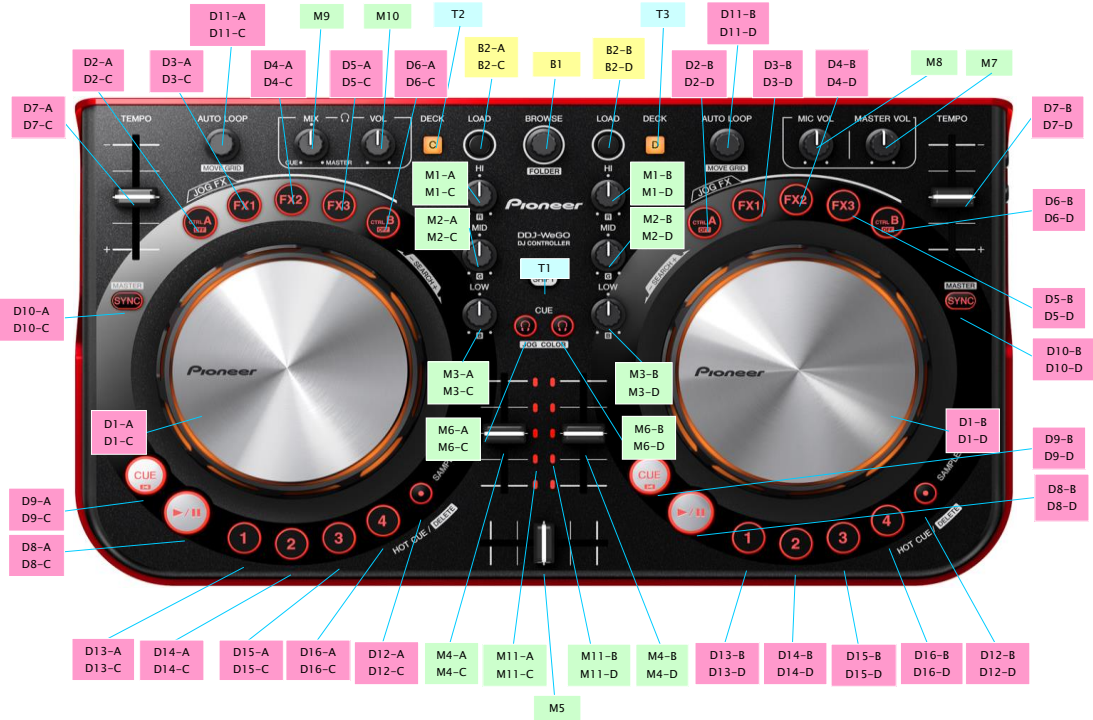

Group	No.	Name	Operation	Function	(+SHIFT)	
Browse	B1	BROWSE	Turn	LIBRARY SCROLL	ACCELERATED LIBRARY SCROLL	
	B2	LOAD	Press	Move to the next layer Load a track	Move to the previous layer Eject	
Mixer	M1	HI	Turn	EQ (HI)	Adjust luminance of red LED on 4 sides of the JOG	
	M2	MID	Turn	EQ (MID)	Adjust luminance of green LED on 4 sides of the JOG	
	M3	LOW	Turn	EQ (LOW)	Adjust luminance of blue LED on 4 sides of the JOG	
	M4	CH Fader	Move the slider	Channel Fader	-	
	M5	Crossfader	Move the slider	Crossfader	-	
	M6	CUE	Press	Headphone Monitor ON/OFF	Change colors of LED on 4 sides of the JOG	
	M7	MASTER VOL	Turn	Adjust the sound level output from MASTER	Adjust the sound level output from MASTER *1	
	M8	MIC VOL	Turn	Adjust the audio level input to MIC	Adjust the audio level input to MIC *1	
	M9	MIX	Turn	HEADPHONES MIX	HEADPHONES MIX	
	M10	HEADPHONES VOL	Turn	Adjust the audio level output from PHONES	Adjust the audio level output from PHONES *1	
	M11	CH Level Meter	-	Channel Input Level Indicator	-	
Deck	D1	JOG Platter	Turn	Scratch	Search	
		Outer rim	Turn	Pitch bend	Pitch bend	
		JOG Platter	CTRL A	Turn	Adjust High-pass /Low-pass filter	-
		Outer rim	CTRL A	Turn	Adjust High-pass /Low-pass filter	-
		JOG Platter	FX1	Turn	Single FX mode : Adjust FX1 /FX2 Parameter1 Multi FX mode : Adjust FX1-1 /FX2-1 Parameter	-
		Outer rim	FX1	Turn	Single FX mode : Adjust FX1 /FX2 Parameter2 Multi FX mode : Adjust FX1-2 /FX2-2 Parameter	-
		JOG Platter	FX2	Turn	Single FX mode : Adjust FX1 /FX2 Parameter3 Multi FX mode : Adjust FX1-3 /FX2-3 Parameter	-
		Outer rim	FX2	Turn	Single FX mode : Adjust FX1 /FX2 Parameter3 Multi FX mode : Adjust FX1-3 /FX2-3 Parameter	-
	D2	CTRL A	Press	JOGFX High-pass /Low-pass Filter ON Single FX mode : JOGFX FX1 /FX2 Adjust Parameter1 Mode ON Multi FX mode : JOGFX FX1-1 /FX2-1 ON	All JOGFX Mode is off : Effect Beats except for above : All JOGFX Mode is off	
		FX1	Press	Single FX mode : JOGFX FX1 /FX2 Adjust Parameter2 Mode ON Multi FX mode : JOGFX FX1-2 /FX2-2 ON	Single FX mode : Select Effect FX1 /FX2 Multi FX mode : Select Effect FX1-1 /FX2-1	
		FX2	Press	Single FX mode : JOGFX FX1 /FX2 Adjust Parameter3 Mode ON Multi FX mode : JOGFX FX1-3 /FX2-3 ON	Single FX mode : - Multi FX mode : Select Effect FX1-2 /FX2-2	
		FX3	Press	Single FX mode : JOGFX FX1 /FX2 Adjust Parameter3 Mode ON Multi FX mode : JOGFX FX1-3 /FX2-3 ON	Single FX mode : - Multi FX mode : Select Effect FX1-3 /FX2-3	
		CTRL B	Press	JOGFX FX Beats Adjust Mode ON	All JOGFX Mode is off : Effect Beats except for above : All JOGFX Mode is off	
		TEMPO	Move the slider	TEMPO control	-	
		PLAY / PAUSE	Press	PLAY / PAUSE	-	
		CUE	Press	Set CUE point / CUE Sampler / Back CUE	Stutter previous track	
D10	SYNC	Press	Sync On	Sync Off BeatGrid Adjust		
	AUTO LOOP	Turn	Change the Loop length	Loop Roll		
	SAMPLER	Press	AutoLoop ON / OFF	Sampler Mode ON / OFF		
	Hot CUE 1	Press	Sampler Mode ON / OFF	Sampler Mode ON / OFF		
	SAMPLER 1	SAMPLER Mode	Set / Play Hot Cue point 1	Delete Hot Cue point 1 Stop Sampler 1		
	Hot CUE 2	Press	Set / Play Hot Cue point 2	Delete Hot Cue point 2 Stop Sampler 2		
	SAMPLER 2	SAMPLER Mode	Set / Play Hot Cue point 2	Delete Hot Cue point 2 Stop Sampler 2		
	Hot CUE 3	Press	Set / Play Hot Cue point 3	Delete Hot Cue point 3 Stop Sampler 3		
D16	SAMPLER 3	SAMPLER Mode	Set / Play Hot Cue point 3	Delete Hot Cue point 3 Stop Sampler 3		
	Hot CUE 4	Press	Set / Play Hot Cue point 4	Delete Hot Cue point 4 Stop Sampler 4		
	SAMPLER 4	SAMPLER Mode	Set / Play Hot Cue point 4	Delete Hot Cue point 4 Stop Sampler 4		
	SAMPLER 4	SAMPLER Mode	Set / Play Hot Cue point 4	Delete Hot Cue point 4 Stop Sampler 4		
Others	T1	SHIFT	Press	-	-	
	T2	DECK C	Press	Switch Deck A and Deck C	-	
	T3	DECK D	Press	Switch Deck B and Deck D	-	

\*1. The GUI counterpart on Serato DJ Pro is disabled. Audio Input to MIC cannot be assigned to decks on Serato DJ Pro.  
 \*2. LOOP ROLL is activated only while both the AUTO LOOP encoder and the Shift button are pressed.  
 When you want to cancel LOOP ROLL on Serato DJ Pro, ensure that your finger is first released from the AUTO LOOP encoder before the Shift button.  
 \*3. EQ (HI), EQ (MID), EQ (LOW) and Channel fader are not displayed on the GUI of Serato DJ Pro on the computer screen, but Serato DJ Pro Actually controls each of them on each deck.  
 Also, TEMPO is controlled on each deck of Serato DJ Pro.  
 When decks are switched, the values on Serato DJ Pro and those on the knobs and faders on DDJ-WeGO may not be the same.  
 Only after a knob or a fader is moved to the same value on Serato DJ Pro, the knob or the fader on DDJ-WeGO becomes controllable.  
 The default values of Deck C / D on Serato DJ Pro: Center position for EQ (HI), EQ (MID) and EQ (LOW); +/-0.0% for TEMPO; Minimum for Channel fader.  
 \*4. When the JOG FX Mode is ON (either LED of CTRL A, FX1, FX2, FX3 or CTRL B is lit), scratch or pitch bend using the JOG cannot be performed.  
 Please turn off the JOG FX Mode before performing scratch or pitch bend.  
 \*5. The JOG wheel illumination does not always work in the same way as other DJ applications.

[Note] Please use your computer to control any features other than listed in the above hardware diagram.