


DDJ-WeGO

Hardware Diagram for Virtual DJ

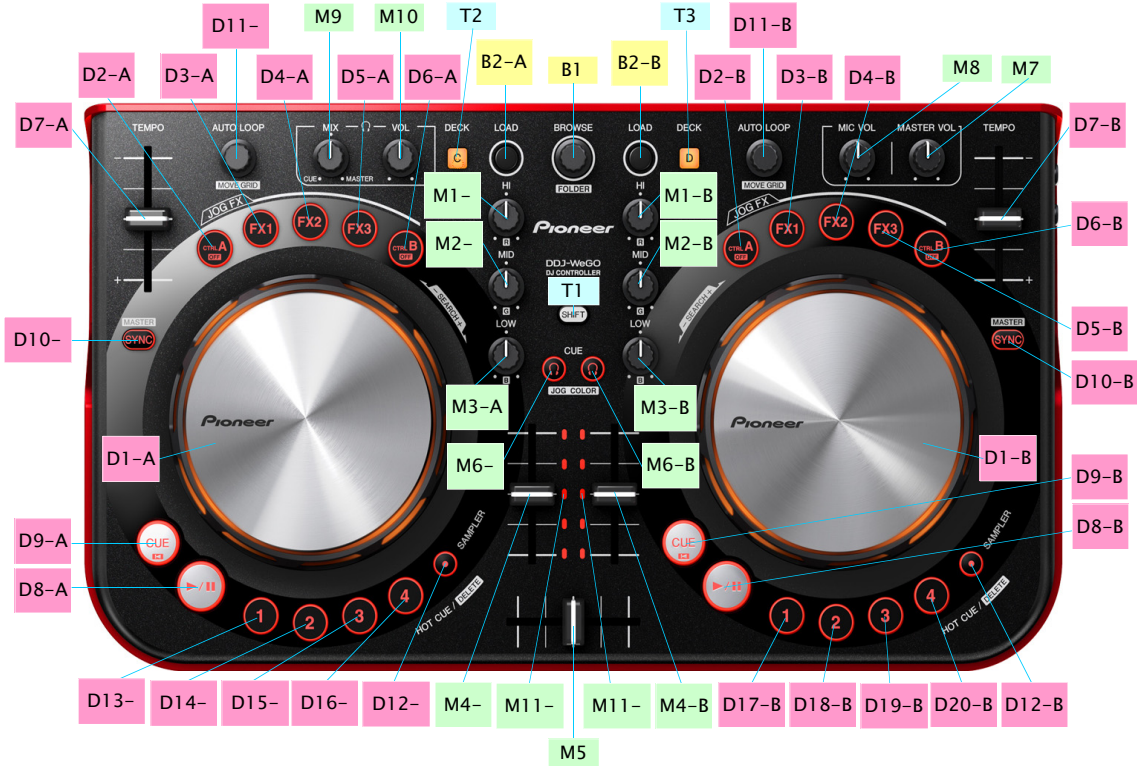

Group	No.	Name	Operation	Function	(+SHIFT)
Browse	B1	BROWSE	Turn	Move a cursor within the track list	Move a cursor across folders
	B2	LOAD	Press	Load a track	Open/close a folder
Mixer	M1	HI	Turn	Adjust the sound quality (High)	Adjust luminance of red LED on 4 sides of the JOG
	M2	MID	Turn	Adjust the sound quality (Mid)	Adjust luminance of green LED on 4 sides of the JOG
	M3	LOW	Turn	Adjust the sound quality (Low)	Adjust luminance of blue LED on 4 sides of the JOG
	M4	CH Fader	Move the slider	Channel Fader	-
	M5	Cross Fader	Move the slider	Crossfader	-
	M6	CUE (C)	Press	Headphone Monitor ON/OFF	Change colors of LED on 4 sides of the JOG
	M7	MASTER VOL	Turn	Adjust the sound level output from MASTER	-
	M8	MIC VOL	Turn	Adjust the audio level input to MIC	*1
	M9	MIX	Turn	HEADPHONES MIX	-
	M10	HEADPHONES VOL	Turn	Adjust the audio level output from PHONES	*1
	M11	CH Input Level Meter	-	Channel Input Level Indicator	-
Deck	D1	JOG Platte	Turn	Scratch	Search
		Outer rim	Turn	Pitch bend	-
		JOG Platte	Turn	Key control	-
		Outer rim	Turn	Key control	-
		CTRL A	Turn	Adjust FX1 Parameter1	Adjust FX1 Parameter2
		FX1	Turn	Adjust FX2 Parameter1	Adjust FX2 Parameter2
		FX2	Turn	Adjust FX3 Parameter1	Adjust FX3 Parameter2
		FX3	Turn	Adjust High-pass /Low-pass filter	-
	D2	CTRL B	Turn	Adjust High-pass /Low-pass filter	-
	D3	CTRL A	Press	JOGFX CTRL A Mode ON	All JOGFX Mode is off
	D4	FX1	Press	JOGFX FX1 Mode ON	Select Effect1
	D5	FX2	Press	JOGFX FX2 Mode ON	Select Effect2
	D6	FX3	Press	JOGFX FX3 Mode ON	Select Effect3
	D7	CTRL B	Press	JOGFX CTRL B Mode ON	All JOGFX Mode is off
	D8	TEMPO	Move the slider	TEMPO control	-
	D9	PLAY/PAUSE	Press	PLAY/PAUSE	-
	D10	CUE	Press	Set CUE point/ CUE Sampler/Back CUE	Jump to the beginning of the track
	D11	SYNC	Press	Sync with the tempo of Master deck	Select Master deck
	D12	AUTO LOOP	Turn	Change the Loop length	Adjust Beatgrid *2
	D13	Autoloop ON/OFF	Press	Autoloop ON/OFF	(During PLAY) Set Loop point *3 (After setting Loop point) Set Loop Out point (After setting Loop Out point) Loop off
D14	SAMPLER	Press	Sampler Mode ON/OFF	-	
D15	Hot CUE 1	Press	Set/Play Hot Cue point 1	Cancel Hot Cue point 1	
D16	SAMPLER 1	SAMPLER Mode	Set/Play Sampler1	Play from the beginning of Sampler 1	
D17	Hot CUE 2	Press	Set/Play Hot Cue point 2	Cancel Hot Cue point 2	
D18	SAMPLER 2	SAMPLER Mode	Set/Play Sampler 2	Play from the beginning of Sampler 2	
D19	Hot CUE 3	Press	Set/Play Hot Cue point 3	Cancel Hot Cue point 3	
D20	SAMPLER 3	SAMPLER Mode	Set/Play Sampler 3	Play from the beginning of Sampler 3	
D21	Hot CUE 4	Press	Set/Play Hot Cue point 4	Cancel Hot Cue point 4	
D22	SAMPLER 4	SAMPLER Mode	Set/Play Sampler 4	Play from the beginning of Sampler 4	
D23	Hot CUE 1	Press	Set/Play Hot Cue point 1	Cancel Hot Cue point 1	
D24	SAMPLER 5	SAMPLER Mode	Set/Play Sampler 5	Play from the beginning of Sampler 5	
D25	Hot CUE 2	Press	Set/Play Hot Cue point 2	Cancel Hot Cue point 2	
D26	SAMPLER 6	SAMPLER Mode	Set/Play Sampler 6	Play from the beginning of Sampler 6	
D27	Hot CUE 3	Press	Set/Play Hot Cue point 3	Cancel Hot Cue point 3	
D28	SAMPLER 7	SAMPLER Mode	Set/Play Sampler 7	Play from the beginning of Sampler 7	
D29	Hot CUE 4	Press	Set/Play Hot Cue point 4	Cancel Hot Cue point 4	
D30	SAMPLER 8	SAMPLER Mode	Set/Play Sampler 8	Play from the beginning of Sampler 8	
Others	T1	SHIFT	Press	-	-
	T2	DECK C	Press	Switch Deck A and Deck C	-
	T3	DECK D	Press	Switch Deck C and Deck D	-

*1. The GUI counterpart on VirtualDJ is disabled. Audio input to MIC cannot be assigned to decks on VirtualDJ.
 *2. Only available in Virtual DJ Pro version.
 *3. Five-second Manual Loop at maximum can be set.