


DDJ-WeGO2

Hardware Diagram for TRAKTOR PRO 2 ver. 2.6.5

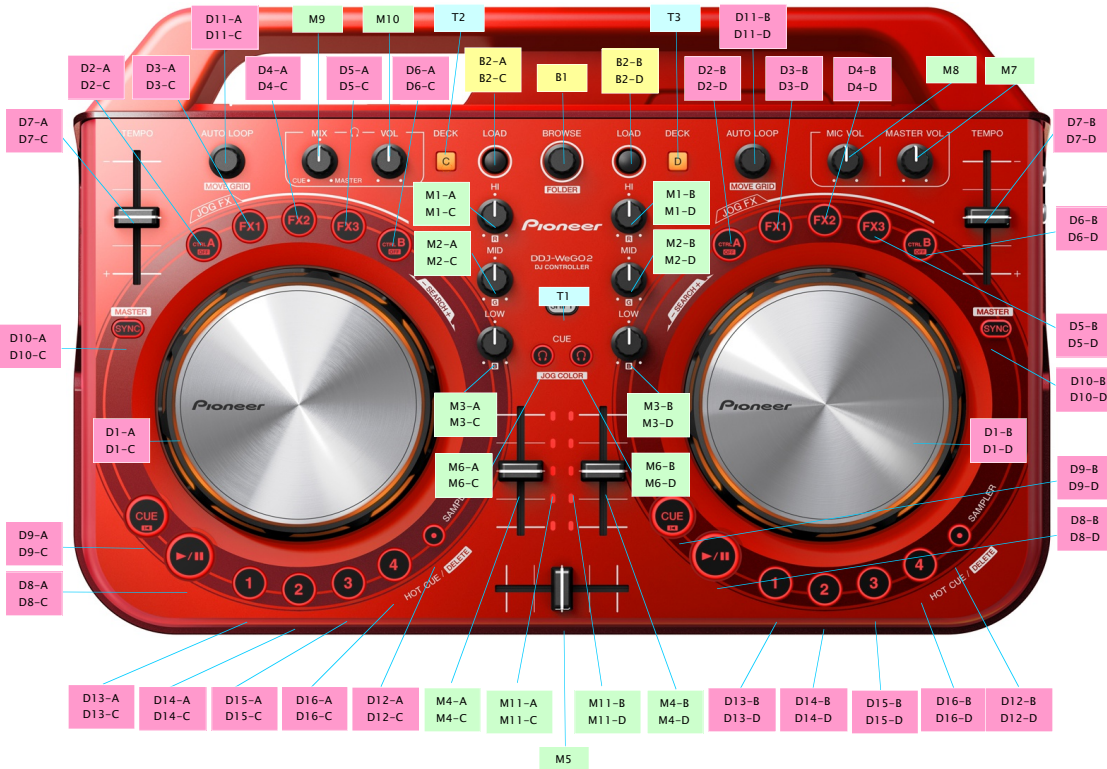

Group	No.	Name	Operation	Deck A, B (Track Deck)	Function	Deck C, D (Remix Deck)	Function	
Browse	B1	BROWSE	Turn	Move a cursor within the track list	Move cursor within the browser tree	Move a cursor within the track list	Move cursor within the browser tree	
	B2	LOAD	Press	Open/Close a folder	Open/Close a folder	Open/Close a folder	Open/Close a folder	
Mixer	M1	EQ HI	Turn	EQ (High)	Adjust luminance of red LED on 4 sides of the JOG	EQ (High)	Adjust luminance of red LED on 4 sides of the JOG	
	M2	MID	Turn	EQ (Mid)	Adjust luminance of green LED on 4 sides of the JOG	EQ (Mid)	Adjust luminance of green LED on 4 sides of the JOG	
	M3	LOW	Turn	EQ (Low)	Adjust luminance of blue LED on 4 sides of the JOG	EQ (Low)	Adjust luminance of blue LED on 4 sides of the JOG	
	M4	CROSS FADER	Move the slider	Channel Fader	-	Channel Fader	-	
	M5	CUE	Press	Headphone Monitor ON/OFF	Change colors of LED on 4 sides of the JOG	Headphone Monitor ON/OFF	Change colors of LED on 4 sides of the JOG	
	M6	MASTER VOL	Turn	Adjust the sound level output from MASTER	Adjust the sound level output from MASTER	Adjust the sound level output from MASTER	Adjust the sound level output from MASTER	
	M7	MIC VOL	Turn	Adjust the audio level input to MIC	Adjust the audio level input to MIC	Adjust the audio level input to MIC	Adjust the audio level input to MIC	
	M8	MIX	Turn	HEADPHONES MIX	HEADPHONES MIX	HEADPHONES MIX	HEADPHONES MIX	
	M9	HEADPHONES VOL	Turn	Adjust the audio level output from PHONES	Adjust the audio level output from PHONES	Adjust the audio level output from PHONES	Adjust the audio level output from PHONES	
	M10	CH INPUT LEVEL METER	Turn	Channel Input Level Indicator	Channel Input Level Indicator	Channel Input Level Indicator	Channel Input Level Indicator	
	Deck	D1	JOG FX OFF	JOG Platter	Scratch	Scratch	Scratch	Scratch
				Outer rim	Pitch Bend	Pitch Bend	Pitch Bend	Pitch Bend
JOG FX ON / Group Mode			JOG Platter	Adjust DRY/WET	Adjust DRY/WET	Adjust DRY/WET	Adjust DRY/WET	Adjust DRY/WET
			Outer rim	Adjust Effect1 parameter	Adjust Effect1 parameter	Adjust Effect1 parameter	Adjust Effect1 parameter	Adjust Effect1 parameter
			JOG Platter	Adjust Effect2 parameter	Adjust Effect2 parameter	Adjust Effect2 parameter	Adjust Effect2 parameter	Adjust Effect2 parameter
			Outer rim	Adjust Effect3 parameter	Adjust Effect3 parameter	Adjust Effect3 parameter	Adjust Effect3 parameter	Adjust Effect3 parameter
		JOG Platter	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	
		Outer rim	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	
JOG FX ON / Single Mode		JOG Platter	Adjust DRY/WET	Adjust parameter1	Adjust parameter1	Adjust parameter1	Adjust parameter1	
		Outer rim	Adjust parameter1	Adjust parameter2	Adjust parameter2	Adjust parameter2	Adjust parameter2	
		JOG Platter	Adjust parameter2	Adjust parameter3	Adjust parameter3	Adjust parameter3	Adjust parameter3	
		Outer rim	Adjust parameter3	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	Adjust High-pass/Low-pass Filter	
		JOG Platter	Adjust High-pass/Low-pass Filter	Enable/Disable adjust DRY/WET	Enable/Disable adjust DRY/WET	Enable/Disable adjust DRY/WET	Enable/Disable adjust DRY/WET	
		Outer rim	Enable/Disable adjust DRY/WET	Enable/Disable Effect1	Enable/Disable Effect1	Enable/Disable Effect1	Enable/Disable Effect1	
D2 to D5		CTRL A	FX 1	Enable/Disable Effect2	Enable/Disable Effect2	Enable/Disable Effect2	Enable/Disable Effect2	
			FX 2	Enable/Disable Effect3	Enable/Disable Effect3	Enable/Disable Effect3	Enable/Disable Effect3	
		CTRL B	FX 1	Enable/Disable Effect1	Enable/Disable Effect1	Enable/Disable Effect1	Enable/Disable Effect1	
			FX 2	Enable/Disable Effect2	Enable/Disable Effect2	Enable/Disable Effect2	Enable/Disable Effect2	
D6	CTRL B	FX 3	Enable/Disable adjust parameter1	Enable/Disable adjust parameter1	Enable/Disable adjust parameter1	Enable/Disable adjust parameter1		
		FX 3	Enable/Disable adjust parameter2	Enable/Disable adjust parameter2	Enable/Disable adjust parameter2	Enable/Disable adjust parameter2		
D7	TEMPO	Tempo control	Tempo control	Tempo control	Tempo control	Tempo control		
		PLAY/PAUSE	PLAY/PAUSE from the beginning of tracks of all slots	PLAY/PAUSE from the beginning of tracks of all slots	PLAY/PAUSE from the beginning of tracks of all slots	PLAY/PAUSE from the beginning of tracks of all slots		
D8	CUE	Set CUE point / CUE Sampler/Back CUE	Jump to the beginning of the track	Jump to the beginning of the track	Jump to the beginning of the track	Jump to the beginning of the track		
		Sync with the tempo of Master Deck	Select Master deck	Select Master deck	Select Master deck	Select Master deck		
D9	SYNC	Change the Loop length	Adjust Beatgrid	Adjust Beatgrid	Adjust Beatgrid	Adjust Beatgrid		
		Autoloop ON/OFF	Autoloop ON/OFF	Autoloop ON/OFF	Autoloop ON/OFF	Autoloop ON/OFF		
D10	AUTO LOOP	Change the Loop length	Adjust Beatgrid	Adjust Beatgrid	Adjust Beatgrid	Adjust Beatgrid		
		Autoloop ON/OFF	Autoloop ON/OFF	Autoloop ON/OFF	Autoloop ON/OFF	Autoloop ON/OFF		
D11	SAMPLER	Sampler Mode ON/OFF	Sampler Mode ON/OFF	Sampler Mode ON/OFF	Sampler Mode ON/OFF	Sampler Mode ON/OFF		
		Set Play Hot Cue Point1 to 4	Set Play Hot Cue Point1 to 4	Set Play Hot Cue Point1 to 4	Set Play Hot Cue Point1 to 4	Set Play Hot Cue Point1 to 4		
D12	SAMPLER 1 to 4 (SAMPLER Mode)	empty	Sample a track on the Track Deck	empty	Sample a track on the Track Deck	empty		
		Loaded	Play a track from the beginning	Loaded	Play a track from the beginning	Loaded		
D13	SAMPLER 1 to 4 (SAMPLER Mode)	Playing(One-shot)	Stop	Playing(One-shot)	Stop	Playing(One-shot)		
		Playing(Looped)	Mute/Unmute	Playing(Looped)	Mute/Unmute	Playing(Looped)		
Others	T1	SHIFT	Press	-	-	-		
		DECK C	Press	Switch Deck A and Deck C	-	Switch Deck A and Deck C	-	
Others	T2	DECK D	Press	Switch Deck C and Deck D	-	Switch Deck C and Deck D	-	
		DECK D	Press	Switch Deck C and Deck D	-	Switch Deck C and Deck D	-	

[Note relating to the use]
 First, turn on the power of DDJ-WeGO2. Then, run the Traktor PRO2 software.
 If you launch them in reverse order, close TRAKTOR PRO 2 and turn off the power of DDJ-WeGO2.
 Then, after turning on the power of DDJ-WeGO2, reboot TRAKTOR PRO 2 and check all the settings of [B. Audio-related settings].

- This knob and its GUI counterpart on TRAKTOR PRO 2 are not synced each other. Double-click [MAIN LEVEL] and [HEADPHONES VOLUME] on the GUI of Traktor to set to 0dB.
- Audio input to MIC cannot be assigned to decks on TRAKTOR PRO 2.
- When multiple JOG FX mode is on, all the parameters of the active effects, DRY/WET and filters will be adjusted. When you want to adjust the parameter of a specific effect, DRY/WET or a specific filter, while holding an active button you want to adjust among CTRLA, FX 1, FX 2, FX 3 or CTRL B touch the top of the jog and rotate the jog platter.
- When CTRL A is on in Single Mode or either one of FX1, FX2, FX3 is on in Group Mode, Traktor's Effect Insert button is enabled in the following combinations.
 Deck A : Effect Insert 1
 Deck B : Effect Insert 2
 Deck C : Effect Insert 3
 Deck D : Effect Insert 4
- The RST button and the Effect buttons on Traktor which are controllable in Single mode by DDJ-WeGO2 are as follows:



*6. This function is enabled only when pressing the [SAMPLER1-4] button for the playback, but it is disabled when pressing the Play/Pause button.

Note relating to the use of JOG FX
 When you use the FX on Remix Deck, turn on FX in Slot Parameters for each Sample Slot.