


# DDJ-WeGO2

## Hardware Diagram for djay/djay LE for Mac

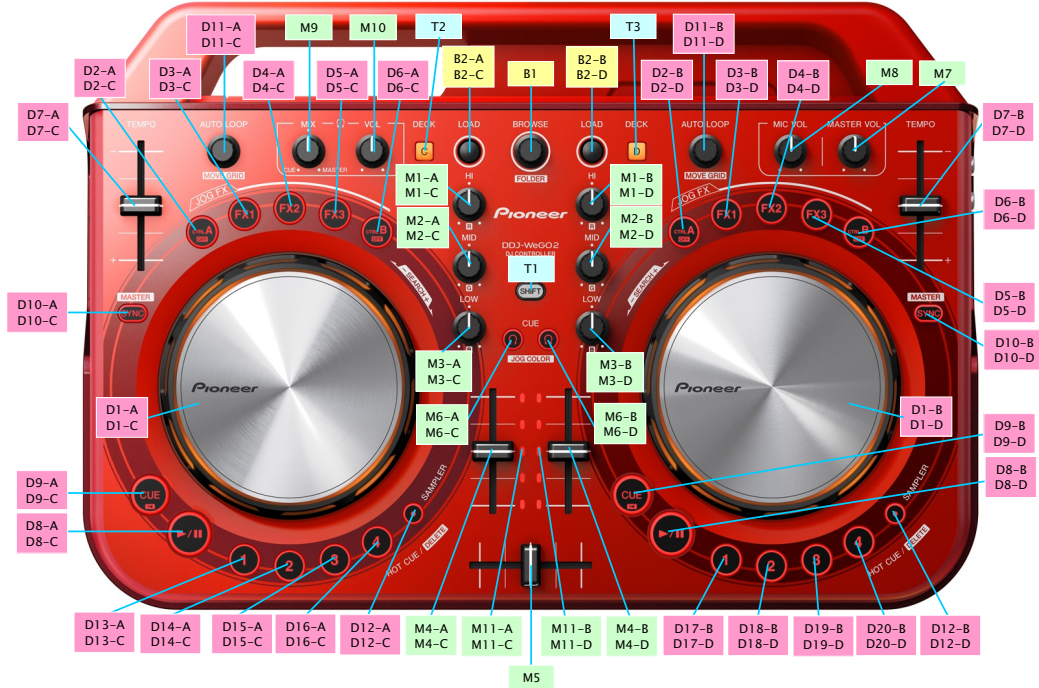

Group	No.	Name	Operation	Function	(+SHIFT)	
Browse	B1	BROWSE	Turn Press	Browse When browsing the track table: load a track to an inactive deck. When browsing the library table: switch to the track table.	- Switch the table to be browsed	
	B2	LOAD	Press	Load a track	-	
Mixer	M1	HI	Turn	EQ (High)	Adjust luminance of red LED on 4 sides of the JOG	
	M2	MID	Turn	EQ (Mid)	Adjust luminance of green LED on 4 sides of the JOG	
	M3	LOW	Turn	EQ (Low)	Adjust luminance of blue LED on 4 sides of the JOG	
	M4	CH FADER	Move the slider	Channel Fader	-	
	M5	CROSS FADER	Move the slider	Crossfader	-	
	M6	CUE	Press	Headphone Monitor ON/OFF	Change colors of LED on 4 sides of the JOG	
	M7	MASTER VOL	Turn	Adjust the sound level output from MASTER	*1 Adjust the sound level output from MASTER *1	
	M8	MIC VOL	Turn	Adjust the audio level input to MIC	*1, *2 Adjust the audio level input to MIC *1, *2	
	M9	MIX	Turn	HEADPHONES MIX	HEADPHONES MIX	
	M10	HEADPHONES VOL	Turn	Adjust the audio level output from PHONES	*1 Adjust the audio level output from PHONES *1	
	M11	CH INPUT LEVEL METER	-	Channel Input Level Indicator	-	
Deck	D1	JOG	-	Turn	Scratch	Scratch
		Outer rim	-	Turn	Pitch bend	Pitch bend
		JOG Platter	CTRL A	Turn	Key control	*3 -
		Outer rim	FX1	Turn	Adjust FX1 Parameter1	*3 -
		Outer rim	FX2	Turn	Adjust FX2 Parameter1	*3 -
		Outer rim	FX3	Turn	Adjust FX3 Parameter1	*3, *4 -
		Outer rim	CTRL B	Turn	Adjust High-pass /Low-pass filter	*3 -
		Outer rim	-	Turn	-	-
	D2	CTRL A	Press	Enable/Disable CTRL A Mode (Key control)	*5 All JOGFX Mode is off	
	D3	FX1	Press	Enable/Disable FX1 (default: Echo)	Select FX1	
	D4	FX2	Press	Enable/Disable FX2 (default: Flanger)	Select FX2	
	D5	FX3	Press	Enable/Disable FX3 (default: Gate)	Select FX3	
	D6	CTRL B	Press	Enable/Disable CTRL B Mode (Filter)	All JOGFX Mode is off	
	D7	TEMPO	Move the slider	TEMPO control	-	
	D8	PLAY/PAUSE	Press	PLAY/PAUSE	Slip reverse (Only while pressing)	
	D9	CUE	Press	Set CUE point/ CUE Sampler/Back CUE	Jump to the beginning of song	
	D10	SYNC	Press	Sync with another deck	Key-Lock ON/OFF	
	D11	AUTO LOOP	Turn	Change the Loop length	Beat jump	
			Press	Autoloop ON/OFF	(During PLAY) Set Loop In point (After setting Loop In point) Set Loop Out point (After setting Loop Out point) Halve the Loop length	
	D12	SAMPLER	Press	Sampler Mode ON/OFF	Sampler Mode ON/OFF	
D13	HOT CUE 1	Press	Set/Play Hot Cue point 1	Cancel Hot Cue point 1		
D14	HOT CUE 2	SAMPLER Mode	Play Sampler 1	-		
		Press	Set/Play Hot Cue point 2	Cancel Hot Cue point 2		
D15	HOT CUE 3	SAMPLER Mode	Play Sampler 2	-		
		Press	Set/Play Hot Cue point 3	Cancel Hot Cue point 3		
D16	HOT CUE 4	SAMPLER Mode	Play Sampler 3	-		
		Press	Set/Play Hot Cue point 4	Cancel Hot Cue point 4		
D17	HOT CUE 5	SAMPLER Mode	Play Sampler 4	-		
		Press	Set/Play Hot Cue point 1	Cancel Hot Cue point 1		
D18	HOT CUE 6	SAMPLER Mode	Play Sampler 5	-		
		Press	Set/Play Hot Cue point 2	Cancel Hot Cue point 2		
D19	HOT CUE 7	SAMPLER Mode	Play Sampler 6	-		
		Press	Set/Play Hot Cue point 3	Cancel Hot Cue point 3		
D20	HOT CUE 8	SAMPLER Mode	Play Sampler 7	-		
		Press	Set/Play Hot Cue point 4	Cancel Hot Cue point 4		
Others	T1	SHIFT	Press	-	-	
	T2	DECK C	Press	-	*6	
	T3	DECK D	Press	-	*6	

■ Mix Pulse which indicates the offset in the beat of two tracks by the lighting is not available among the Pulse control of JOG illumination.

\*1. This knob and its GUI counterpart on djay for Mac or djay LE for Mac are not synced each other.

\*2. Audio input to MIC cannot be assigned to decks on djay for Mac and djay LE for Mac.

\*3. When multiple JOG FX mode is on, all the parameters of active key control, effects and filter will be adjusted simultaneously.

If you want to adjust an individual parameter of key control, effect or filter, turn the JOG dial's top while pressing an active button where you want to adjust the parameter among CTRL A, FX 1, FX 2, FX 3 or CTRL B.

\*4. FX3 cannot be displayed on the GUI of djay for Mac and djay LE for Mac.

\*5. When this mode is enabled, the key lock is enabled simultaneously. Even when the mode is disabled, the key lock is not disabled simultaneously.

\*6. When DECK C or DECK D is selected on DDJ-WeGO2, djay for Mac and djay LE for Mac cannot control the deck.