


DDJ-WeGO2

Hardware Diagram for vjay for iPad

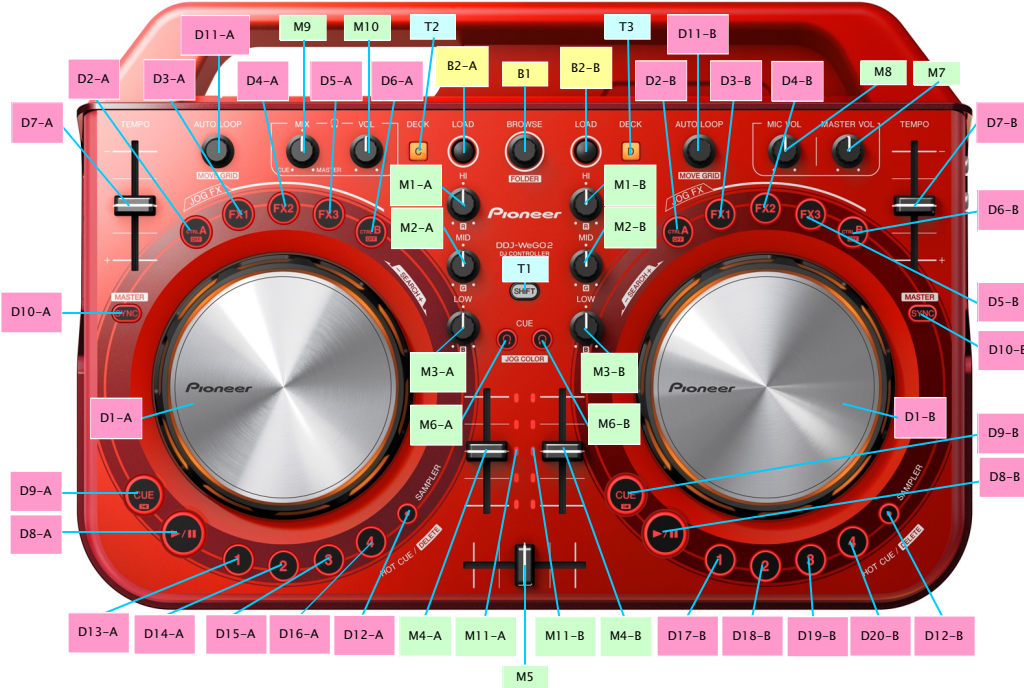

Group	No.	Name	Operation	Function	(+SHIFT)		
Browse	B1	BROWSE	Turn Press	Browse ("Videos" category only) Load a track if Library is open Open library on inactive deck if it is closed.	*1 -		
	B2	LOAD	Long press Press	Close Library if it is open. Load a track if Library is open. (close Library)	- -		
Mixer	M1	HI	Turn	EQ (High)	Adjust luminance of red LED on 4 sides of the JOG		
	M2	MID	Turn	EQ (Mid)	Adjust luminance of green LED on 4 sides of the JOG		
	M3	LOW	Turn	EQ (Low)	Adjust luminance of blue LED on 4 sides of the JOG		
	M4	CH FADER	Move the slider	Channel Fader	-		
	M5	CROSS FADER	Move the slider	Crossfader	-		
	M6	CUE	Press	Headphone Monitor ON/OFF	Change colors of LED on 4 sides of the JOG		
	M7	MASTER VOL	Turn	Adjust the sound level output from MASTER	*2 Adjust the sound level output from MASTER *2		
	M8	MIC VOL	Turn	Adjust the audio level input to MIC	*2, *3 Adjust the audio level input to MIC *2, *3		
	M9	MIX	Turn	HEADPHONES MIX	HEADPHONES MIX		
	M10	HEADPHONES VOL	Turn	Adjust the audio level output from PHONES	*2 Adjust the audio level output from PHONES *2		
	M11	CH INPUT LEVEL METER	-	Channel Input Level Indicator	-		
Deck	D1	JOG	JOG Platter	-	Turn	Scratch	Search
			Outer rim	-	Turn	Pitch Bend	Pitch Bend
			JOG Platter	CTRL A	Turn	-	-
			Outer rim	-	Turn	-	-
			JOG Platter	FX1	Turn	Adjust FX1 Parameter	*4 -
			Outer rim	-	Turn	Adjust FX2 Parameter	*4, *5 -
			JOG Platter	FX2	Turn	Adjust FX2 Parameter	*4, *5 -
			Outer rim	-	Turn	Adjust FX3 Parameter	*4, *5 -
			JOG Platter	FX3	Turn	Adjust FX3 Parameter	*4, *5 -
	Outer rim	CTRL B	Turn	Adjust High-pass /Low-pass filter	*4 -		
	D2	CTRL A	Press	Enable/Disable CTRL A Mode (no effect)	All JOGFX Mode is off		
	D3	FX1	Press	Enable/Disable FX1 (default : Crush)	Select FX1		
	D4	FX2	Press	Enable/Disable FX2 (Strobe)	Select FX2		
	D5	FX3	Press	Enable/Disable FX3 (Twirl)	Select FX3		
	D6	CTRL B	Press	Enable/Disable CTRL B Mode (Filter)	All JOGFX Mode is off		
	D7	TEMPO	Move the slider	TEMPO control	-		
	D8	PLAY /PAUSE	Press	PLAY /PAUSE	Slip reverse (Only while pressing)		
	D9	CUE	Press	Set CUE point / CUE Sampler/Back CUE	Jump to the beginning of song		
	D10	SYNC	Press	Sync with another deck	Key-Lock ON/OFF		
	D11	AUTO LOOP	Turn Press	Change the Loop length Autoloop ON/OFF	Beat jump (During PLAY) Set Loop In point (After setting Loop In point) Set Loop Out point (After setting Loop Out point) Loop Off ⁷		
D12	SAMPLER	Press	-	-			
D13	HOT CUE 1	Press	Set/Play Hot Cue point 1	Cancel Hot Cue point 1			
D14	SAMPLER 1	SAMPLER Mode	-	-			
D14	HOT CUE 2	Press	Set/Play Hot Cue point 2	Cancel Hot Cue point 2			
D15	SAMPLER 2	SAMPLER Mode	-	-			
D15	HOT CUE 3	Press	Set/Play Hot Cue point 3	Cancel Hot Cue point 3			
D16	SAMPLER 3	SAMPLER Mode	-	-			
D16	HOT CUE 4	Press	Set/Play Hot Cue point 4	Cancel Hot Cue point 4			
D17	SAMPLER 4	SAMPLER Mode	-	-			
D17	HOT CUE 1	Press	Set/Play Hot Cue point 1	Cancel Hot Cue point 1			
D18	SAMPLER 5	SAMPLER Mode	-	-			
D18	HOT CUE 2	Press	Set/Play Hot Cue point 2	Cancel Hot Cue point 2			
D19	SAMPLER 6	SAMPLER Mode	-	-			
D19	HOT CUE 3	Press	Set/Play Hot Cue point 3	Cancel Hot Cue point 3			
D20	SAMPLER 7	SAMPLER Mode	-	-			
D20	HOT CUE 4	Press	Set/Play Hot Cue point 4	Cancel Hot Cue point 4			
D20	SAMPLER 8	SAMPLER Mode	-	-			
Others	T1	SHIFT	Press	-	-		
	T2	DECK C	Press	-	*6		
	T3	DECK D	Press	-	*6		

■ Mix Pulse which indicates the offset in the beat of two tracks by the lighting is not available among the Pulse control of JOG illumination.

*1. If you want to browse on DDJ-WeGO2, tap [Video] on the library to show the [Video] category on vjay for iPad.

*2. This knob and its GUI counterpart on vjay for iPad are not synced each other.

*3. Audio input to MIC cannot be assigned to decks on vjay for iPad.

*4. When multiple JOG FX mode is on, all the parameters of active effects and filter will be adjusted simultaneously.

If you want to adjust an individual parameter of effect or filter, turn the JOG dial's top while pressing an active button where you want to adjust the parameter among FX 1, FX 2, FX 3 or CTRL B.

*5. FX2 and FX3 cannot be displayed on the GUI of vjay 2 for iPad.

*6. When DECK C or DECK D is selected on DDJ-WeGO2, vjay for iPad cannot control the deck.

*7. Versions 1.4.2 or later: Loop is off.

Versions 1.4.1 or earlier: Loop length is halved.