


# DJ CONTROLLER DDJ-WeGO3

Hardware Diagram for TRAKTOR PRO 2 Ver.2.6.8

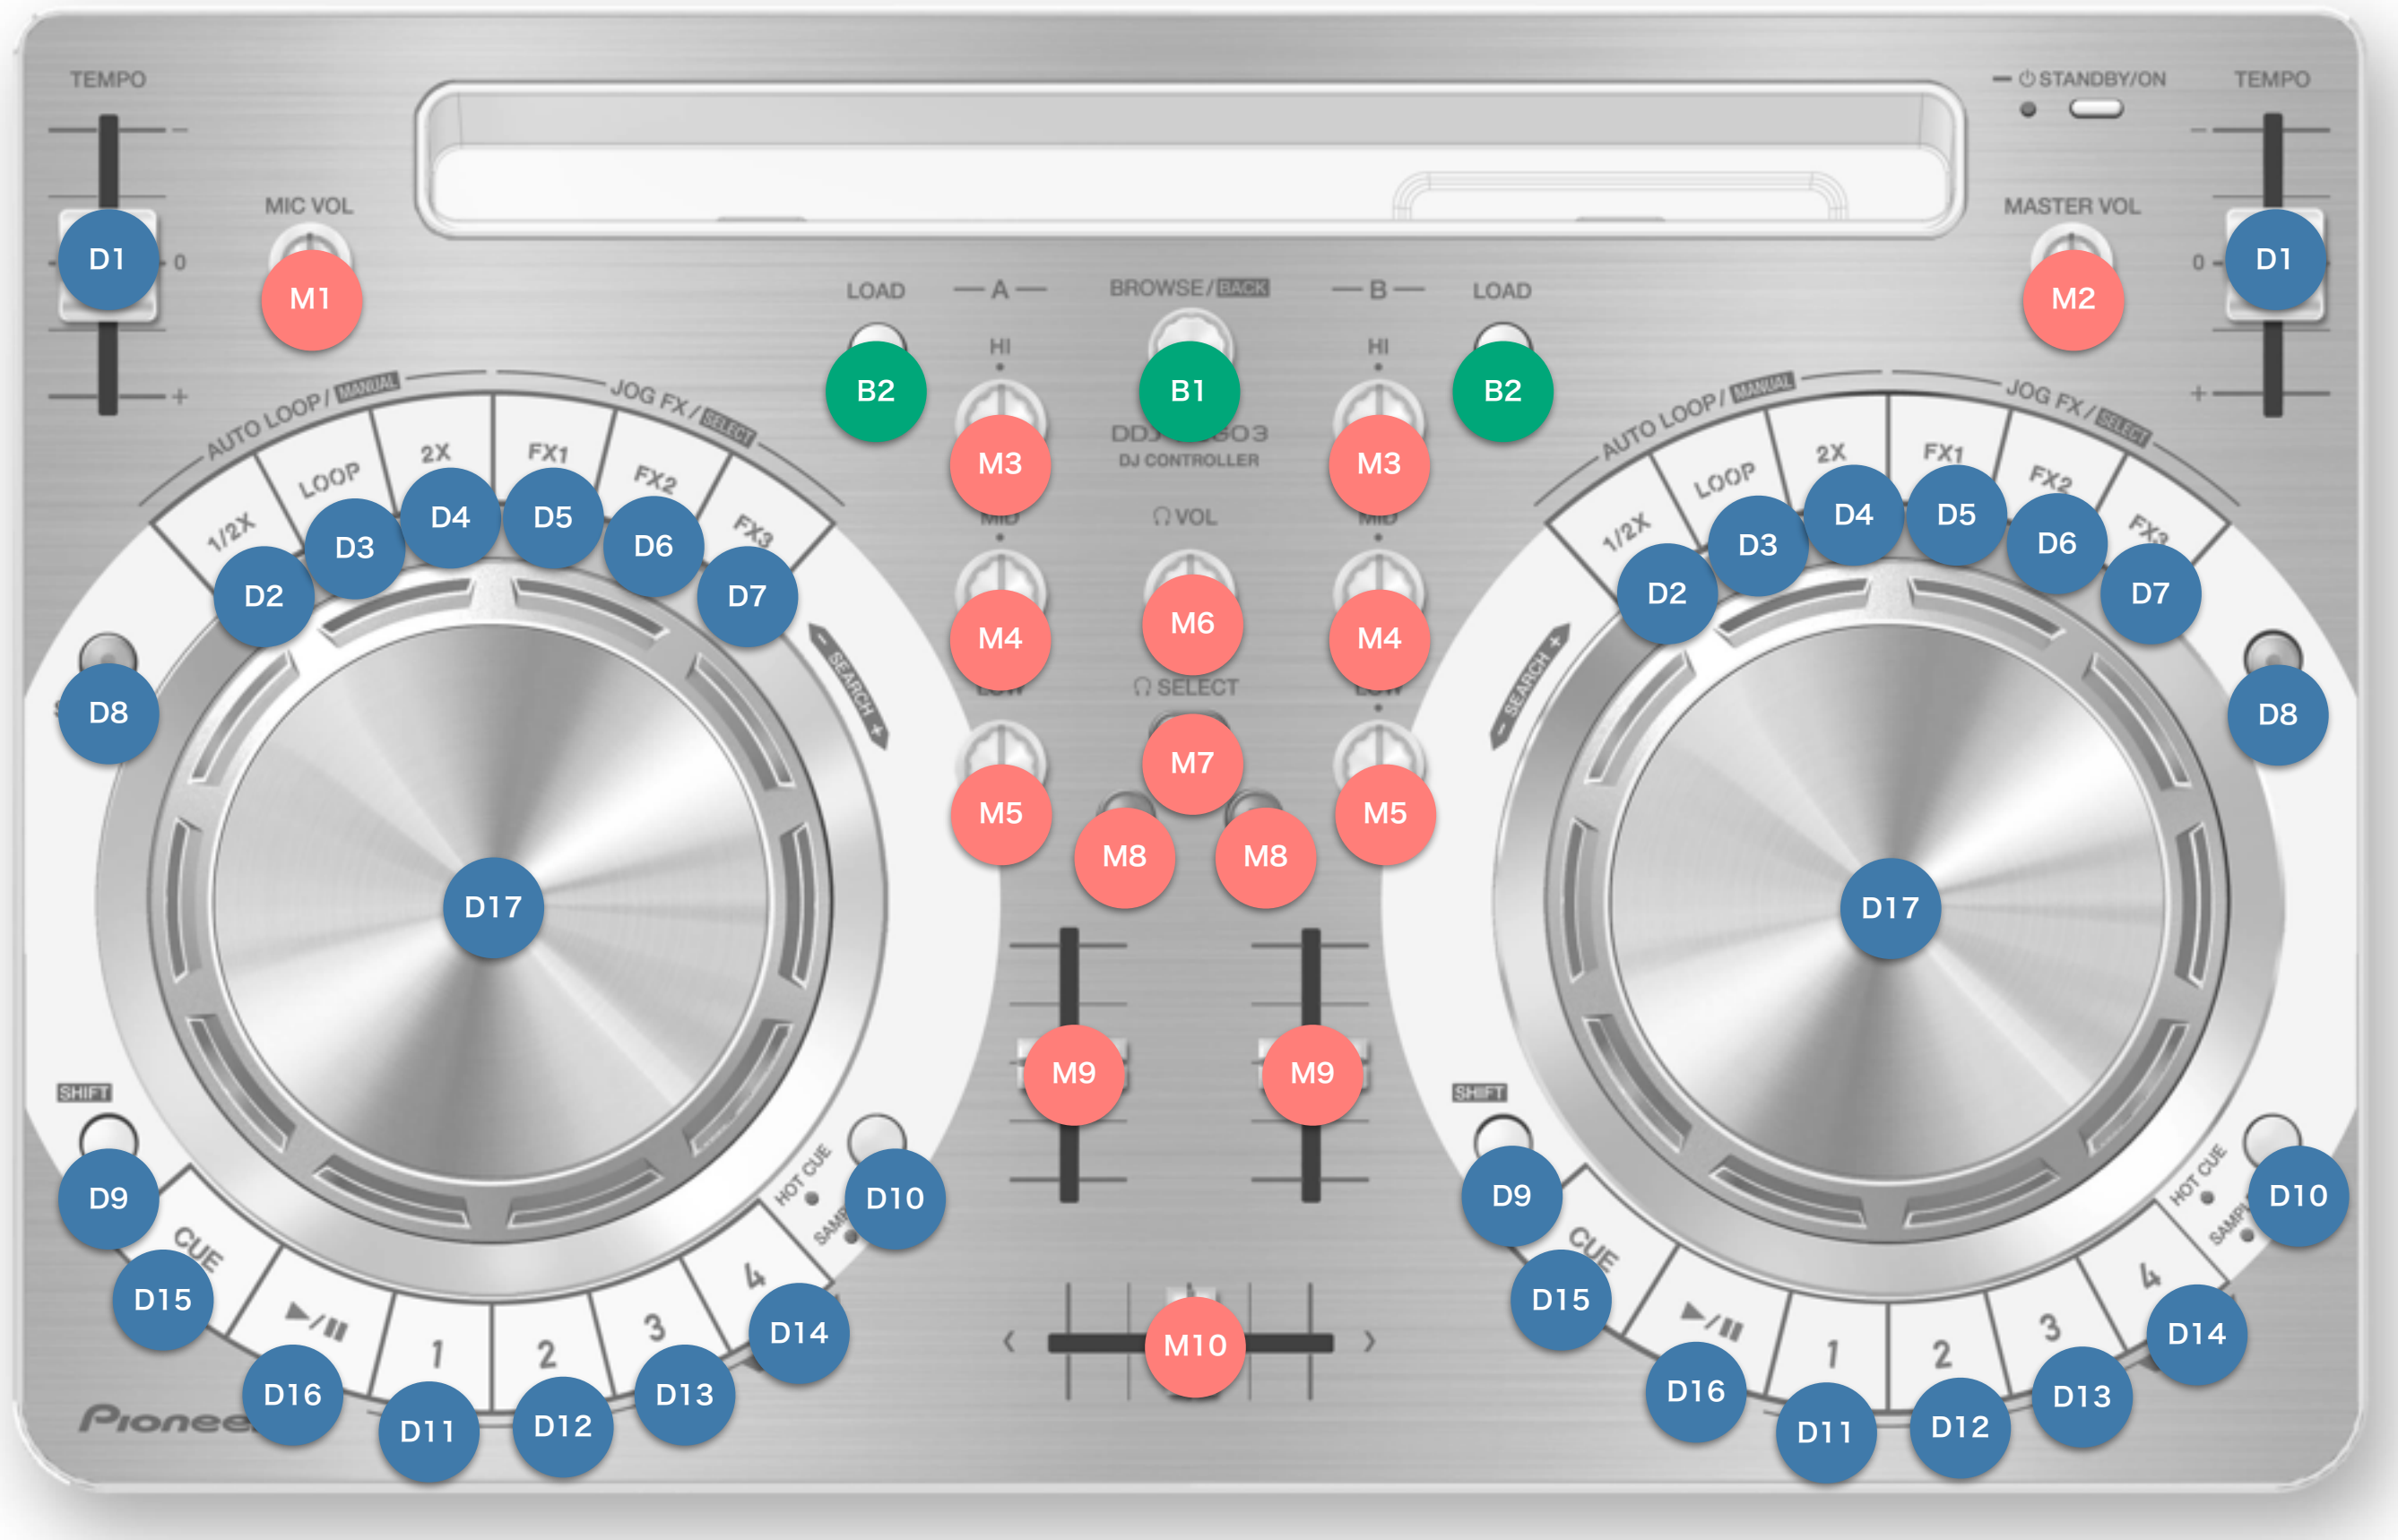

GROUP	NAME		FUNCTION	SHIFT
	No			
<b>BROWSE</b>				
B1	BROWSE	Turn	Browser list scroll+ Only Browser Mode	Browser Tree scroll+ Only Browser Mode
		Press	Only browser Mode on/off	Folder open/close
B2	LOAD		Load+Only browser Mode off	-
<b>DECK</b>				
D1	TEMPO		Tempo Control	
D2	LOOP HALF		Loop Size Select -	Manual Loop In
D3	AUTO LOOP	Loop off	Auto Loop On	Active Loop On
		Loop on	Loop Off	Active Loop Off
D4	LOOP DOUBLE		Loop Size Select +	Manual Loop Out
D5	FX1		Effect1 On/Off	Effect1 Select
D6	FX2		Effect2 On/Off	Effect2 Select
D7	FX3		Effect3 On/Off	Effect3 Select
D8	SYNC		Sync On/Off	Tempo Range Change
D9	SHIFT		Shift	-
D10	HOT CUE / SAMPLER MODE		Performance button HOT CUE/SAMPLER mode change	
D15	CUE		Cue / Cue play / Back Cue	Jump to the beginning of the track
D16	PLAY / PAUSE		Play/Pause	-
D17	JOG(platter)	normal play	scratch	search
		FX ON	Adjust FX parameter	Adjust DRY/WET
	JOG(RIM)	normal play	Pitch bend	
		FX ON		
<b>MIXER</b>				
M1	MIC VOL		Audio Level Input To Mic Adjust *1	
M2	MASTER VOL		Master Out Volume Adjust *1	
M3	EQ	HI	EQ (High)	
		MID	EQ (Mid)	
		LOW	EQ (Low)	
M6	HEADPHONES VOL		Monitor Volume Adjust *1	
M7	HEADPHONES SELECT	MASTER	Headphone Monitor On/Off	
M8		DECK		
M9	CH FADER		Channel Fader	
M10	CR FADER		Cross Fader	

GROUP	NAME		FUNCTION	SHIFT
	No			
<b>[ HOT CUE ] PERFORMANCE BUTTONS</b>				
D11	PERFORMANCE1		Hot cue1 set/play	Delete Hot cue1
			Hot cue2 set/play	Delete Hot cue2
			Hot cue3 set/play	Delete Hot cue3
			Hot cue4 set/play	Delete Hot cue4
<b>[ SAMPLER ] PERFORMANCE BUTTONS</b>				
DECK1	PERFORMANCE1		Remix Deck C slot1 play	Remix Deck C slot1 load/stop/unload
			Remix Deck C slot2 play	Remix Deck C slot2 load/stop/unload
			Remix Deck C slot3 play	Remix Deck C slot3 load/stop/unload
			Remix Deck C slot4 play	Remix Deck C slot4 load/stop/unload
DECK2	PERFORMANCE1		Remix Deck D slot1 play	Remix Deck D slot1 load/stop/unload
			Remix Deck D slot2 play	Remix Deck D slot2 load/stop/unload
			Remix Deck D slot3 play	Remix Deck D slot3 load/stop/unload
			Remix Deck D slot4 play	Remix Deck D slot4 load/stop/unload

[Note] The controls which are not listed in the [Hardware Diagram] should be controlled from the TRAKTOR GUI.  
[\*1] This knob and its GUI counterpart on TRAKTOR are not synced each other.

## Deck layout

• This units supports only [2 Track Decks+2 Remix Decks].

[2 Track Decks+2 Remix Decks]



Use the GUI of TRAKTOR to switch the decks to [2 Track Decks + 2 Remix Decks].

## Effect

• This units supports only GROUP mode effect.