


DJ CONTROLLER DDJ-WeGO3

Hardware Diagram for vjay for iPhone

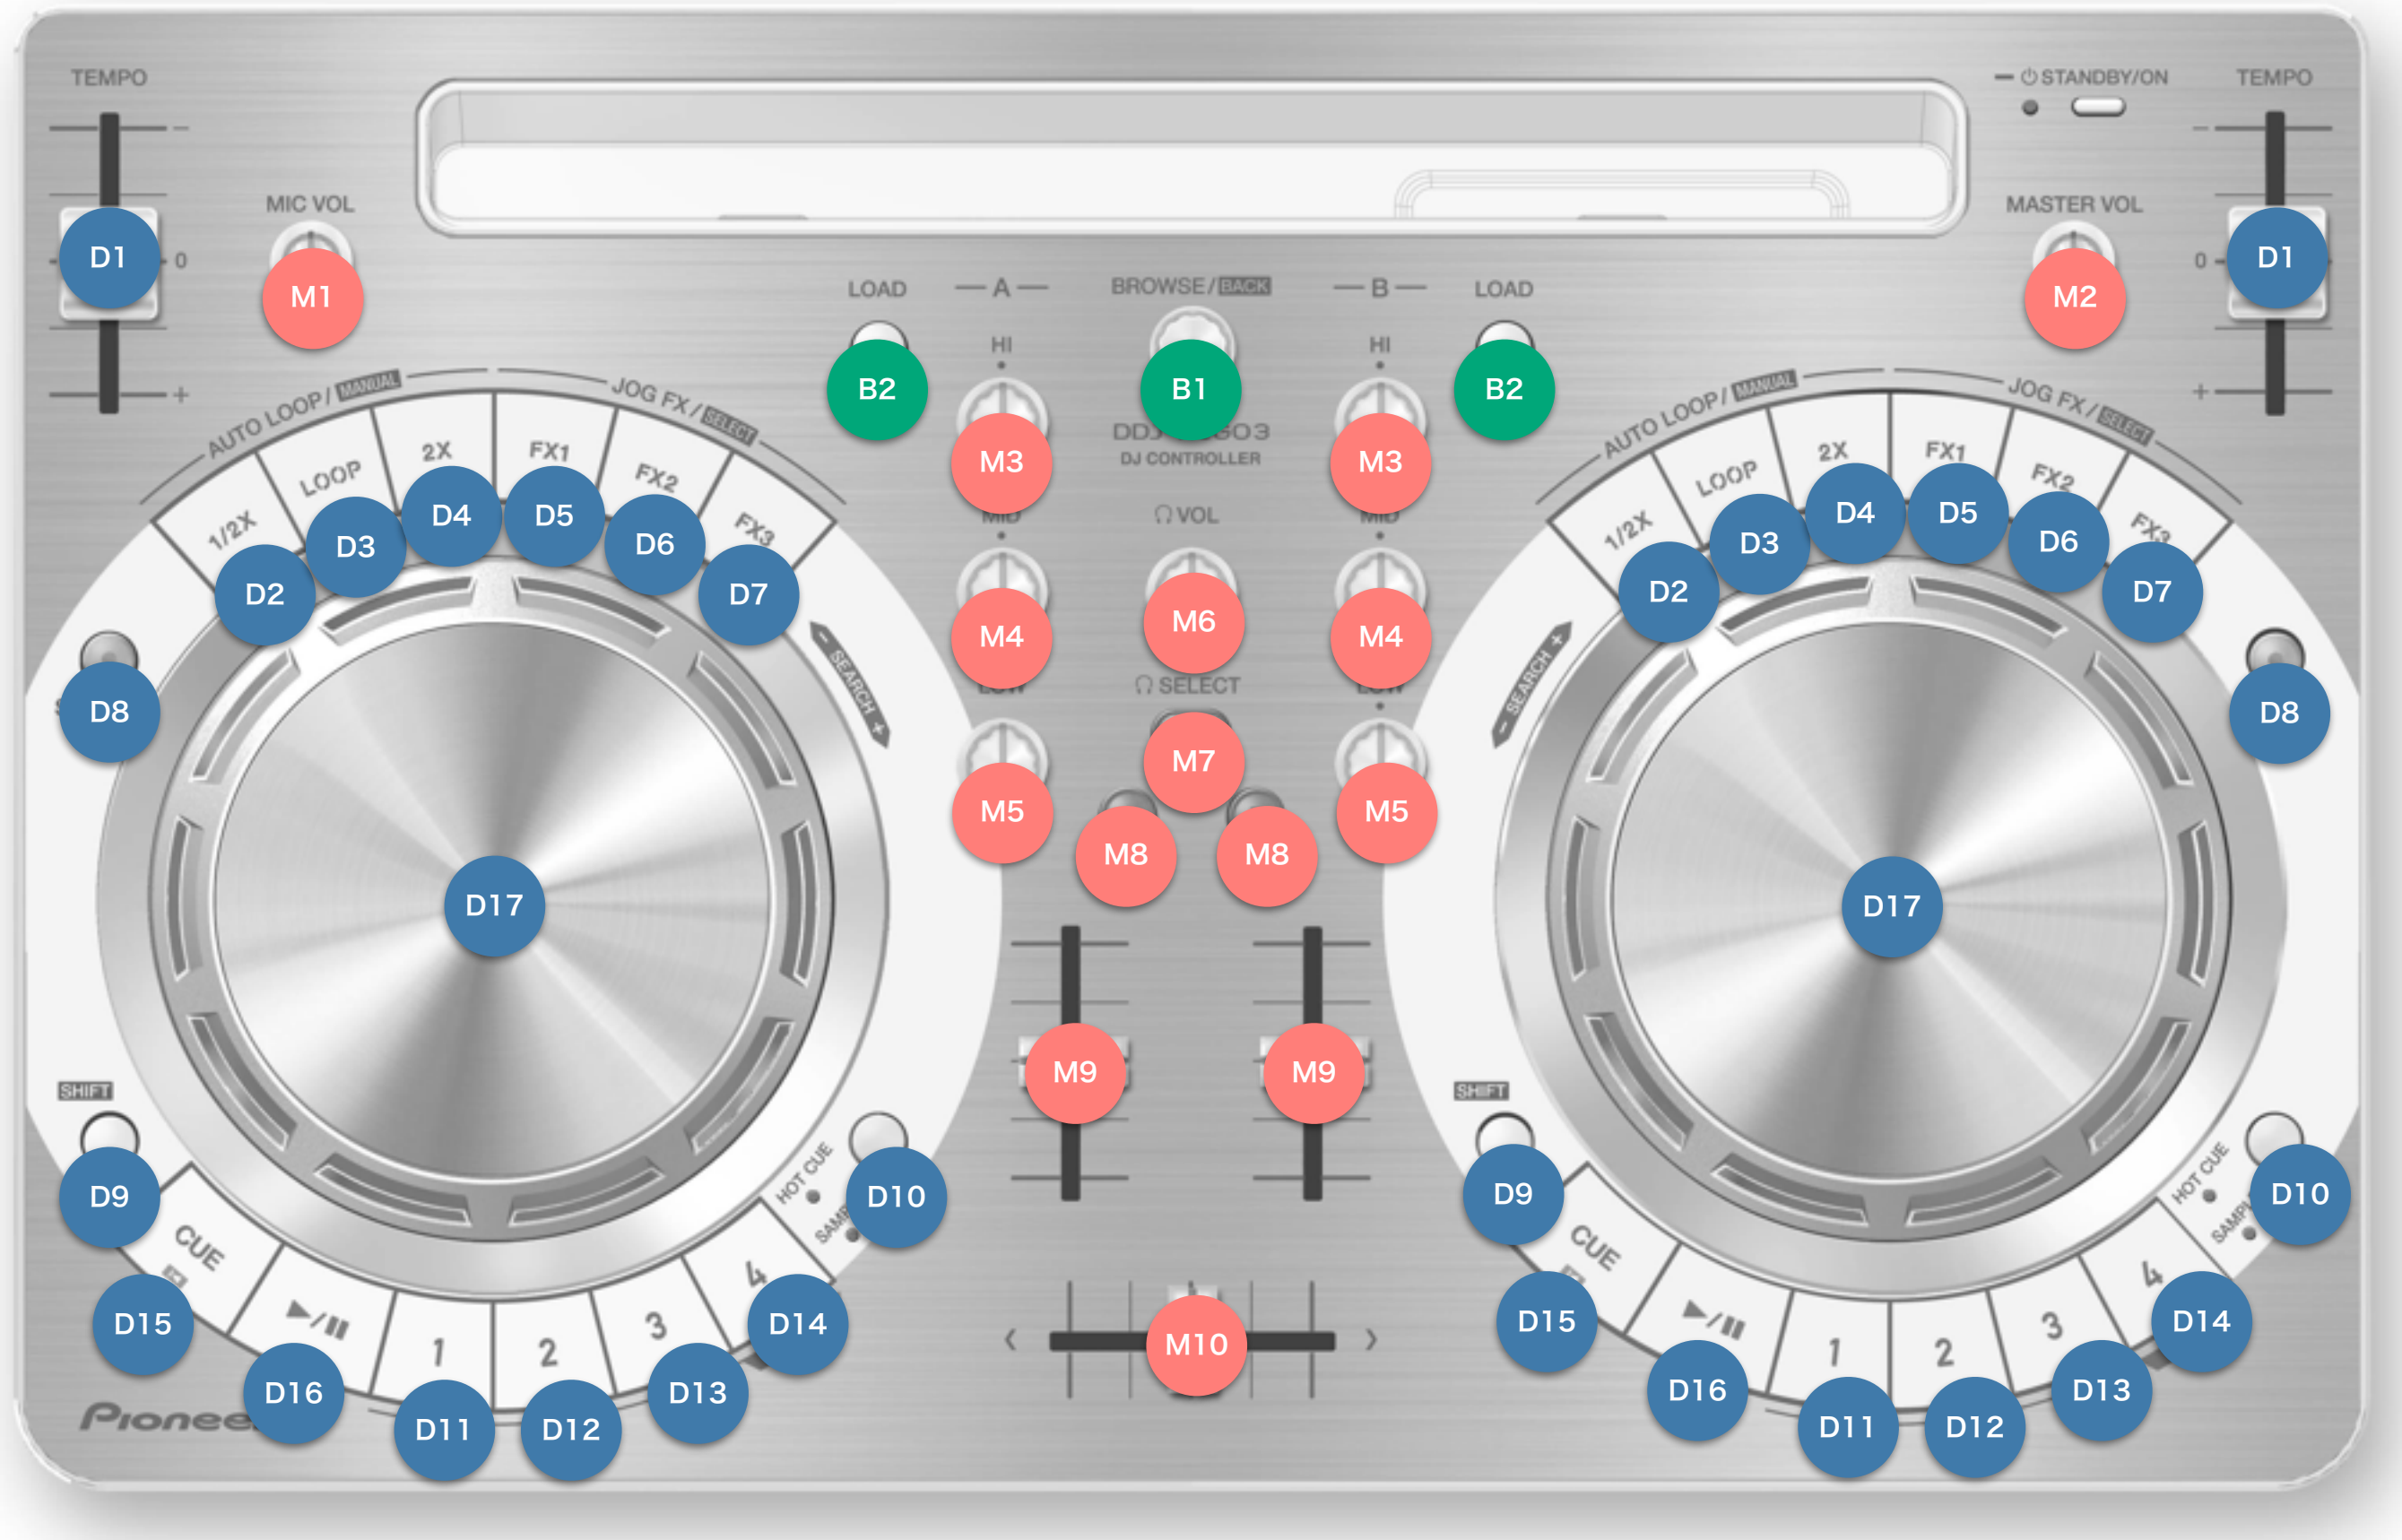

GROUP	NAME		FUNCTION	SHIFT
	No			
BROWSE				
B1	BROWSE	Turn	Open library/Browse *1	Open library
		Press	Load	-
		Long Press	Close library	-
B2	LOAD		Load	-
DECK				
D1	TEMPO		Tempo Control	
D2	LOOP HALF		Loop Half	
D3	AUTO LOOP	Loop OFF	Autoloop On	Manual loop In/out
		Loop ON	Loop Off	
D4	LOOP DOUBLE		Loop Double	
D5	FX1		Effect1 On/Off	Effect 1 Select
D6	FX2		Effect2 On/Off *2	Effect2 Select *2
D7	FX3		Effect3 On/Off *2	Effect3 Select *2
D8	SYNC		Sync On/Off	Key Lock On/Off
D9	SHIFT		Shift	-
D10	HOT CUE / SAMPLER MODE		Performance button HOT CUE/SAMPLER mode change	
D15	CUE		CueSet / Play , Cue Back	Jump to the beginning of the track
D16	PLAY / PAUSE		Play/Pause	Slip Reverse (Only while pressing)
D17	JOG (PLATTER)	Normal Play	Scratch	Search
		FX ON	Fx Parameter Adjust	
	JOG(RIM)	Normal Play	Pitch Bend	
		FX ON		
MIXER				
M1	MIC VOL		Audio Level Input To Mic Adjust *3	
M2	MASTER VOL		Master Out Volume Adjust *3	
M3	EQ	HI	EQ Hi Adjust	
M4		MID	EQ Mid Adjust	
M5		LOW	EQ Low Adjust	
M6	HEADPHONES VOL		Monitor Volume Adjust	
M7	HEADPHONES SELECT	MASTER	Headphone Monitor On/Off	
M8		DECK		
M9	CH FADER		Channel Fader	
M10	CR FADER		Cross Fader	

GROUP	NAME		FUNCTION	SHIFT
	No			
[HOT CUE] PERFORMANCE BUTTONS				
D11	PERFORMANCE1		Hot cue1 set/play	Delete Hot cue1
D12	PERFORMANCE2		Hot cue2 set/play	Delete Hot cue2
D13	PERFORMANCE3		Hot cue3 set/play	Delete Hot cue3
D14	PERFORMANCE4		Hot cue4 set/play	Delete Hot cue4
[SAMPLER] PERFORMANCE BUTTONS				
D11	PERFORMANCE1		-	
D12	PERFORMANCE2		-	
D13	PERFORMANCE3		-	
D14	PERFORMANCE4		-	

- [Note] The controls which are not listed in the [Hardware Diagram] should be controlled from the iPhone GUI.
- [*1] You can browse only the [Video] category in Library when using this controller.
- [*2] Only FX1 is shown on the GUI of the application.
Even though effects in FX2 and FX3 are not displayed on the GUI, you can enable, disable and select effects in FX2 and FX3 because they work in the background.
- [*3] This knob and its GUI counterpart on vjay for iPhone are not synced each other.