


# DJ CONTROLLER DDJ-WeGO4

Hardware Diagram for TRAKTOR PRO 2 Ver.2.10.2

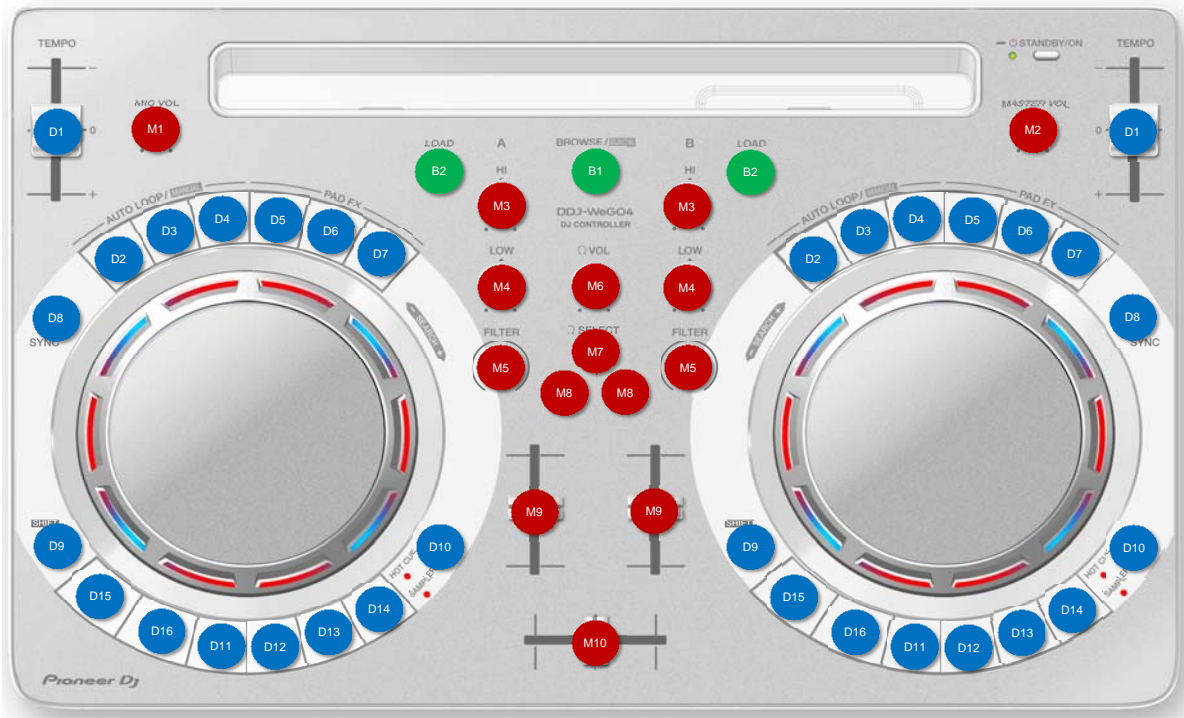

GROUP	No.	NAME	FUNCTION	SHIFT
<b>BROWSE</b>				
B1	BROWSE	Turn	Browser list scroll+	Browser Tree scroll+
		Press	Only browser Mode On/Off	Only browser Mode
B2	LOAD		Load+Only browser Mode Off	-
<b>DECK</b>				
D1	TEMPO		Tempo Control	
D2	LOOP HALF		Loop Size Select -	Manual Loop In
D3	AUTO LOOP	Loop off	Auto Loop On	Manual Loop Out
		Loop on	Loop Off	Loop Off
D4	LOOP DOUBLE	Loop off	Loop Size Select +	Active Loop On
		Loop on		Active Loop Off
D5	FX 1		Effect 1 ON/OFF *1	Effect1 Select
D6	FX 2		Effect 2 ON/OFF *1	Effect2 Select
D7	FX 3		Effect 3 ON/OFF *1	Effect3 Select
D8	SYNC		Sync ON/OFF	Tempo Range Change
D9	SHIFT		Shift	
D10	HOT CUE / SAMPLER MODE		Performance button HOT CUE/SAMPLER mode change	
D15	CUE		Cue / Cue play / Back Cue	Jump to the beginning of the track
D16	PLAY / PAUSE		Play/Pause	-
D17	JOG	Platter	Scratch	Search
		Rim	Pitch bend	
<b>MIXER</b>				
M1	MIC VOL		Audio Level Input To Mic Adjust*2	
M2	MASTER VOL		Master Out Volume Adjust*2	
M3	EQ HI		EQ (High)	
M4	EQ LO		EQ (Low)	
M5	FILTER		Adjust Filter Cut Off Frequency	
M6	HEADPHONES VOL		Monitor Volume Adjust*2	
M7	HEADPHONES	MASTER	Headphone Monitor On/Off	
M8	SELECT	DECK		
M9	CH FADER		Channel Fader	
M10	CROSSFADER		Cross Fader	

GROUP	No.	NAME	FUNCTION	SHIFT
<b>[ HOT CUE ] PERFORMANCE BUTTONS</b>				
D11	PERFORMANCE 1		Hot Cue1 Set/Play	Hot cue1 Delete
D12	PERFORMANCE 2		Hot Cue2 Set/Play	Hot cue2 Delete
D13	PERFORMANCE 3		Hot Cue3 Set/Play	Hot cue3 Delete
D14	PERFORMANCE 4		Hot Cue4 Set/Play	Hot cue4 Delete
<b>[ SAMPLER ] PERFORMANCE BUTTONS [DECK C]</b>				
D11	PERFORMANCE 1		Remix Deck C slot1 Play	Remix Deck C slot1 Load/Stop/Unload
D12	PERFORMANCE 2		Remix Deck C slot2 Play	Remix Deck C slot2 Load/Stop/Unload
D13	PERFORMANCE 3		Remix Deck C slot3 Play	Remix Deck C slot3 Load/Stop/Unload
D14	PERFORMANCE 4		Remix Deck C slot4 Play	Remix Deck C slot4 Load/Stop/Unload
<b>[ SAMPLER ] PERFORMANCE BUTTONS [DECK D]</b>				
D11	PERFORMANCE 1		Remix Deck D slot1 Play	Remix Deck D slot1 Load/Stop/Unload
D12	PERFORMANCE 2		Remix Deck D slot2 Play	Remix Deck D slot2 Load/Stop/Unload
D13	PERFORMANCE 3		Remix Deck D slot3 Play	Remix Deck D slot3 Load/Stop/Unload
D14	PERFORMANCE 4		Remix Deck D slot4 Play	Remix Deck D slot4 Load/Stop/Unload

[Note] The controls which are not listed in this [Hardware Diagram] should be controlled from the TRAKTOR GUI.

\*1 The FX is turned on while the button is pressed. The FX is turned off when the button is released. (The DRY/WET and the Effect Amount are set by default and can be adjusted only on the application.)

\*2 This knob and its GUI counterpart on TRAKTOR are not synced each other.

### Deck layout

• This unit supports only [2 Track Decks+2 Remix Decks].

[2 Track Decks+2 Remix Decks]

