


DDJ-WeGO4

Hardware Diagram for WeDJ for Android

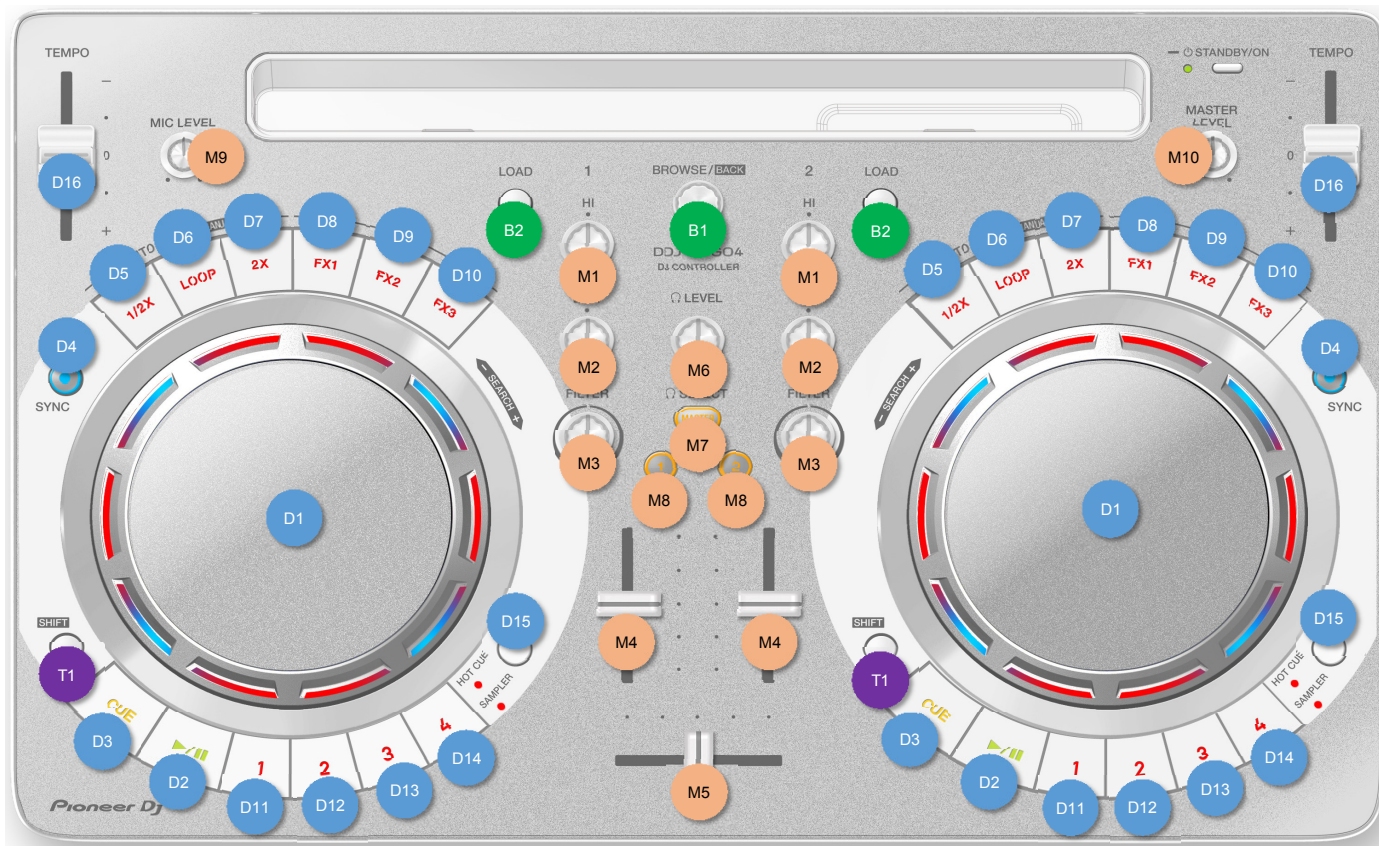

Group	No.	Name	Action	Function	+SHIFT
BROWSE					
BROWSE	B1	BROWSE	rotate	Move the cursor vertically. Switch to the browser screen.	*1 -
			press	Move the cursor to the next layer of the browser screen. Switch to the browser screen.	*3 Move the cursor to the previous layer of the browser screen. *2 Switch to the top screen. *4
	B2-L	LOAD	press	Load the selected track into deck 1.	-
	B2-R	LOAD	press	Load the selected track into deck 2.	-
MIXER					
MIXER	M1	HI	rotate	Adjust the high range of the respective channel.	
	M2	LOW	rotate	Adjust the low range of the respective channel.	*5
	M3	FILTER	rotate	Apply the filter effect for respective channel.	*6
	M4	CH Fader	slide	Adjust the level of audio signals output in each channel.	
	M5	Crossfader	slide	Switch the sound of the channels assigned to the left and right sides of the crossfader.	
	M6	HEADPHONES LEVEL	rotate	Adjust the level of audio output from the [PHONES] terminals.	
	M7	MASTER HP CUE	press	Turn master sound monitor on/off.	
	M8	CH HP CUE	press	Turn channel sound monitor on/off.	
	M9	MIC LEVEL	rotate	Adjust the level of audio input to the [MIC] terminal.	
	M10	MASTER LEVEL	rotate	Adjust the level of the audio output from the [MASTER] terminal.	

DECK	D1	JOG	Platter	rotate	Perform scratching operation.	Skip the playback position.
			Rim	rotate	Increase or decrease the track playing speed temporarily.	
	D2	PLAY/PAUSE		press	Play or pause a track.	
	D3	CUE		press	Set the cue point. Or move to a cue point.	Move the playing position to the beginning of the track.
	D4	SYNC		press	Synchronize with the tempos and beat grids of the opposite deck.	-
	D5	LOOP HALF	During normal playback	press	Set the width of loop playback interval to 1/2 times.	Set a loop in point.
			During loop playback	press	Set the width of loop playback interval to 1/2 times.	-
	D6	LOOP	During normal playback	press	Turn auto beat loop on.	Set a loop out point and start loop playback.
			During loop playback	press	Turn loop playback off.	-
	D7	LOOP DOUBLE	During normal playback	press	Set the width of loop playback interval to 2 times.	Resume the loop playback that was set last time.
			During loop playback	press	Set the width of loop playback interval to 2 times.	Cancel loop playback.
	D8	FX 1		press	Turn the effect slot 1 of Pad FX on.	*7 Turn the effect slot 4 of Pad FX on. *7
	D9	FX 2		press	Turn the effect slot 2 of Pad FX on.	*7 Turn the effect slot 5 of Pad FX on. *7
	D10	FX 3		press	Turn the effect slot 3 of Pad FX on.	*7 Turn the effect slot 6 of Pad FX on. *8
	D11	HOT CUE 1 SAMPLER 1	In HOT CUE mode	press	Set the hot cue point 1.	Delete the hot cue point 1.
			In SAMPLER mode		Play the sampler slot 1.	*9 Play the sampler slot 5. *10
	D12	HOT CUE 2 SAMPLER 2	In HOT CUE mode	press	Set the hot cue point 2.	Delete the hot cue point 2.
			In SAMPLER mode		Play the sampler slot 2.	*9 Play the sampler slot 6. *10
	D13	HOT CUE 3 SAMPLER 3	In HOT CUE mode	press	Set the hot cue point 3.	Delete the hot cue point 3.
			In SAMPLER mode		Play the sampler slot 3.	*9 Play the sampler slot 7. *10
	D14	HOT CUE 4 SAMPLER 4	In HOT CUE mode	press	Set the hot cue point 4.	Delete the hot cue point 4.
			In SAMPLER mode		Play the sampler slot 4.	*9 Play the sampler slot 8. *10
	D15	HOT CUE/SAMPLER		press	Switch the mode to hot cue mode or sampler mode.	-
	D16	TEMPO		slide	Adjust the track playing speed.	-
Other						
	T1	SHIFT		press	A different function is called out when another button is pressed while pressing the [SHIFT] button.	-

*1 The cursor focus moves within the layer when the browser screen is displayed.

*2 Active screen switches to the browser screen when the top screen is displayed.

*3 The cursor focus moves to the next layer when the browser screen is displayed.

*4 If the layer of the cursor focus is same as [Tag List], [Tracks], [Playlists], [Artist], [Album], [Recordings], and [Histories], active screen switches to the top screen. In other cases, the cursor focus moves to the previous layer.

*5 It is possible to change to the adjustment function of the middle range. To set the adjustment function of the middle range, untick [CFX] under [Settings] > [Controller] setting.

*6 It is possible to change to the adjustment function of the low range. To set the adjustment function of the low range, untick [CFX] under [Settings] > [Controller] setting.

*7 The effect assigned to the button is activated while the button is pressed. Once you release your finger from the button, the effect is turned off.

*8 The release FX is assigned on the slot 6. While you press and hold the button, the release FX continues until time passes number of beats setting.

Once you release your finger from the button, rekordbox resumes normal playback.

*9 If the essentials pack is selected as the sampler sound source, relation between the FX buttons and the sampler slots is as follows.

The following figure shows default settings. You can change the sampler sound source for each slots.



*10 If the essentials pack is selected as the sampler sound source, relation between the FX buttons and the sampler slots is as follows.

The following figure shows default settings. You can change the sampler sound source for each slots.

