Pioneer Dj

DJM-S5

Hardware Diagram



Group	No.	Name		Function	+SHIFT						
1 DEC	CK			-							
	1	INPUT SELECTOR		Select PC or PHONO/LINE	-						
2 EFF	2 EFFECT										
	2-1	FX1/CUT1	long press	Select Serato FX mode or Scratch Cutter mode	-						
	~ 2-6	~ FX1/CUT6		mode							
	1	FX1/CUT1	SERATO FX mode	Select Serato DJ Pro FX1-1 effect*1	Turns the crossfader reverse on and off.						
			SCRATCH CUTTER mode	Select cutting pattern 1							
	2	FX2/CUT2	SERATO FX mode	Select Serato DJ Pro FX1-2 effect*1	Selects the crossfader curve set in the Utility						
			SCRATCH CUTTER mode	Select cutting pattern 2							
	3	FX3/CUT3	SERATO FX mode	Select Serato DJ Pro FX1-3 effect*1	Selects the steeply rising crossfader curve.						
			SCRATCH CUTTER mode	Select cutting pattern 3							
	4	FX1/CUT4	SERATO FX mode	Select Serato DJ Pro FX2-1 effect*1	Turns Crossfader Hot Cue on and off.						
			SCRATCH CUTTER mode	Select cutting pattern 4							
	5	FX2/CUT5	SERATO FX mode	Select Serato DJ Pro FX2-2 effect*1	Calls up Bank A of Serato DJ Pro.						
			SCRATCH CUTTER mode	Select cutting pattern 5							
	6	FX3/CUT6	SERATO FX mode	Select Serato DJ Pro FX2-3 effect*1	Calls up Bank B of Serato DJ Pro.						
			SCRATCH CUTTER mode	Select cutting pattern 6							
	7	BEAT(◀)	SERATO FX mode	FX beat down	Auto BPM						
			SCRATCH CUTTER mode	Cutting pattern beat down							
	8	BEAT(►)	SERATO FX mode	FX beat up	ТАР						
			SCRATCH CUTTER mode	Cutting pattern beat up							
	9	CH1 FX LEVER	SERATO FX mode	Selected Serato FX on	-						
			SCRATCH CUTTER mode	Selected cutting pattern on							
	10	CH2 FX LEVER	SERATO FX mode	Selected Serato FX on	-						
			SCRATCH CUTTER mode	Selected cutting pattern on							
	11	LEVEL/DEPTH	SERATO FX mode	Adjust FX parameters	-						
3 MIX	ER										
	1	1 CH FADER 2 CROSS FADER		Channel fader (Hardware control)	Channel fader start *2						
	2			Crossfader (Hardware control)	Crossfader start *2						
4 BROWSER											
	1	BROWSE	rotate	Library scroll	Fast scroll						
			push	Toggles between Library and Crate list	-						
	2	LOAD		Load Track/Instant doubles	Left: 'Toggle through Serato DJ Pro screen layout Right: Add a track in the prepare panel						

Group	No.	Name		Function	+SHIFT
5 PER					
	1	SHIFT		Shift	-
	2	MODE		Change Pad mode or select Serato FX*5	-
	3	5-8		Select PAD 5-8	Auto Loop/Beat Loop*3
	5-4	Select mode			
		PAD1+MODE	press	Hot Cue mode	Pitch Play mode
			press twice	Gate Cue mode	User Mode1
		PAD2+MODE	press	Roll mode	Slicer Loop mode
			press twice	Cue Loop mode	User Mode2
		PAD3+MODE	press	Auto Loop mode	Saved Flip mode
			press twice	Saved Loop mode	User Mode3
		PAD4+MODE	press	Sampler mode	Transport mode
			press twice	Scratch Bank mode	User Mode4
			mode		
		PERFORMANCE PADS	HOT CUE	Set Hot Cue/Start playback from the Hot Cue Point	Delete Hot Cue
			ROLL	Change loop roll size	-
			AUTO LOOP	Start Loop playback	-
			SAMPLER	Start slot playback	Stop slot playback
			PITCH PLAY	Playback starts from the Hot Cue point according to the pitch assigned to the Pad.	Select Hot Cue
			SLICER LOOP	Loop playback with a slicer section	-
			SAVED FLIP	Call up/Play Flip *4	Flip on/off *4
			TRANSPORT	Control a track	PAD 5,7 and 8 : Control tracks
			GATE CUE	Playback start from Hot Cue continues while pressing	Playback start from Hot Cue continues
			CUE LOOP	Set/call up Hot Cue, and start/stop loop playback	Set/call up Hot Cue, and start loop playback
			SAVED LOOP	Save Loop to the slot and start/stop loop playback	Start loop playback from the loop-in point
			SCRATCH BANK	Load scratch sample to a deck	Reload the last loaded track
			USER MODE	(User mapping available)	(User mapping available)

*1 When the unit is in Serato FX mode, you can change the effect assigned to the button by turning the Browse knob while holding down the button.

*2 To activate the fader start function, enable the setting in the Setting utility.

*3 You can switch beat loop / auto beat loop function in the Setting utility.

*4 Available only when Serato Flip is activated and enabled in the [SETUP] menu.

Note: Be sure to restart Serato DJ Pro once you activate Serato Flip. Otherwise some buttons may not respond.

*5 When the unit is in Scratch Cutter mode, you can change the Serato FX by pressing the FX1/CUT1, FX2/CUT2, or FX3/CUT6 button while holding down the Mode button.

© 2022 AlphaTheta Corporation All right reserved.