

# DJM-S7

## Hardware Diagram for SeratoDJ Pro



Group	No.	Name	Function	+SHIFT
<b>1,DECK</b>				
	1	AUTO LOOP	AUTO Loop On/Off *1	Active Loop On/Off
	2	LOOP 1/2X	loop off	Loop in
			loop on	—
	3	LOOP 2X	loop off	Loop Out
			loop on	—
	4	SHIFT	Shift	—
	5	PANEL	Toggle through Serato DJ Pro panel mode	—
<b>2,EFFECT</b>				
1	ECHO	BEAT FX mode	Select ECHO effect *2	Switch to BEAT FX mode
		SERATO FX mode	Select SeratoDJ FX1-1 effect *2	
		LOOP MIDI1 mode	Select Sampler slot1	
		LOOP MIDI2 mode	Select Key up	
2	BACK SPIN	BEAT FX mode	Select BACK SPIN effect *2	Switch to SERATO FX mode
		SERATO FX mode	Select SeratoDJ FX1-2 effect *2	
		LOOP MIDI1 mode	Select Sampler slot2	
		LOOP MIDI2 mode	Select Key down	
3	FLANGER	BEAT FX mode	Select FLANGER effect *2	Switch to LOOP MIDI1 mode
		SERATO FX mode	Select SeratoDJ FX1-3 effect *2	
		LOOP MIDI1 mode	Select Sampler slot3	
		LOOP MIDI2 mode	Select Censor	
4	REVERB	BEAT FX mode	Select REVERB effect *2	Switch to LOOP MIDI2 mode
		SERATO FX mode	Select SeratoDJ FX2-1 effect *2	
		LOOP MIDI1 mode	Select Hot cue1	
		LOOP MIDI2 mode	Select Hot cue1	
5	VINYL BRAKE	BEAT FX mode	Select VINYL BRAKE effect *2	Load effect BANK A
		SERATO FX mode	Select SeratoDJ FX2-2 effect *2	
		LOOP MIDI1 mode	Select Hot cue2	
		LOOP MIDI2 mode	Select Sampler slot1	
6	PHASER	BEAT FX mode	Select PHASER effect *2	Load effect BANK B
		SERATO FX mode	Select SeratoDJ FX2-3 effect *2	
		LOOP MIDI1 mode	Select Hot cue3	
		LOOP MIDI2 mode	Select DECK Mute	
7	BEAT(◀)	BEAT FX mode	Fx beat down	Adjust sub parameters
		SERATO FX mode	—	—
		LOOP MIDI1 mode	Adjust the MIDI repetition cycle	MIDI polarity inversion On
		LOOP MIDI2 mode	—	—
8	BEAT(▶)	BEAT FX mode	Fx beat up	Adjust sub parameters
		SERATO FX mode	—	—
		LOOP MIDI1 mode	Adjust the MIDI repetition cycle	MIDI polarity inversion Off
		LOOP MIDI2 mode	—	—
9	CH1 FX LEVER	BEAT FX mode	Selected BEAT FX On	—
		SERATO FX mode	Selected SERATO FX On	—
		LOOP MIDI1 mode	Selected Sampler/Hot cue play	Sampler slot stop
		LOOP MIDI2 mode	Selected Key up/Key down/Censor/Hot cue /Sampler/Mute Execute	Key reset (when Key up/Key down selected) Sampler slot stop(when sampler selected)
10	CH2 FX LEVER	LOCK ON	Selected function On(Lock)	—
		BEAT FX mode	Selected BEAT FX On	—
		SERATO FX mode	Selected SERATO FX On	—
		LOOP MIDI1 mode	Selected Sampler/Hot cue play	Sampler slot stop
11	LEVEL/DEPTH	LOOP MIDI2 mode	Selected Key up/Key down/Censor/Hot cue /Sampler/Mute Execute	Key reset (when Key up/Key down selected) Sampler slot stop(when sampler selected)
		LOCK ON	Selected function On(Lock)	—
		BEAT FX mode	Adjust FX parameters	—
		SERATO FX mode	—	—
12	TAP	LOOP MIDI1 mode	Adjust the pulse width duty ratio	—
		LOOP MIDI2 mode	—	—
			Tap	Auto Bpm

Group	No.	Name	Function	+SHIFT	
<b>3,MIXER</b>					
	1	SAMPLER VOLUME	Sampler volume	—	
	2	CH FADER	Channel fader (Hardware control)	Channel fader start *4	
	3	CROSS FADER	Crossfader (Hardware control)	Crossfader start *4	
<b>4,BROWSER</b>					
1	BROWSE	rotate	Library scroll	Fast scroll	
		push	Toggles focus between Library and Crate list	—	
2	BACK	Toggles focus between Library and Crate list	Toggle through Serato DJ Pro view mode	—	
3	LOAD	Load Track/Instant doubles	Add a track in the Prepare Panel	—	
4	CH1 Source Select	Select USB A,LINE,PHONO,USB B	—	—	
5	CH2 Source Select	Select USB A,LINE,PHONO,USB B	—	—	
<b>5,PERFORMANCE PADS</b>					
1-12	HOT CUE	press	HOT CUE mode*5	PITCH PLAY mode	
		press twice	GATE CUE mode	USER MODE1	
		press	ROLL mode*5	SLICER LOOP mode	
		press twice	CUE LOOP mode	USER MODE2	
		press	SAVED LOOP mode*5	SAVED FLIP mode	
		press twice	AUTO LOOP mode	USER MODE3	
		press	SAMPLER mode*5	SCRATCH BANK mode	
		press twice	TRANSPORT mode	USER MODE4	
		mode	HOT CUE	Set/Trigger Hot cue	Delete Hot cue
		mode	ROLL	Change loop roll size	—
		mode	SAVED LOOP	Set the Loop to the slot and loop on/off	Play the Loop of the slot
		mode	SAMPLER	Sampler slot play	Sampler slot stop/load
5-12	PERFORMANCE PAD	PITCH PLAY	Play Cue Points over variable pitch ranges	Select Hot Cue points	
		SLICER LOOP	Slicer section play	—	
		SAVED FLIP	Start Flip/Retrigger Flip *3	Flip on/off *3	
		SCRATCH BANK	Load scratch sample to DECK	Restore DECK's song to original	
		GATE CUE	Play Hot cue while pressing	Trigger Hot cue	
		CUE LOOP	Add/Play Cue Points and Auto Loop on/off	Add/Play Cue Points and Auto Loop on	
		AUTO LOOP	Trigger Auto Loop	—	
		TRANSPORT	Control DJ tracks	PAD 5,7 and 8 : Control DJ tracks	
		USER MODE	(User mappable)	(User mappable)	
		mode	HOT CUE	Start recording of Flip *3	Flip Loop on/off *3
		mode	ROLL	Halve Loop Size	—
		mode	SAVED LOOP	Halve Loop Size	Loop Shift
13	PARAMETER (◀)	SAMPLER	Select sampler bank	Select sampler output	
		PITCH PLAY	Select key range	Key shift down	
		SLICER LOOP	Select quantization	Select domain	
		SAVED FLIP	Start recording of Flip *3	Flip Loop on/off *3	
		SCRATCH BANK	Select scratch bank	Select scratch bank	
		GATE CUE	Start recording of Flip *3	Flip Loop on/off *3	
		CUE LOOP	Halve Loop Size	Loop Shift	
		AUTO LOOP	Halve Loop Size	Loop Shift	
		TRANSPORT	Key shift down	—	
		USER MODE	(User mappable)	(User mappable)	
		mode	HOT CUE	Start Flip/Retrigger Flip *3	Flip on/off *3
		mode	ROLL	Double Loop Size	—
mode	SAVED LOOP	Double Loop Size	Loop Shift		
14	PARAMETER (▶)	SAMPLER	Select sampler bank	Select sampler output	
		PITCH PLAY	Select key range	Key shift up	
		SLICER LOOP	Select quantization	Select domain	
		SAVED FLIP	Start Flip/Retrigger Flip *3	Flip on/off *3	
		SCRATCH BANK	Select scratch bank	Select scratch bank	
		GATE CUE	Start Flip/Retrigger Flip *3	Flip on/off *3	
		CUE LOOP	Halve Loop Size	Loop Shift	
		AUTO LOOP	Halve Loop Size	Loop Shift	
		TRANSPORT	Key shift up	—	
		USER MODE	(User mappable)	(User mappable)	

- \*1 You can switch beat loop / auto beat loop function using PC setting utility.
- \*2 When in BEAT FX mode or SERATO FX mode, you can change the effect assigned to the button by turning the BROWSE knob while holding down the button.
- \*3 Available only when Serato Flip is activated and enabled in the [SETUP] menu.  
If you do not restart Serato DJ Pro after activating Serato Flip for the first time, some buttons may not respond.  
Please make sure to restart Serato DJ Pro once you activate Serato Flip.
- \*4 To activate the fader start function, enable the setting in the PC setting utility.
- \*5 You can assign different PAD modes to the upper four and the lower four by pressing two PAD mode buttons at the same time.(COMBO PAD mode)  
The first mode pressed will be assigned to the upper row and the second mode pressed later will be assigned to the lower row.

**e.g. :** If you press the SAMPLER mode button while pressing the HOT CUE button, the upper row will be assigned to HOT CUE 1 to 4 and the lower row will be assigned to SAMPLER 1 to 4.

