


# How to use TRAKTOR PRO 3 effects with DJM-V10

- Please note that the software screens and their specifications, as well as the external appearance and specifications of the hardware, were still under development at the time this manual was created and may differ from the final specifications.
- Please note that the language on the screens of the software described in this manual may differ from the language on your screen.

## 1. Connect PC/Mac to USB A or B

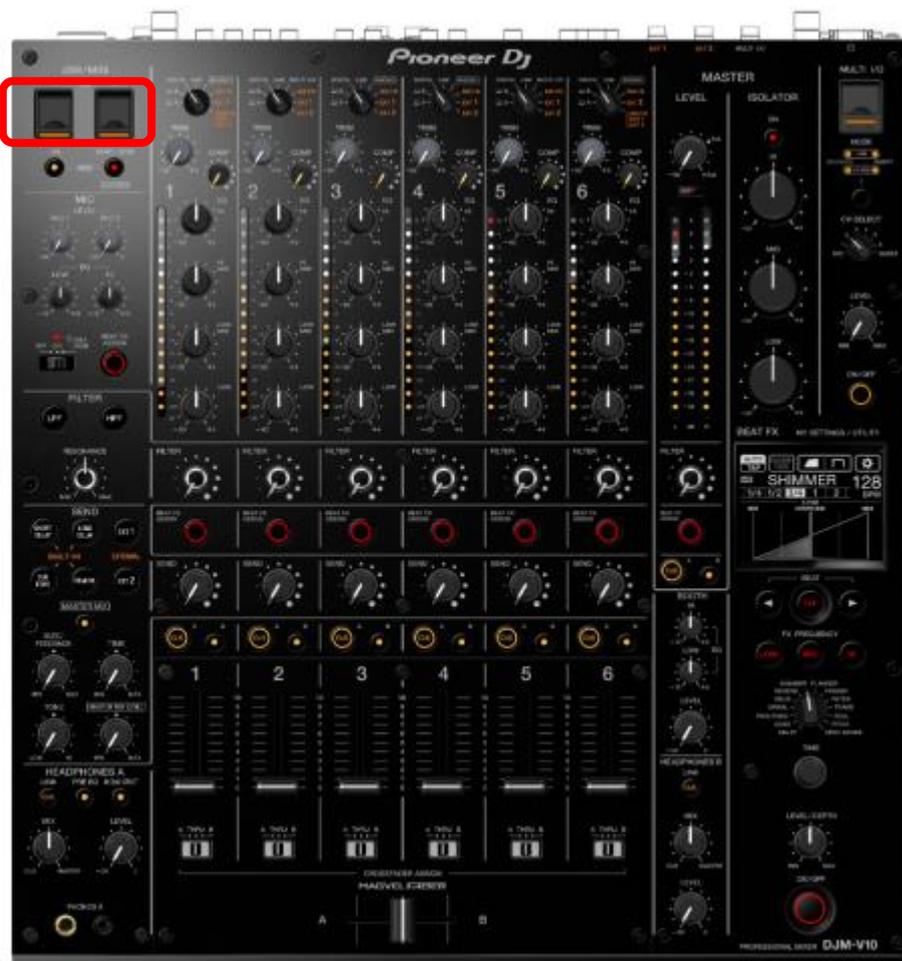

## 2. TRAKTOR PRO 3 : Audio Device setting

**Audio Setup**

- Output Routing
- Input Routing
- External Sync
- Timecode Setup
- Loading
- Transport
- Decks Layout
- Track Decks
- Remix Decks
- Mixer
- Global Settings

**Audio Setup**

Audio Device: **DJM-V10 ASIO**

Sample Rate: 48000 Hz

Buffer Size: 256

Settings


Latency : Processing 5.3 ms + Output 9.3 ms = Overall 14.6 ms

**Phono / Line**

Input Channel: not supported

### 3. DJM-V10 : Input select switch


Select [USB A] or [USB B] for FX input.

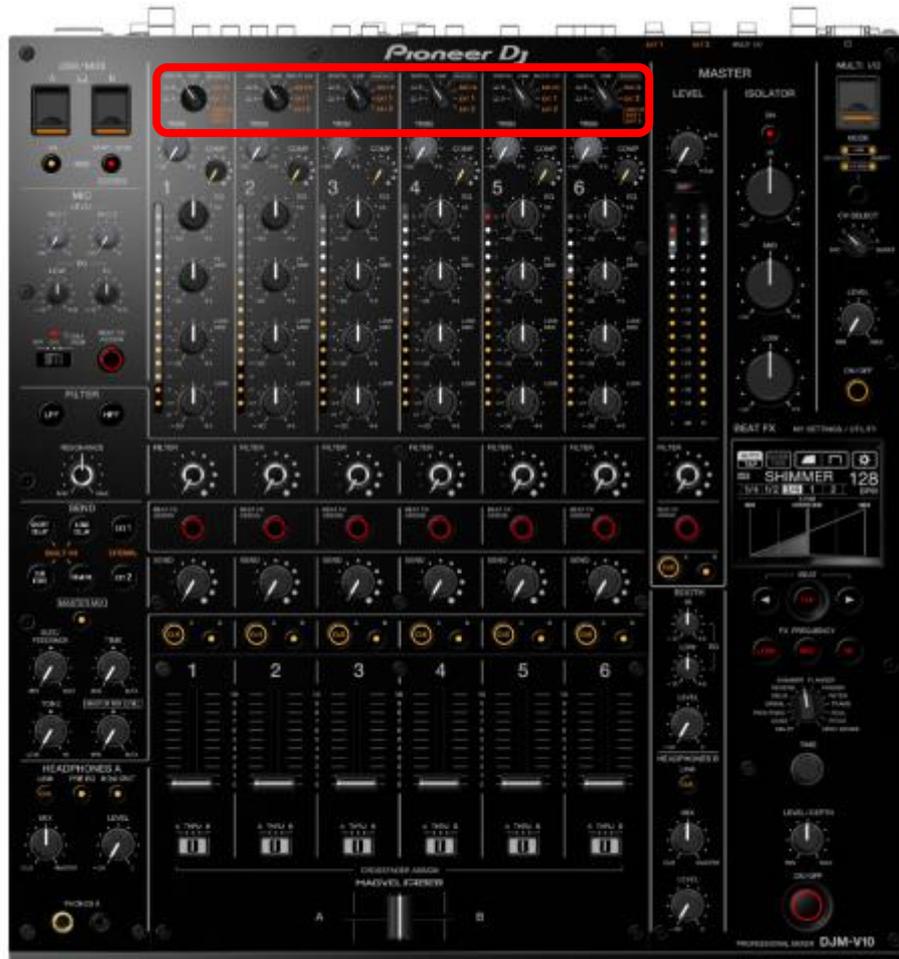

### 4. PC/Mac : Audio Utility setting

MIXER OUTPUT setting

Select [EXT1(SEND EXTERNAL)] or [EXT2(SEND EXTERNAL)].

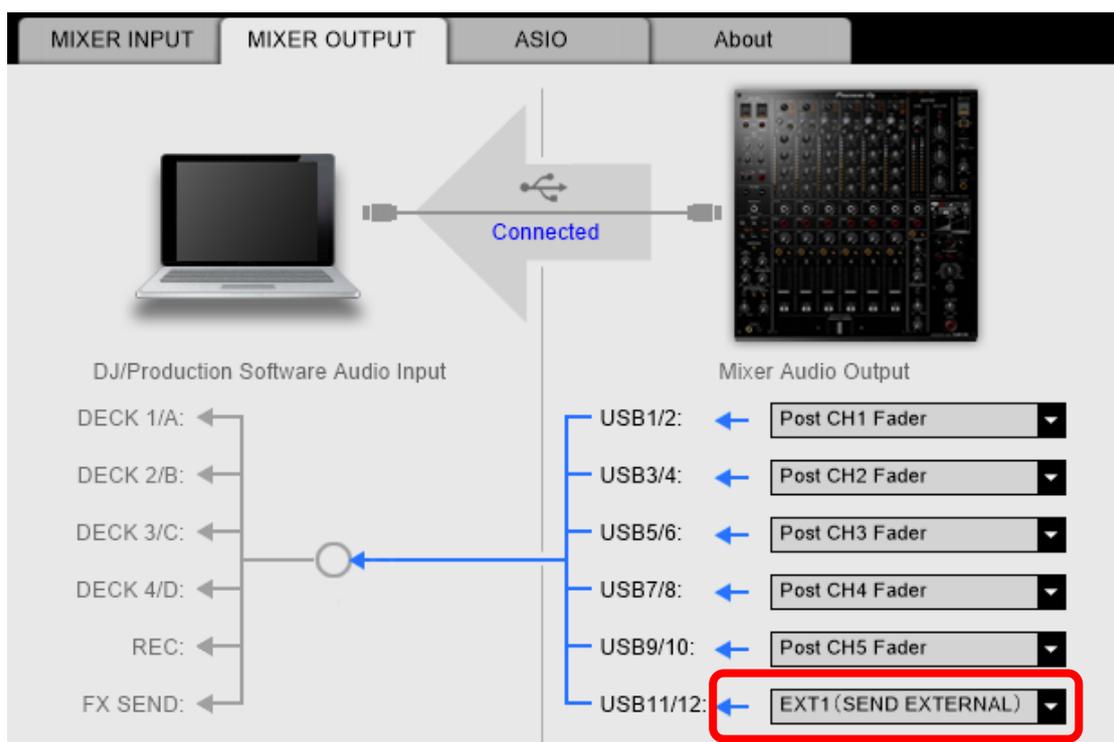

## 5. TRAKTOR PRO 3 : Input Routing setting

Input FX Send(Ext) setting

Select the same as USB number in MIXER OUTPUT setting.

The screenshot shows the 'Input Routing' settings in Traktor Pro 3. On the left is a navigation menu with 'Input Routing' selected. The main area is divided into sections for Input Deck A, B, C, and D, each with L (Mono) and R channels. At the bottom, the 'Input FX Send (Ext)' section is highlighted with a red rounded rectangle. It shows L (Mono) set to '11: DJM-V10 IN 11' and R set to '12: DJM-V10 IN 12'.

Section	L (Mono)	R
Input Deck A	1: DJM-V10 IN 1	2: DJM-V10 IN 2
Input Deck B	3: DJM-V10 IN 3	4: DJM-V10 IN 4
Input Deck C	5: DJM-V10 IN 5	6: DJM-V10 IN 6
Input Deck D	7: DJM-V10 IN 7	8: DJM-V10 IN 8
Input FX Send (Ext)	11: DJM-V10 IN 11	12: DJM-V10 IN 12

## 6. TRAKTOR PRO 3 : Output Routing setting

Mixing Mode : External

Output FX Return setting

Mixer CH1 : DJM-V10 OUT 1/2


Mixer CH2 : DJM-V10 OUT 3/4

Mixer CH3 : DJM-V10 OUT 5/6

Mixer CH4 : DJM-V10 OUT 7/8


Mixer CH5 : DJM-V10 OUT 9/10

Mixer CH6 : DJM-V10 OUT 11/12

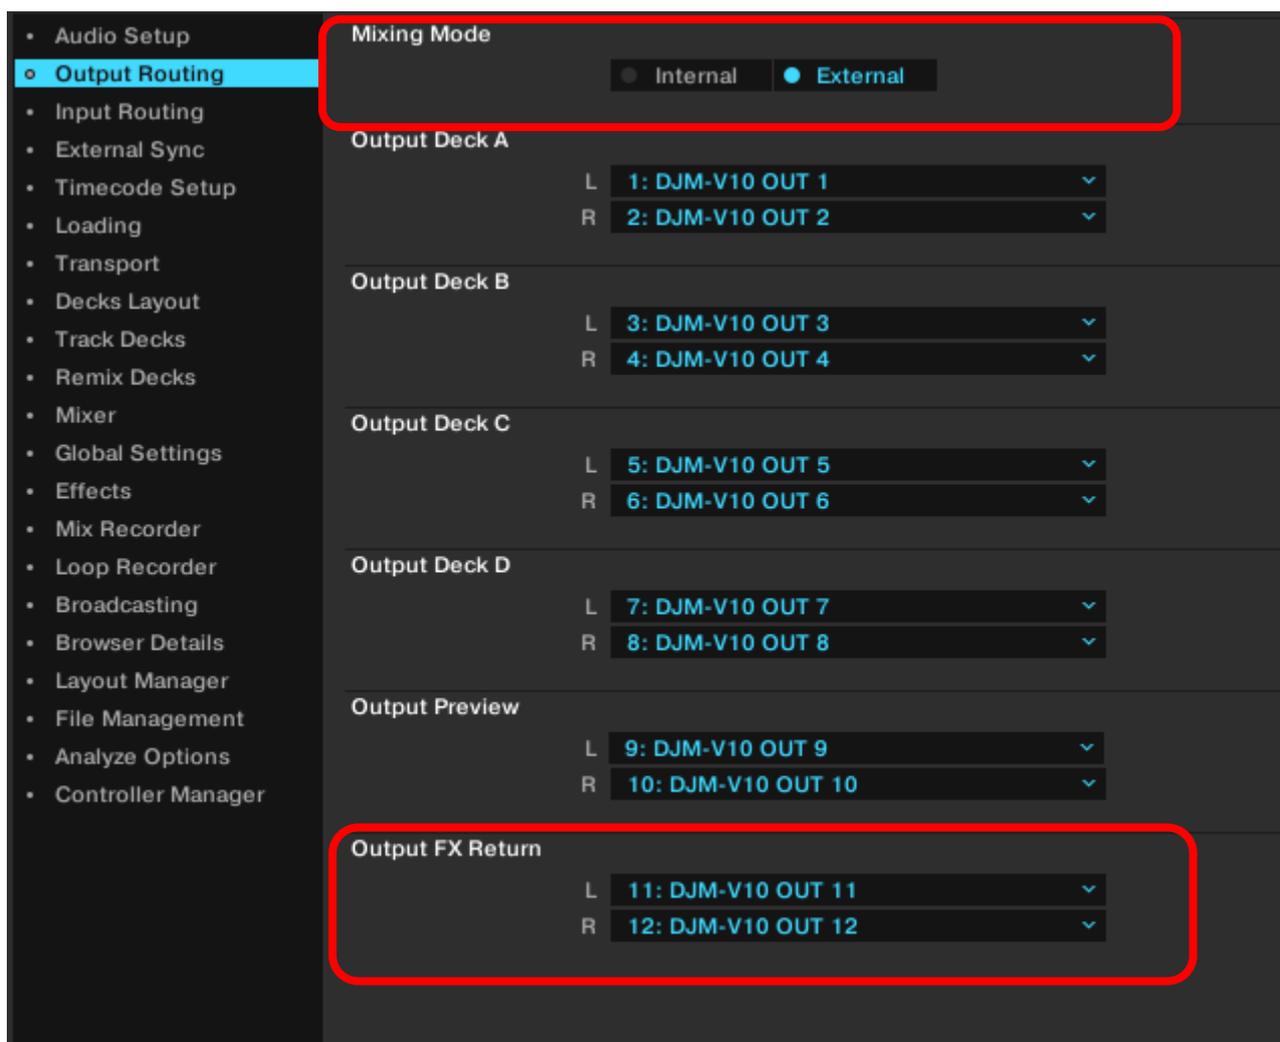

## 7. TRAKTOR PRO 3 : Effects setting


Select [Send].

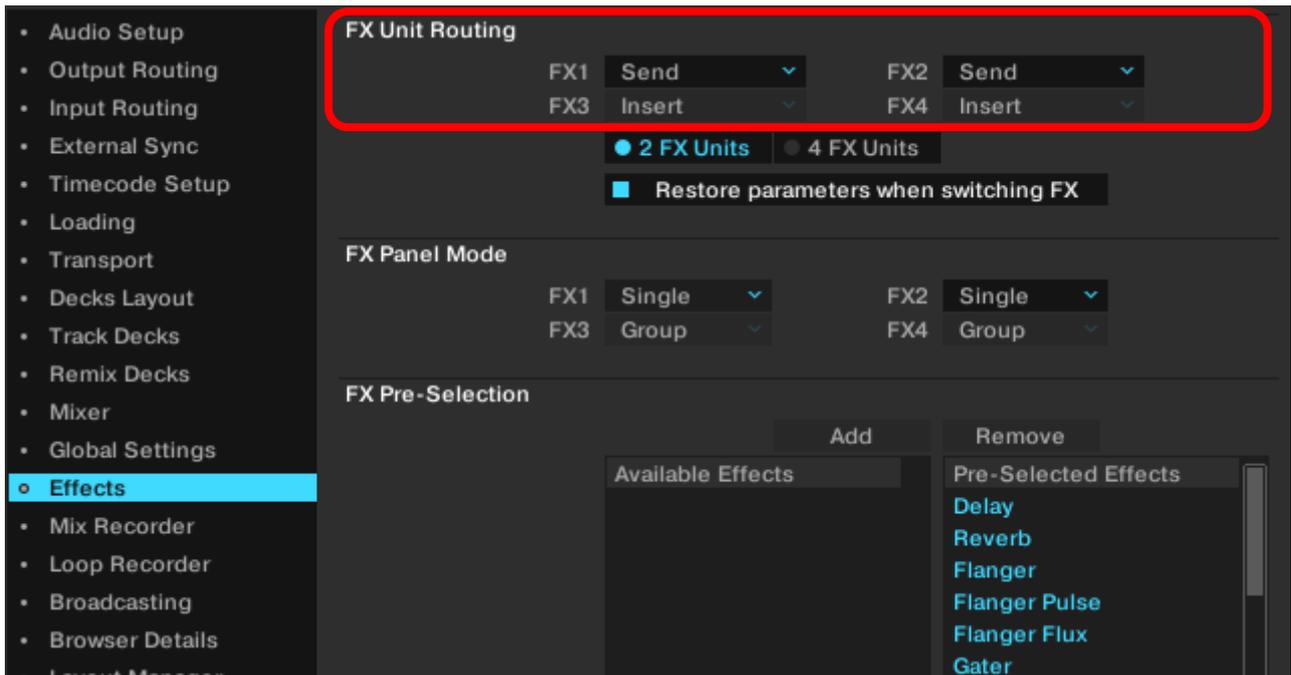

## 8. TRAKTOR PRO 3 : FX setting

FX : ON


D/W : MAX

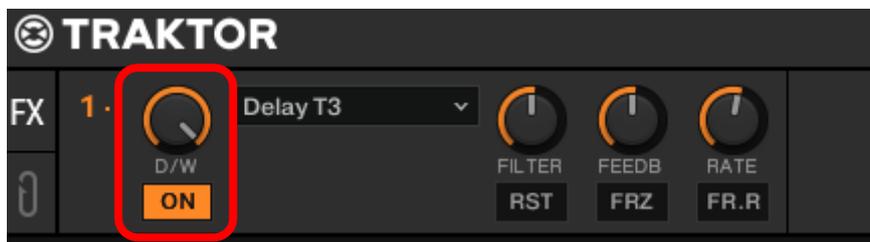

## 9. DJM-V10 : SEND setting

[EXT 1] or [EXT 2] : ON

Turn [SEND]knob.

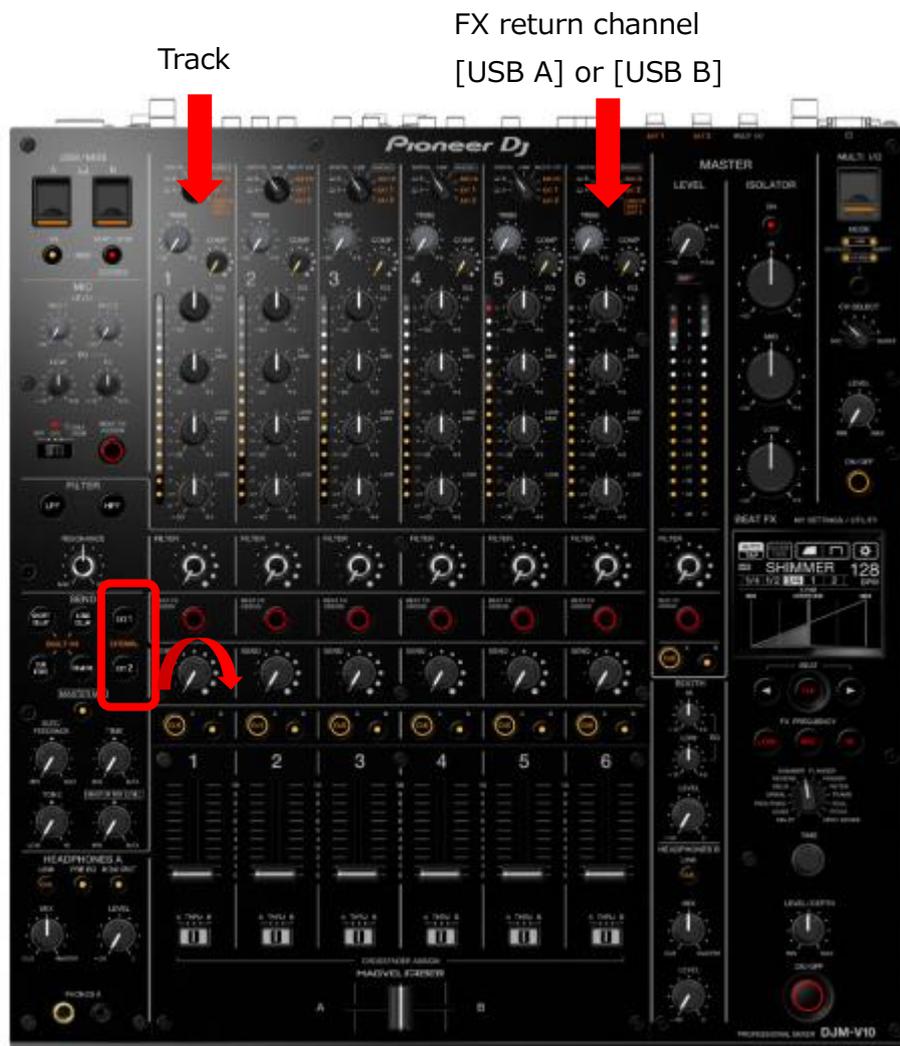

Ver 1.00

- Pioneer DJ is a trademark of the PIONEER CORPORATION and is used under license.
- TRAKTOR is the registered trademark of Native Instruments GmbH.
- Apple, Mac, Mac OS, and OS X are trademarks of Apple Inc., registered in the U.S. and other countries.
- ASIO is a trademark of Steinberg Media Technologies GmbH.
- The names of companies and products mentioned herein are trademarks or registered trademarks of their respective owners.