

# PLX-CRSS12

## Hardware Diagram for rekordbox



Group	No.	Name	Function	+ SHIFT	+ 5-8
<b>1.PERFORMANCE PADS</b>					
	1	SHFT	Shift	—	—
	2	5-8	Select Pad5-8	Instant Doubles	—
	3	HOT CUE	press Hot Cue mode	Track Separation mode	—
			press twice Pad FX1 mode	User Mode 1	—
	4	SAMPLER	press Sampler mode	Sample Scratch mode	—
			press twice Beat Jump mode	User Mode 2	—
	5	PERFORMANCE PADS			
		mode			
		Hot Cue	Pad 1 Set/Call Hot Cue A	Delete Hot Cue A	Call Memory Cue ◀
			Pad 2 Set/Call Hot Cue B	Delete Hot Cue B	Call Memory Cue ▶
			Pad 3 Set/Call Hot Cue C	Delete Hot Cue C	—
			Pad 4 Set/Call Hot Cue D	Delete Hot Cue D	—
			Pad 5 Set/Call Hot Cue E	Delete Hot Cue E	Call Memory Cue ◀
			Pad 6 Set/Call Hot Cue F	Delete Hot Cue F	Call Memory Cue ▶
			Pad 7 Set/Call Hot Cue G	Delete Hot Cue G	—
			Pad 8 Set/Call Hot Cue H	Delete Hot Cue H	—
		Track Separation	Pad 1 Mute on / off for Vocal part	—	—
			Pad 2 Mute on / off for INST part	—	—
			Pad 3 Mute on / off for Drums part	—	—
			Pad 4 Switch Mute / Solo	—	—
			Pad 5 Pad FX Bank 2 Effect A on	—	—
			Pad 6 Pad FX Bank 2 Effect B on	—	—
			Pad 7 Pad FX Bank 2 Effect C on	—	—
			Pad 8 Pad FX Bank 2 Effect D on	—	—
		Pad FX 1	Pad 1 Pad FX Bank 1 Effect A on	—	—
			Pad 2 Pad FX Bank 1 Effect B on	—	—
			Pad 3 Pad FX Bank 1 Effect B on	—	—
			Pad 4 Pad FX Bank 1 Effect D on	—	—
			Pad 5 Pad FX Bank 1 Effect E on	—	—
			Pad 6 Pad FX Bank 1 Effect F on	—	—
			Pad 7 Pad FX Bank 1 Effect G on	—	—
			Pad 8 Pad FX Bank 1 Effect H on	—	—
		User mode 1	Pad 1		
			Pad 2		
			Pad 3		
			Pad 4	Mappable by user	Mappable by user
			Pad 5		
			Pad 6		
			Pad 7		
			Pad 8		
		Sampler	Pad 1 Sampler Slot 1 playback	Sampler Slot 1 stop	Switch Sampler bank ◀
			Pad 2 Sampler Slot 2 playback	Sampler Slot 2 stop	Switch Sampler bank ▶
			Pad 3 Sampler Slot 3 playback	Sampler Slot 3 stop	—
			Pad 4 Sampler Slot 4 playback	Sampler Slot 4 stop	—
			Pad 5 Sampler Slot 5 playback	Sampler Slot 5 stop	Switch Sampler bank ◀
			Pad 6 Sampler Slot 6 playback	Sampler Slot 6 stop	Switch Sampler bank ▶
			Pad 7 Sampler Slot 7 playback	Sampler Slot 7 stop	—
			Pad 8 Sampler Slot 8 playback	Sampler Slot 8 stop	—
		Sample Scratch	Pad 1 Load Sampler Slot 1 on DECK	Unload Sample from DECK	Switch Sampler bank ◀
			Pad 2 Load Sampler Slot 2 on DECK	Unload Sample from DECK	Switch Sampler bank ▶
			Pad 3 Load Sampler Slot 3 on DECK	Unload Sample from DECK	—
			Pad 4 Load Sampler Slot 4 on DECK	Unload Sample from DECK	—
			Pad 5 Load Sampler Slot 5 on DECK	Unload Sample from DECK	Switch Sampler bank ◀
			Pad 6 Load Sampler Slot 6 on DECK	Unload Sample from DECK	Switch Sampler bank ▶
			Pad 7 Load Sampler Slot 7 on DECK	Unload Sample from DECK	—
			Pad 8 Load Sampler Slot 8 on DECK	Unload Sample from DECK	—
		Beat Jump	Pad 1 Move the playback position to the left by the beat assigned to Pad 1	—	Switch Beat Jump bank ◀
			Pad 2 Move the playback position to the right by the beat assigned to Pad 2	—	Switch Beat Jump bank ▶
			Pad 3 Move the playback position to the left by the beat assigned to Pad 3	—	Switch Beat Jump page ◀
			Pad 4 Move the playback position to the right by the beat assigned to Pad 4	—	Switch Beat Jump page ▶
			Pad 5 Move the playback position to the left by the beat assigned to Pad 5	—	Switch Beat Jump bank ◀
			Pad 6 Move the playback position to the right by the beat assigned to Pad 6	—	Switch Beat Jump bank ▶
			Pad 7 Move the playback position to the left by the beat assigned to Pad 7	—	Switch Beat Jump page ◀
			Pad 8 Move the playback position to the right by the beat assigned to Pad 8	—	Switch Beat Jump page ▶
		User mode 2	Pad 1		
			Pad 2		
			Pad 3		
			Pad 4	Mappable by user	Mappable by user
			Pad 5		
			Pad 6		
			Pad 7		
			Pad 8		