

OMNIS-DUO

Hardware Diagram for rekordbox



GROUP No.	NAME	FUNCTION	+SHIFT	GROUP No.	NAME	FUNCTION	+SHIFT			
1, DECK (DECK1~DECK4) * Functions are the same for both left and right decks.				3, MIXER (MIXER MODE: MIDI CONTROL)						
1	BEAT JUMP	BEAT JUMP	BEAT JUMP BEAT VALUE * 1	1	TRIM	Gain				
	BEAT LOOP	turn	Adjust Loop size		2	HI	EQ (High)			
		press	AUTO LOOP ON			MID	EQ (Mid)			
	3	JOG	during loop		AUTO LOOP OFF	LOW	EQ (Low)			
			top		Scratch (Vinyl On)	Search				
			side		Pitch bend (Vinyl Off)					
	4	SHIFT	Shift							
	5	CUE	Set/start playback from Cue point, Back Cue		Jump to track start					
	6	PLAY/PAUSE	Play / pause							
	7	HOT CUE A	Set/start playback from Hot Cue A point	Delete Hot Cue A	4, BROWSER	1	Rotary Selector	rotate	Browse (Select track/folder)	Zoom in/out enlarged waveform
		HOT CUE B	Set/start playback from Hot Cue B point	Delete Hot Cue B		2	LOAD	press	Move area (forward)	Move hierarchy, move area (backward)
		HOT CUE C	Set/start playback from Hot Cue C point	Delete Hot Cue C				press twice	INSTANT DOUBLES	
		HOT CUE D	Set/start playback from Hot Cue D point	Delete Hot Cue D						
		HOT CUE E	Set/start playback from Hot Cue E point	Delete Hot Cue E						
		HOT CUE F	Set/start playback from Hot Cue F point	Delete Hot Cue F						
		HOT CUE G	Set/start playback from Hot Cue G point	Delete Hot Cue G						
		HOT CUE H	Set/start playback from Hot Cue H point	Delete Hot Cue H						
	8	TEMPO	Adjust Tempo			5, OTHER				
	9	JOG MODE	Vinyl On/Off		1	MIC LEVEL	No function assigned here			
10	AUTO CUE	A.Cue On/Off		2	MIC ON	No function assigned here				
11	QUANTIZE	Quantize on/off		3	Bluetooth	No function assigned here				
12	SLIP	SLIP mode On/Off		*Number of beats: 1/8, 1/4, 1/2, 1, 2, 4, 8, 16, 32, 64, 128 beats						
13	MASTER TEMPO	Master Tempo On/Off								
14	SYNC	Sync On/Off								
15	TEMPO RANGE	Tempo Range								
16	CALL PREV	CUE/LOOP CALL, REV								
16	CALL NEXT	CUE/LOOP CALL, FWD								
16	MEMORY/DELETE	MEMORY/DELETE								
17	NEEDLE SEARCH	NEEDLE SEARCH								
18	DECK 1/3	DECK 1/3								
19	DECK 2/4	DECK 2/4								
2, EFFECT (MIXER MODE: MIDI CONTROL)										
1	BEAT	RIGHT	FX beat up	TAP						
		LEFT	FX beat down	AUTO						
2	LEVEL DEPTH	FX1 level control								
3	EFFECT ON/OFF	FX1 On/Off	Select Beat FX1							
4	COLOR	SOUND COLOR FX parameter control								
5	EFFECT SELECT	DELAY	No function assigned here							
		ECHO	No function assigned here							
		SPIRAL	No function assigned here							
		REVERB	No function assigned here							
		TRANS	No function assigned here							
		FLANGER	No function assigned here							
		PITCH	No function assigned here							
		ROLL	No function assigned here							
6	CH SELECT	MIC	No function assigned here							
		MASTER	No function assigned here							
		1CH	No function assigned here							
7	DUB ECHO	2CH	No function assigned here							
		No function assigned here								
		No function assigned here								
		No function assigned here								