



GROUP No.	NAME	FUNCTION	+SHIFT	GROUP No.	NAME	FUNCTION	+SHIFT
1, DECK (DECK1~DECK4) * 機能は左右デッキ共通です。				3, MIXER (MIXER MODE: MIDI CONTROL)			
1	BEAT JUMP	BEAT JUMP	BEAT JUMP BEAT VALUE * 1	1	TRIM	Gain	
2	BEAT LOOP	回す	LOOPサイズ調整	HI	EQ (High)		
		押す	AUTO LOOP ON	MID	EQ (Mid)		
3	JOG	天面	スクラッチ (Vinyl On)	LOW	EQ (Low)		
		側面	ピッチベンド (Vinyl Off)				Search
4	SHIFT	Shift		3	CUE (Headphone)	Headphone CUE On/Off	
5	CUE	CUE設定/再生, Back Cue	曲頭へ移動	4	HEADPHONES CUE / MASTER	No function assigned here	
6	PLAY/PAUSE	再生/一時停止		5	HEADPHONES LEVEL	No function assigned here	
7	HOT CUE A	HOT CUE A 設定/再生	HOT CUE A 削除	6	CH FADER	チャンネルフェーダー	
	HOT CUE B	HOT CUE B 設定/再生	HOT CUE B 削除	7	CROSSFADER	クロスフェーダー	
	HOT CUE C	HOT CUE C 設定/再生	HOT CUE C 削除	8	BOOTH MONITOR LEVEL	No function assigned here	
	HOT CUE D	HOT CUE D 設定/再生	HOT CUE D 削除	9	MASTER LEVEL	No function assigned here	
	HOT CUE E	HOT CUE E 設定/再生	HOT CUE E 削除	4, BROWSER			
	HOT CUE F	HOT CUE F 設定/再生	HOT CUE F 削除	1	Rotary Selector	回す Browse (Track/Folder Select)	拡大波形 Zoom In/Out
	HOT CUE G	HOT CUE G 設定/再生	HOT CUE G 削除		押す	エリア移動 (順周り)	階層移動, エリア移動 (逆周り)
	HOT CUE H	HOT CUE H 設定/再生	HOT CUE H 削除	2	LOAD	トラックのロード	
8	TEMPO	テンポ調整			2回押す	INSTANT DOUBLES	
9	JOG MODE	Vinyl On/Off		5, OTHER			
10	AUTO CUE	A.Cue On/Off		1	MIC LEVEL	No function assigned here	
11	QUANTIZE	Quantize on/off		2	MIC ON	No function assigned here	
12	SLIP	SLIP mode On/Off		3	Bluetooth	No function assigned here	
13	MASTER TEMPO	Master Tempo On/Off		* 1 対応拍数 : 1/8, 1/4, 1/2, 1, 2, 4, 8, 16, 32, 64, 128拍。			
14	SYNC	Sync On/Off					
15	TEMPO RANGE	Tempo Range					
16	CALL PREV	CUE/LOOP CALL, REV					
17	CALL NEXT	CUE/LOOP CALL, FWD					
18	MEMORY/DELETE	MEMORY/DELETE					
19	NEEDLE SEARCH	NEEDLE SEARCH					
20	DECK 1/3	Deck 1とDeck 3の切換					
21	DECK 2/4	Deck 2とDeck 4の切換					
2, EFFECT (MIXER MODE: MIDI CONTROL時)							
1	BEAT	RIGHT	FX beat up	TAP			
		LEFT	FX beat down	AUTO			
2	LEVEL DEPTH	FX1 level control					
3	EFFECT ON/OFF	FX1 On/Off	FX1 選択				
4	COLOR	SOUND COLOR FX parameter control					
5	EFFECT SELECT	DELAY	No function assigned here				
		ECHO	No function assigned here				
		SPIRAL	No function assigned here				
		REVERB	No function assigned here				
		TRANS	No function assigned here				
		FLANGER	No function assigned here				
		PITCH	No function assigned here				
		ROLL	No function assigned here				
6	CH SELECT	MIC	No function assigned here				
		MASTER	No function assigned here				
		1CH	No function assigned here				
7	DUB ECHO	2CH	No function assigned here				
		No function assigned here					
		No function assigned here					
		No function assigned here					
8	NOISE	No function assigned here					
		No function assigned here					
		No function assigned here					
9	PITCH	No function assigned here					
		No function assigned here					
10	FILTER	No function assigned here					