

# OMNIS-DUO

## Hardware Diagram for Serato DJ Lite / Serato DJ Pro



GROUP	No.	NAME	FUNCTION	+SHIFT	GROUP	No.	NAME	FUNCTION	+SHIFT	
<b>1, DECK (DECK1~DECK2) * Functions are the same for both left and right decks.</b>					<b>3, MIXER</b>					
	1	BEAT JUMP	BEAT JUMP Fwd/Back	BEAT JUMP Value select		1	TRIM	No function assigned here		
	2	BEAT LOOP	turn	Adjust Loop size			HI	High EQ (EQ Colored Waveforms only)		
			press	AUTO LOOP ON	RELOOP/EXIT		2	MID	Mid EQ (EQ Colored Waveforms only)	
	3	JOG	during loop	AUTO LOOP OFF			LOW	Low EQ (EQ Colored Waveforms only)		
			top	Scratch (Vinyl On)	Search (Platter Skip)		3	CUE (Headphone)	No function assigned here	
			side	Pitch bend (Vinyl Off)			4	HEADPHONES CUE / MASTER	No function assigned here	
	4	SHIFT	Shift			5	HEADPHONES LEVEL	No function assigned here		
	5	CUE	Set/start playback from Cue point, Back Cue	Previous Track		6	CH FADER	Channel fader (Serato Video only)		
	6	PLAY/PAUSE	Play / pause	Stutter Play		7	CROSSFADER	Crossfader (Serato Video only)		
	7	HOT CUE A	Set/start playback from Hot Cue A point	Delete Hot Cue A		8	BOOTH MONITOR LEVEL	No function assigned here		
		HOT CUE B	Set/start playback from Hot Cue B point	Delete Hot Cue B		9	MASTER LEVEL	No function assigned here		
		HOT CUE C	Set/start playback from Hot Cue C point	Delete Hot Cue C		<b>4, BROWSER</b>				
		HOT CUE D	Set/start playback from Hot Cue D point	Delete Hot Cue D		1	Rotary Selector	rotate	Library Scroll	Library Fast Scroll
		HOT CUE E	Previous Track			2	LOAD	press	Library Forward	Library Back
		HOT CUE F	Set/start playback from Hot Cue F point	Delete Hot Cue F					press twice	Load a track
		HOT CUE G	Search Rwd			<b>5, OTHER</b>				
		HOT CUE H	Set/start playback from Hot Cue G point	Delete Hot Cue G		1	MIC LEVEL	No function assigned here		
	8	TEMPO	Adjust Tempo		2	MIC ON	No function assigned here			
			Reverse			3	Bluetooth	No function assigned here		
	9	JOG MODE	Vinyl On/Off							
	10	AUTO CUE								
	11	QUANTIZE	Quantize On/Off							
	12	SLIP	SLIP mode On/Off							
	13	MASTER TEMPO	Keylock On/Off							
	14	SYNC	Sync On	Sync Off						
	15	TEMPO RANGE	Tempo Range							
	16	CALL PREV	Slot Select Previous							
	16	CALL NEXT	Slot Select Next							
	17	MEMORY/DELETE								
	17	NEEDLE SEARCH	Needle Position							
	18	DECK 1/3								
	19	DECK 2/4								
<b>2, EFFECT</b>										
	1	BEAT	RIGHT	No function assigned here						
			LEFT	No function assigned here						
	2	LEVEL DEPTH	No function assigned here							
	3	EFFECT ON/OFF	No function assigned here							
	4	COLOR	No function assigned here							

Light blue background : Serato DJ Lite Only

Yellow background : Serato DJ Pro Only

Paid license is needed to use Serato DJ Pro.