

OPUS-QUAD

Hardware Diagram for Serato DJ Pro



GROUP	No.	NAME	FUNCTION	+SHIFT	GROUP	No.	NAME	FUNCTION	+SHIFT
1, DECK * Functions are the same for both left and right decks.					2, EFFECT				
1	JOG	top	Scratch (Vinyl On)	Search(Platter Skip)					
		side	Pitch bend (Vinyl Off)						
2	TEMPO		Pitch bend						
3	TEMPO RESET		Adjust Tempo	Tempo Ignore					
4	TEMPO RANGE		Tempo Reset						
5	MASTER TEMPO		Tempo Range Increase	Tempo Range Decrease					
6	KEY SYNC		Tempo Range Decrease						
7	JOG ADJUST		Keylock On/Off	Tempo Ignore					
8	BEAT SYNC		Key Sync On	Key Sync Off					
9	MASTER		Jog Adjust						
10	JOG MODE		Tempo Sync / Resync	Tempo Sync OFF					
11	VINYL SPEED ADJUST		Sync OFF						
12	DECK SELECT		Vinyl On/Off						
13	TRACK SEARCH		Vinyl Speed Adjust						
14	DECK QUANTIZE		Select a deck						
15	HOT CUE A		Prev. / Next Track						
16	HOT CUE B		Quantize (Global)						
17	HOT CUE C		Set/start playback from Hot Cue point1	Delete Hot Cue1					
18	HOT CUE D		Set/start playback from Hot Cue point2	Delete Hot Cue2					
19	HOT CUE E		Set/start playback from Hot Cue point3	Delete Hot Cue3					
20	HOT CUE F		Set/start playback from Hot Cue point4	Delete Hot Cue4					
21	HOT CUE G		Set/start playback from Hot Cue point5	Delete Hot Cue5					
22	HOT CUE H		Set/start playback from Hot Cue point6	Delete Hot Cue6					
23	SHIFT		Set/start playback from Hot Cue point7	Delete Hot Cue7					
			Set/start playback from Hot Cue point8	Delete Hot Cue8					
24	BEAT LOOP	turn	Shift						
		During loop	Loop Size Select						
		press	Loop Size Select (Half/Double)						
		During loop	Active Loop Toggle	Reloop					
			Deactivate Loop						
25	LOOP IN		Loop in	Loop in adjust					
26	LOOP OUT		Loop out	Loop out adjust					
27	BEAT JUMP		Beat Jump Fwd/Back	Beat Jump Value select					
28	SLIP REVERSE		Censor	Reverse					
29	CUE		Set/start playback from Cue point, Back Cue						
30	PLAY/PAUSE		Play / pause	Stutter Play					
					3, MIXER				
					4, BROWSER				
					1	CROSS FADER	CROSSFADER(Serato Video only)	CROSSFADER START	
					2	CH FADER	CHANNEL FADER(Serato Video only)	CHANNEL FADER START	
					3	CH CUE(Headphone)	Headphone monitor On/Off	Deck Tap Tempo	
					4	EQ HIGH	High EQ (EQ Colored Waveforms only)		
					5	EQ MID	Mid EQ (EQ Colored Waveforms only)		
					6	EQ LOW	Low EQ (EQ Colored Waveforms only)		
					1	Smart Rotary Selector	rotate	Library Scroll	Fast Library Scroll
							press	Library Forward	
							tilt up		
							tilt down		
							tilt left		
							tilt right		
					2	BACK		Library Back	
					3	TAG TRACK/REMOVE		Load to Prepare	
					4	LOAD		Load a track	
							press twice	Instant Doubles	
					5	NEEDLE SEARCH		Needle Drop	