

XDJ-AZ

Hardware Diagram for rekordbox



GROUP	No.	NAME	FUNCTION	+SHIFT
1. DECK				
1	1	JOG	Scratch (Vinyl On)	Search
			Pitch bend (Vinyl Off)	
	2		Pitch bend	
		TEMPO	Adjust Tempo	
	3	TEMPO RESET	Tempo Reset	
	4	MASTER TEMPO	Master Tempo On/Off	
	5	TEMPO RANGE	Tempo Range	
	6	KEY SYNC	Key Sync On/Off	
	7	SYNC	Sync On/Off	
			INSTANT DOUBLES	
	8	MASTER	Master	
		JOG MODE	Vinyl On/Off	
	9	DECK SELECT	DECK Select	
	10	VINYL SPEED ADJUST ON/OFF	No function assigned here	
	11	SEARCH	SEARCH(20x Speed)	
	12	TRACK SEARCH	PREV / NEXT TRACK	
	13	SHIFT	Shift	
	14	SLIP REVERSE	SLIP Reverse	Reverse
	15	SLIP	SLIP mode On/Off	
	16	BEAT JUMP	BEAT JUMP	BEAT JUMP BEAT BALUE *1
	17	4 BEAT	4 BEAT Loop	
			Loop Size Select (Half)	
	18	8 BEAT	8 BEAT Loop	
			Loop Size Select (Double)	
	19	LOOP IN	Loop in / Loop in adjust	
			4 BEAT Loop	
	20	LOOP OUT	Loop out / Loop out adjust	
RELOOP/EXIT		Reloop/Exit		
21	CALL NEXT / 2X	CUE/LOOP CALL, FWD		
		Loop Size Select (Double)		
22	CALL PREV / 1/2X	CUE/LOOP CALL, REV		
		Loop Size Select (Half)		
23	DELETE	DELETE		
24	MEMORY	MEMORY		
25	PLAY/PAUSE	Play/Pause		
26	CUE	Set/Start playback from CUE , BackCue		
27	DECK QUANTIZE	Deck Quantize on/off		
2	EFFECT	LOAD	Load a track	
			INSTANT DOUBLES	
3	NEEDLE SEARCH	NEEDLE SEARCH		
2. EFFECT				
3. MIXER				
4. BROWSER *2				
4	1	Rotary Selector	Browse(Track/Folder Select)	Enlarged waveform zoom in/out
	2		Move area (forward)	Switch list view
		BACK	Move hierarchy, move area (backward)	
	3	TAG TRACK/REMOVE	Set/Delete to Tag List	Switch display of Related Tracks
	4	TRACK FILTER	TRACK FILTER OPEN/CLOSE	
5.PERFORMANCE PADS				
5	1	HOT CUE	HOT CUE	KEY BOARD
	2	BEAT LOOP	BEAT LOOP	STEMS
	3	SLIP LOOP	PAD FX	KEY SHIFT
	4	BEAT JUMP	BEAT JUMP	SAMPLER

*1 Number of beats: 1/8, 1/4, 1/2, 1, 2, 4, 8, 16, 32, 64, 128 beats
*2 When the PC CONTROL screen is displayed

Notes

The LED on/off state may not match the GUI.
The MIXER section contains buttons and knobs for controlling the hardware.

GROUP	No.	NAME	FUNCTION	+SHIFT
5. PERFORMANCE PADS				
5	PERFORMANCE PAD A	mode		
		HOT CUE	Set/play HOT CUE A	Delete HOT CUE A
		BEAT LOOP	1/4 BEAT LOOP	
		PAD FX	PAD FX	No function assigned here
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	VOCAL ON/OFF(MUTE)	
		KEY SHIFT	KEY SHIFT	No function assigned here
		SAMPLER	Play SAMPLER slot1	Stop SAMPLER slot1
	PERFORMANCE PAD B	mode		
		HOT CUE	Set/play HOT CUE B	Delete HOT CUE B
		BEAT LOOP	1/2 BEAT LOOP	
		PAD FX	PAD FX	No function assigned here
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	INST ON/OFF(MUTE)	
		KEY SHIFT	KEY SHIFT	No function assigned here
6	PERFORMANCE PAD C	mode		
		HOT CUE	Set/play HOT CUE C	Delete HOT CUE C
		BEAT LOOP	1 BEAT LOOP	
		PAD FX	PAD FX	No function assigned here
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	DRUMS ON/OFF(MUTE)	
		KEY SHIFT	KEY SHIFT	No function assigned here
		SAMPLER	Play SAMPLER slot3	Stop SAMPLER slot3
	PERFORMANCE PAD D	mode		
		HOT CUE	Set/play HOT CUE D	Delete HOT CUE D
		BEAT LOOP	2 BEAT LOOP	
		PAD FX	PAD FX	No function assigned here
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	MUTE/SOLO	
		KEY SHIFT	KEY SHIFT	No function assigned here
7	PERFORMANCE PAD E	mode		
		HOT CUE	Set/play HOT CUE E	Delete HOT CUE E
		BEAT LOOP	4 BEAT LOOP	
		PAD FX	PAD FX	PAD FX BANK1
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	PAD FX2-1(Default: SLIP LOOP1/16)	No function assigned here
		KEY SHIFT	KEY SHIFT	No function assigned here
		SAMPLER	Play SAMPLER slot5	Stop SAMPLER slot5
	PERFORMANCE PAD F	mode		
		HOT CUE	Set/play HOT CUE F	Delete HOT CUE F
		BEAT LOOP	8 BEAT LOOP	
		PAD FX	PAD FX	PAD FX BANK2
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	PAD FX2-2(Default: SLIP LOOP1/8)	No function assigned here
		KEY SHIFT	KEY SHIFT	No function assigned here
8	PERFORMANCE PAD G	mode		
		HOT CUE	Set/play HOT CUE G	Delete HOT CUE G
		BEAT LOOP	16 BEAT LOOP	
		PAD FX	PAD FX	PAD FX Page1
		BEAT JUMP	BEAT JUMP	BEAT JUMP Previous Page
		KEYBOARD	Select HOT CUE /KEY SHIFT	KEYBOARD Previous Page
		STEMS	PAD FX2-3(Default: SLIP LOOP1/4)	No function assigned here
		KEY SHIFT	KEY SHIFT	KEY SHIFT Previous Page
		SAMPLER	Play SAMPLER slot7	Stop SAMPLER slot7
	PERFORMANCE PAD H	mode		
		HOT CUE	Set/play HOT CUE H	Delete HOT CUE H
		BEAT LOOP	32 BEAT LOOP	
		PAD FX	PAD FX	PAD FX Page2
		BEAT JUMP	BEAT JUMP	BEAT JUMP Next Page
		KEYBOARD	Select HOT CUE /KEY SHIFT	KEYBOARD Next Page
		STEMS	PAD FX2-4(Default: SLIP LOOP1/2)	No function assigned here
		KEY SHIFT	KEY SHIFT	KEY SHIFT Next Page
9	PERFORMANCE PAD I	mode		
		HOT CUE	Set/play HOT CUE I	Delete HOT CUE I
		BEAT LOOP	1 BEAT LOOP	
		PAD FX	PAD FX	PAD FX BANK1
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	PAD FX2-1(Default: SLIP LOOP1/16)	No function assigned here
		KEY SHIFT	KEY SHIFT	No function assigned here
		SAMPLER	Play SAMPLER slot5	Stop SAMPLER slot5
	PERFORMANCE PAD J	mode		
		HOT CUE	Set/play HOT CUE J	Delete HOT CUE J
		BEAT LOOP	4 BEAT LOOP	
		PAD FX	PAD FX	PAD FX BANK1
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	PAD FX2-1(Default: SLIP LOOP1/16)	No function assigned here
		KEY SHIFT	KEY SHIFT	No function assigned here
10	PERFORMANCE PAD K	mode		
		HOT CUE	Set/play HOT CUE K	Delete HOT CUE K
		BEAT LOOP	1 BEAT LOOP	
		PAD FX	PAD FX	PAD FX BANK1
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	PAD FX2-1(Default: SLIP LOOP1/16)	No function assigned here
		KEY SHIFT	KEY SHIFT	No function assigned here
		SAMPLER	Play SAMPLER slot5	Stop SAMPLER slot5
	PERFORMANCE PAD L	mode		
		HOT CUE	Set/play HOT CUE L	Delete HOT CUE L
		BEAT LOOP	1 BEAT LOOP	
		PAD FX	PAD FX	PAD FX BANK1
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	PAD FX2-1(Default: SLIP LOOP1/16)	No function assigned here
		KEY SHIFT	KEY SHIFT	No function assigned here
11	PERFORMANCE PAD M	mode		
		HOT CUE	Set/play HOT CUE M	Delete HOT CUE M
		BEAT LOOP	1 BEAT LOOP	
		PAD FX	PAD FX	PAD FX BANK1
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	PAD FX2-1(Default: SLIP LOOP1/16)	No function assigned here
		KEY SHIFT	KEY SHIFT	No function assigned here
		SAMPLER	Play SAMPLER slot5	Stop SAMPLER slot5
	PERFORMANCE PAD N	mode		
		HOT CUE	Set/play HOT CUE N	Delete HOT CUE N
		BEAT LOOP	1 BEAT LOOP	
		PAD FX	PAD FX	PAD FX BANK1
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	PAD FX2-1(Default: SLIP LOOP1/16)	No function assigned here
		KEY SHIFT	KEY SHIFT	No function assigned here
12	PERFORMANCE PAD O	mode		
		HOT CUE	Set/play HOT CUE O	Delete HOT CUE O
		BEAT LOOP	1 BEAT LOOP	
		PAD FX	PAD FX	PAD FX BANK1
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	PAD FX2-1(Default: SLIP LOOP1/16)	No function assigned here
		KEY SHIFT	KEY SHIFT	No function assigned here
		SAMPLER	Play SAMPLER slot5	Stop SAMPLER slot5
	PERFORMANCE PAD P	mode		
		HOT CUE	Set/play HOT CUE P	Delete HOT CUE P
		BEAT LOOP	1 BEAT LOOP	
		PAD FX	PAD FX	PAD FX BANK1
		BEAT JUMP	BEAT JUMP	No function assigned here
		KEYBOARD	Select HOT CUE /KEY SHIFT	Delete HOT CUE
		STEMS	PAD FX2-1(Default: SLIP LOOP1/16)	No function assigned here
		KEY SHIFT	KEY SHIFT	No function assigned here