

XDJ-AZ

Hardware Diagram for rekordbox



GROUP	No.	NAME	FUNCTION	+SHIFT
1. DECK				
1	JOG	天盤 回転	スクラッチ (Vinyl On) ビッチベンド (Vinyl Off)	Search
2	TEMPO		テンポ調整	
3	TEMPO RESET		テンポリセット	
4	MASTER TEMPO		Master Tempo On/Off	
5	TEMPO RANGE		Tempo Range	
6	KEY SYNC		Key Sync On/Off	
7	SYNC	長押し	Sync On/Off	
8	MASTER		INSTANT DOUBLES	
9	JOG MODE		Master	
10	DECK SELECT		Vinyl On/Off	
11	VINYL SPEED ADJUST ON/OFF		DECK切替	
12	SEARCH		No function assigned here	
13	TRACK SEARCH		SEARCH(20倍速)	
14	SHIFT		PREV / NEXT TRACK	
15	SLIP REVERSE		Slip Reverse	Reverse
16	SLIP		Slip mode On/Off	
17	BEAT JUMP		BEAT JUMP	BEAT JUMP BEAT BALLUE *1
18	4 BEAT		4 BEAT Loop	
19	8 BEAT	ループ再生中	Loop Size Select (Half)	
20	LOOP IN	ループ再生中	Loop Size Select (Double)	
21	LOOP OUT	長押し	Loop in / Loop in adjust	
22	RELOOP/EXIT		4 BEAT Loop	
23	CALL NEXT / 2X	ループ再生中	Loop out / Loop out adjust	
24	CALL PREV / 1/2X	ループ再生中	Reloop/Exit	
25	DELETE		CUELOOP CALL, FWD	
26	MEMORY		Loop Size Select (Double)	
27	PLAY/PAUSE		CUELOOP CALL, REV	
28	CUE		Loop Size Select (Half)	
29	DECK QUANTIZE		DELETE	
30	LOAD		MEMORY	
31	NEEDLE SEARCH	2回押し	再生/一時停止	
32			Cue設定/再生, BackCue	
33			Deck Quantize on/off	
34			トラックのロード	
35			INSTANT DOUBLES	
36			NEEDLE SEARCH	

*1 対応拍数: 1/8, 1/4, 1/2, 1, 2, 4, 8, 16, 32, 64, 128拍。
*2 PC CONTROL画面表示時。

注意事項
LEDの点灯/消灯状態はGUIと一致しない場合がある。
MIXERセクション内はハードウェア制御用の操作子。

GROUP	No.	NAME	FUNCTION	+SHIFT
5. PERFORMANCE PADS				
5	PERFORMANCE PAD A	HOT CUE	HOT CUE A設定/再生	Delete HOT CUE A
		BETAT LOOP	1/4 BEAT LOOP	
		PAD FX	PAD FX	No function assigned here
		BEAT JUMP	BEAT JUMP	No function assigned here
	PERFORMANCE PAD B	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		STEMS	VOCAL ON/OFF(MUTE)	
		KEY SHIFT	KEY SHIFT	No function assigned here
		SAMPLER	SAMPLER slot1再生	SAMPLER slot1停止
	PERFORMANCE PAD C	HOT CUE	HOT CUE B設定/再生	Delete HOT CUE B
		BETAT LOOP	1/2 BEAT LOOP	
		PAD FX	PAD FX	No function assigned here
		BEAT JUMP	BEAT JUMP	No function assigned here
PERFORMANCE PAD D	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE	
	STEMS	INST ON/OFF(MUTE)		
	KEY SHIFT	KEY SHIFT	No function assigned here	
	SAMPLER	SAMPLER slot2再生	SAMPLER slot2停止	
PERFORMANCE PAD E	HOT CUE	HOT CUE C設定/再生	Delete HOT CUE C	
	BETAT LOOP	1 BEAT LOOP		
	PAD FX	PAD FX	No function assigned here	
	BEAT JUMP	BEAT JUMP	No function assigned here	
PERFORMANCE PAD F	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE	
	STEMS	DRUMS ON/OFF(MUTE)		
	KEY SHIFT	KEY SHIFT	No function assigned here	
	SAMPLER	SAMPLER slot3再生	SAMPLER slot3停止	
PERFORMANCE PAD G	HOT CUE	HOT CUE D設定/再生	Delete HOT CUE D	
	BETAT LOOP	2 BEAT LOOP		
	PAD FX	PAD FX	No function assigned here	
	BEAT JUMP	BEAT JUMP	No function assigned here	
PERFORMANCE PAD H	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE	
	STEMS	MUTE/SOLO		
	KEY SHIFT	KEY SHIFT	No function assigned here	
	SAMPLER	SAMPLER slot4再生	SAMPLER slot4停止	
PERFORMANCE PAD I	HOT CUE	HOT CUE E設定/再生	Delete HOT CUE E	
	BETAT LOOP	4 BEAT LOOP		
	PAD FX	PAD FX	PAD FX BANK1	
	BEAT JUMP	BEAT JUMP	No function assigned here	
PERFORMANCE PAD J	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE	
	STEMS	PAD FX2-1(DEFULT: SLIP LOOP1/16)	No function assigned here	
	KEY SHIFT	KEY SHIFT	No function assigned here	
	SAMPLER	SAMPLER slot5再生	SAMPLER slot5停止	
PERFORMANCE PAD K	HOT CUE	HOT CUE F設定/再生	Delete HOT CUE F	
	BETAT LOOP	8 BEAT LOOP		
	PAD FX	PAD FX	PAD FX BANK2	
	BEAT JUMP	BEAT JUMP	No function assigned here	
PERFORMANCE PAD L	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE	
	STEMS	PAD FX2-2(DEFULT: SLIP LOOP1/8)	No function assigned here	
	KEY SHIFT	KEY SHIFT	No function assigned here	
	SAMPLER	SAMPLER slot6再生	SAMPLER slot6停止	
PERFORMANCE PAD M	HOT CUE	HOT CUE G設定/再生	Delete HOT CUE G	
	BETAT LOOP	16 BEAT LOOP		
	PAD FX1	PAD FX	PAD FX Page1	
	BEAT JUMP	BEAT JUMP	BEAT JUMP Previous Page	
PERFORMANCE PAD N	KEYBOARD	HOT CUE選択/KEY SHIFT	KEYBOARD Previous Page	
	STEMS	PAD FX2-3(DEFULT: SLIP LOOP1/4)	No function assigned here	
	KEY SHIFT	KEY SHIFT	KEY SHIFT Previous Page	
	SAMPLER	SAMPLER slot7再生	SAMPLER slot7停止	
PERFORMANCE PAD O	HOT CUE	HOT CUE H設定/再生	Delete HOT CUE H	
	BETAT LOOP	32 BEAT LOOP		
	PAD FX	PAD FX	PAD FX Page2	
	BEAT JUMP	BEAT JUMP	BEAT JUMP Next Page	
PERFORMANCE PAD P	KEYBOARD	HOT CUE選択/KEY SHIFT	KEYBOARD Next Page	
	STEMS	PAD FX2-4(DEFULT: SLIP LOOP1/2)	No function assigned here	
	KEY SHIFT	KEY SHIFT	KEY SHIFT Next Page	
	SAMPLER	SAMPLER slot8再生	SAMPLER slot8停止	